


2012 - Mazda6 - Body and Accessories

CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION](#).)
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION](#).)
 - c. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION](#).)
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION](#).)
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION](#).)
 - f. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION](#).)
 - g. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\]](#).) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\]](#).)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

CAUTION:

- When installing the car-navigation unit, make sure that the wiring harness and antenna feeder are not caught between the unit and dashboard. If the wiring harness or the antenna feeder is caught between the unit and dashboard, it may cause malfunctions.

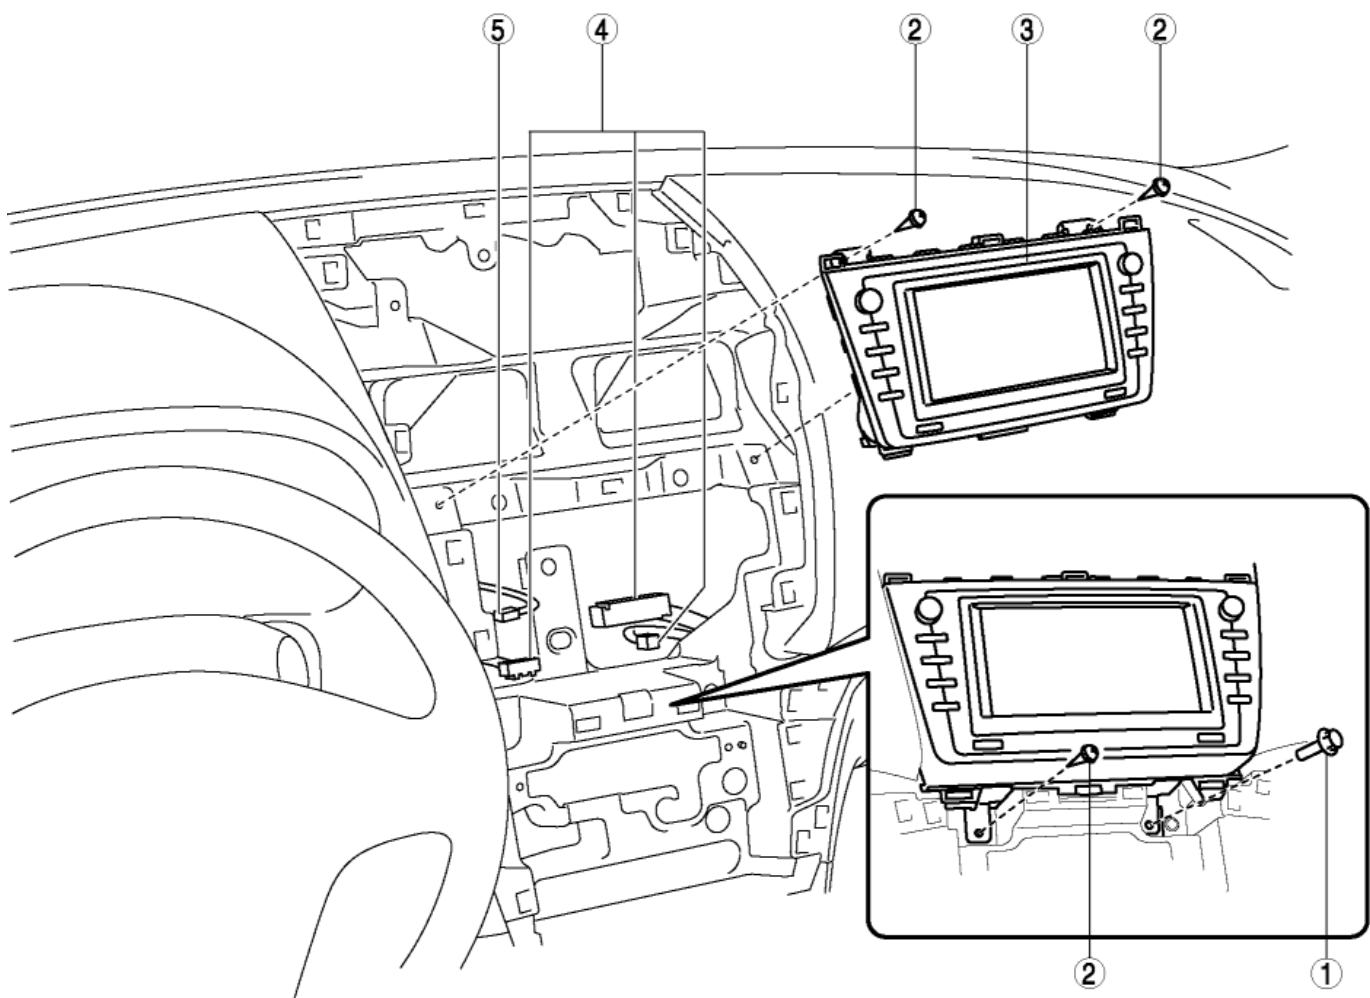


6.9—9.8 N·m
 {71—99 kgf·cm,
 62—86 in·lbf}

1	Bolt
2	Screw
3	Car-navigation unit (See Car-navigation unit Removal Note.)
4	Connector
5	Antenna feeder

Car-navigation unit Removal Note

1. Pull the car-navigation unit outward, detach tab, clip from the dashboard, and then remove the car-navigation unit.

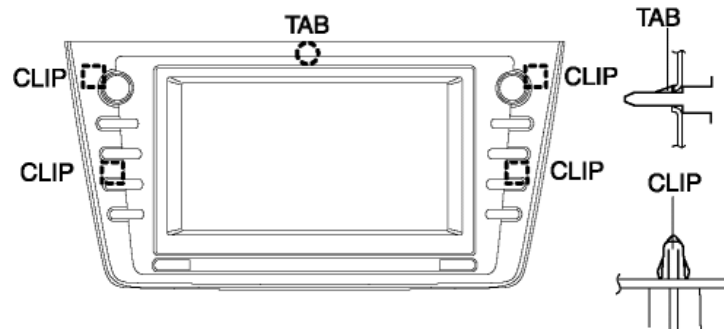

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)


2012 - Mazda6 - Body and Accessories

CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION](#).)
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION](#).)
 - c. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION](#).)
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION](#).)
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION](#).)
 - f. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION](#).)
 - g. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\]](#).) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\]](#).)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.

CAUTION:

- When installing the car-navigation unit, make sure that the wiring harness and antenna feeder are not caught between the unit and dashboard. If the wiring harness or the antenna feeder is caught between the unit and dashboard, it may cause malfunctions.

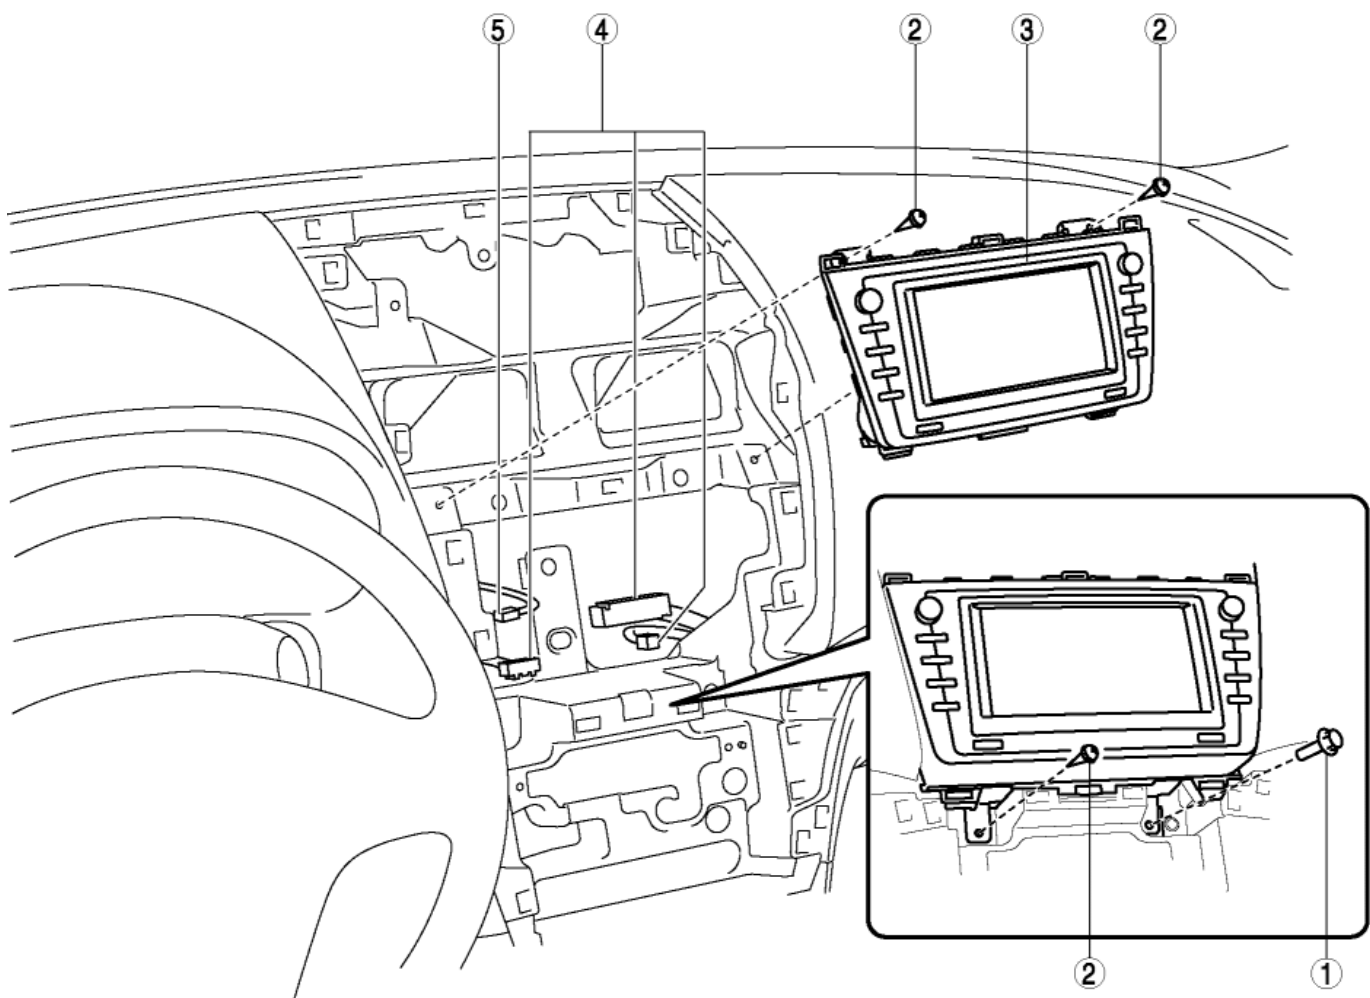


6.9—9.8 N·m
 {71—99 kgf·cm,
 62—86 in·lbf}

1	Bolt
2	Screw
3	Car-navigation unit (See Car-navigation unit Removal Note.)
4	Connector
5	Antenna feeder

Car-navigation unit Removal Note

1. Pull the car-navigation unit outward, detach tab, clip from the dashboard, and then remove the car-navigation unit.

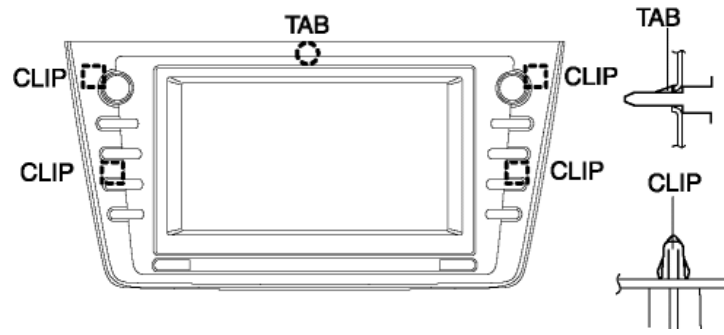

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)