


2012 - Mazda6 - Body and Accessories


FRONT DOOR SPEAKER REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION.](#))
3. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION.](#))
4. Remove in the order indicated in the table.

With Bose®

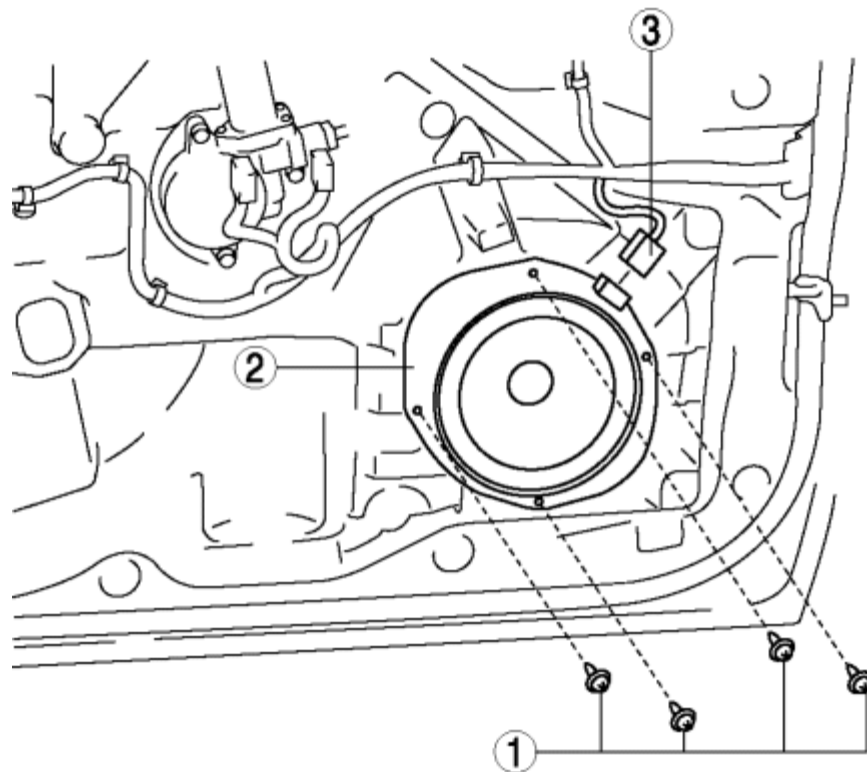

Without Bose®

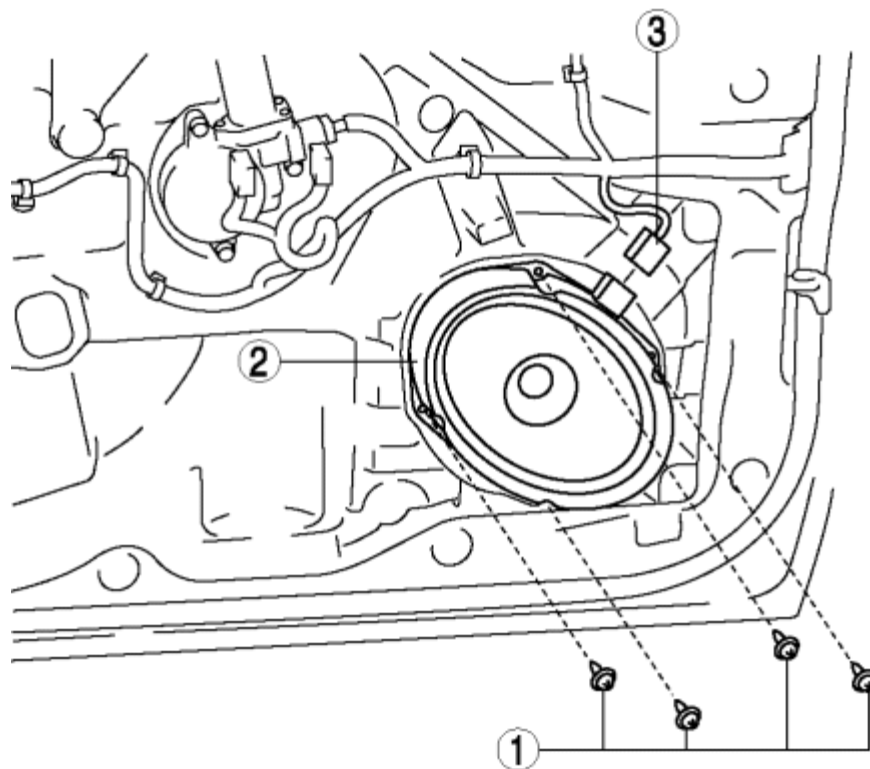


1	Screw
2	Front door speaker (See Front Door Speaker Removal Note.)
3	Connector

5. Install in the reverse order of removal.


Front Door Speaker Removal Note

1. Remove the front door speaker in the direction of the arrow shown in the figure.

With Bose®

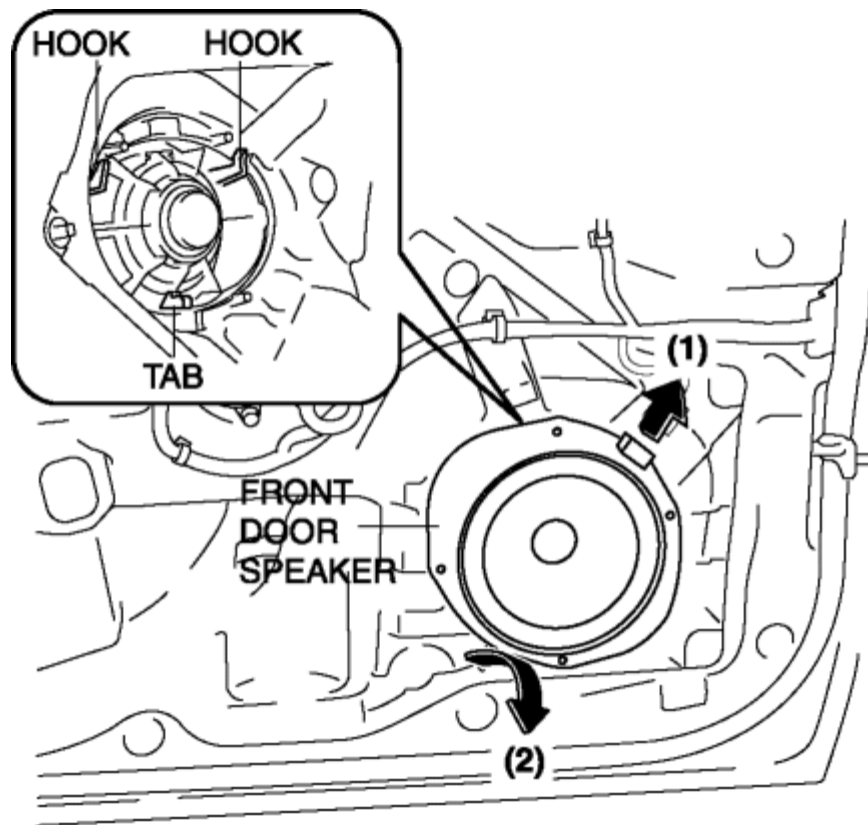

Without Bose®

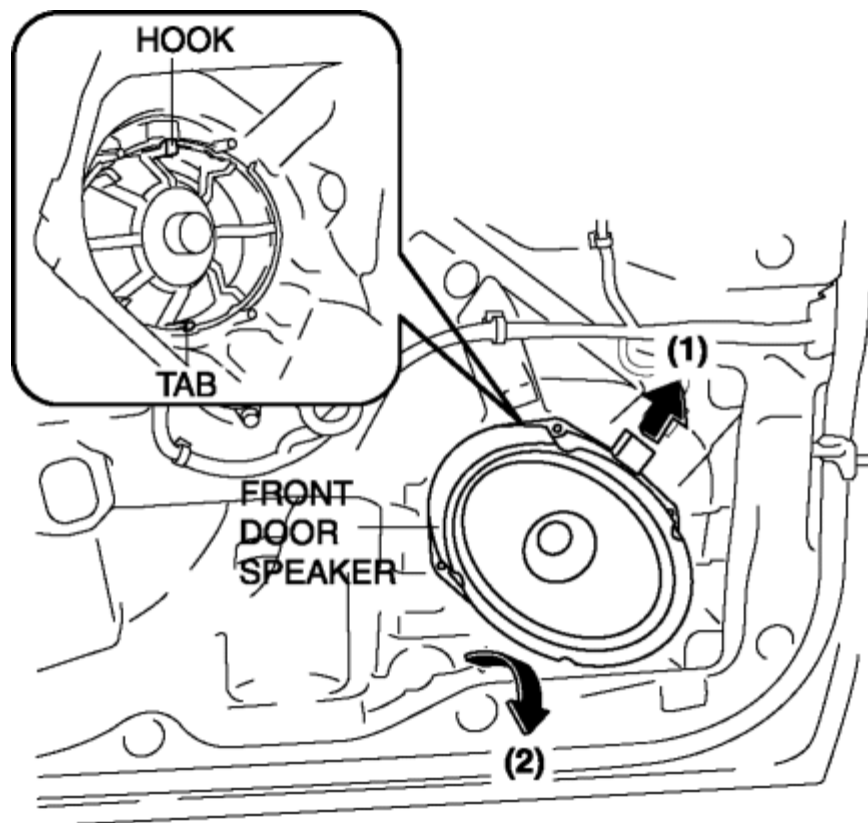


2012 - Mazda6 - Body and Accessories


FRONT DOOR SPEAKER REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
3. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/ INSTALLATION](#).)
4. Remove in the order indicated in the table.

With Bose®

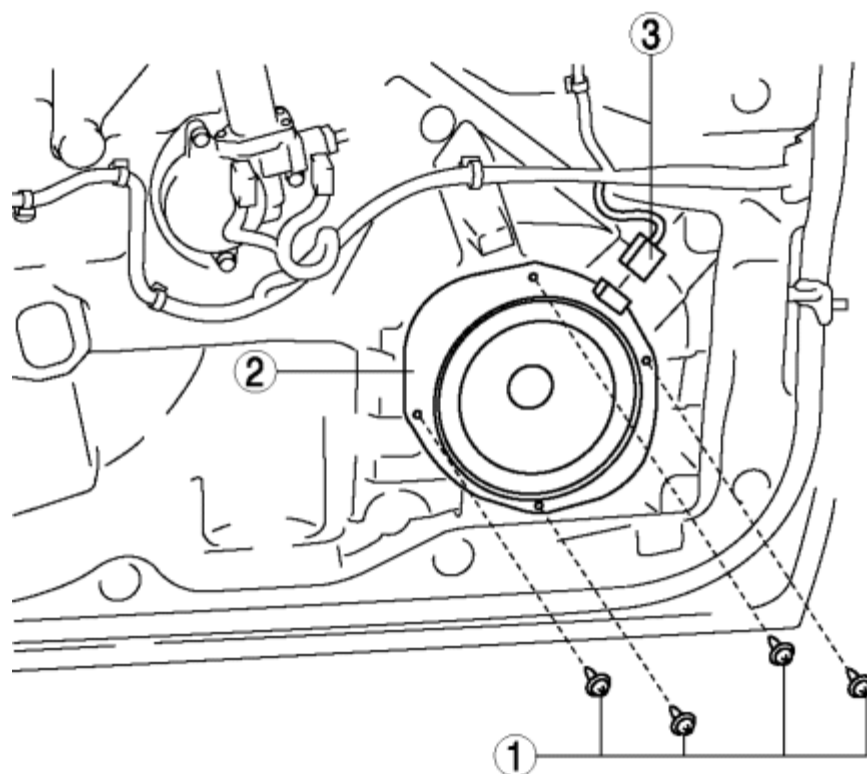

Without Bose®

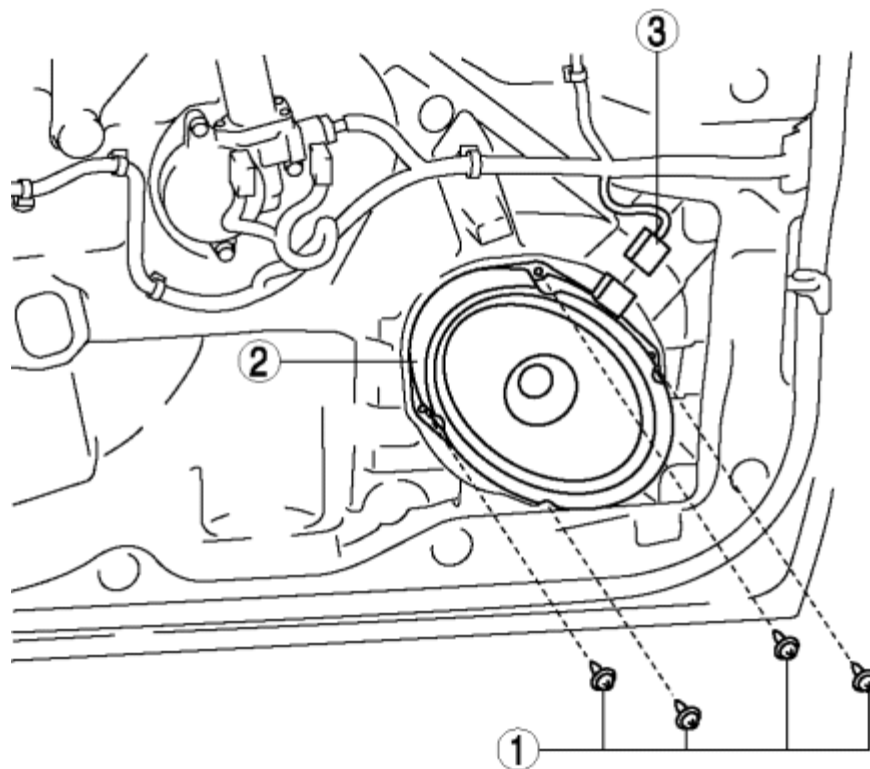


1	Screw
2	Front door speaker (See Front Door Speaker Removal Note.)
3	Connector

5. Install in the reverse order of removal.

Front Door Speaker Removal Note

1. Remove the front door speaker in the direction of the arrow shown in the figure.

With Bose®

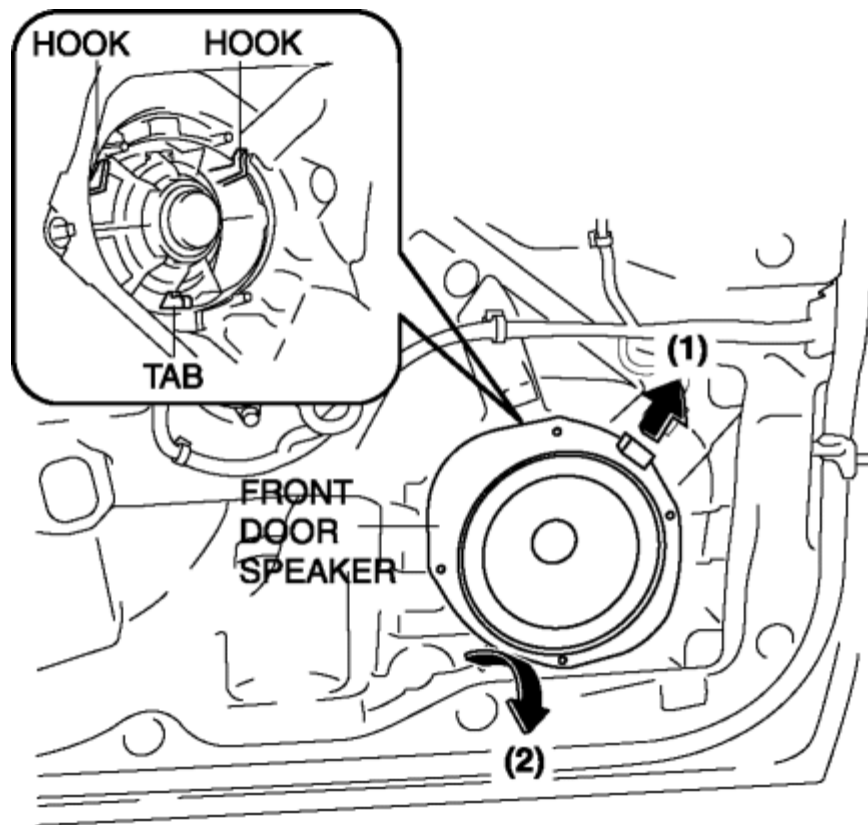

Without Bose®

