


2012 - Mazda6 - Body and Accessories

REAR SPEAKER REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. High-mount brake light (See [HIGH-MOUNT BRAKE LIGHT REMOVAL/ INSTALLATION](#))
 - b. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#))
 - c. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - d. C-pillar trim (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - e. Rear package trim (See [REAR PACKAGE TRIM REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

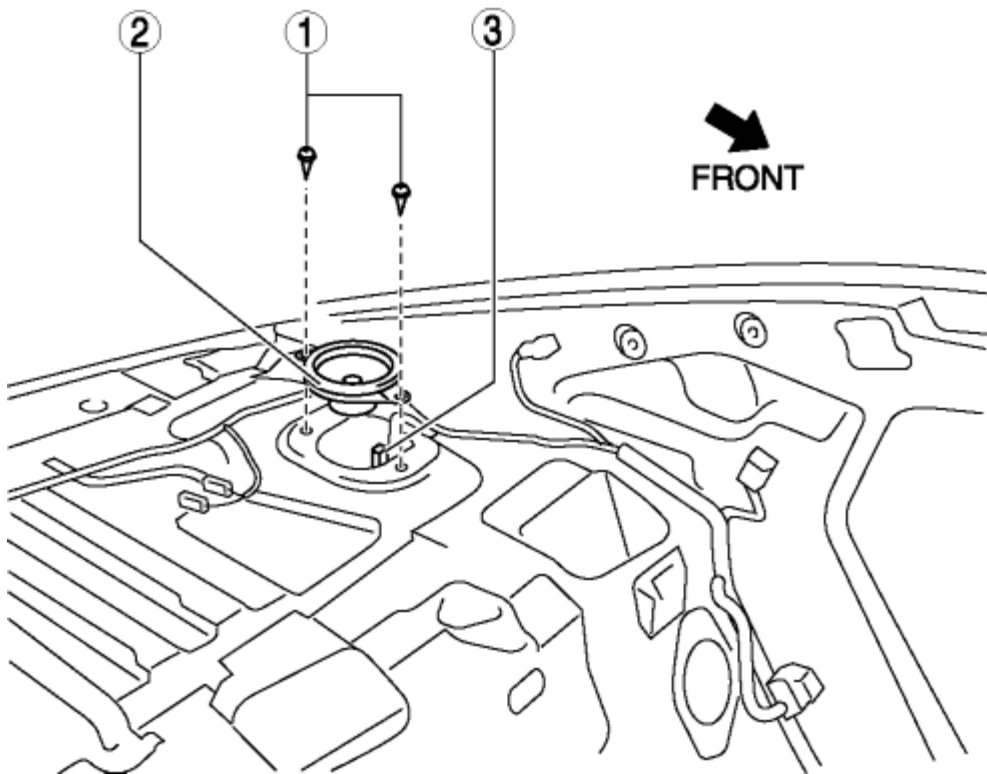

1	Screw
2	Rear speaker
3	Connector

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories

REAR SPEAKER REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. High-mount brake light (See [HIGH-MOUNT BRAKE LIGHT REMOVAL/ INSTALLATION](#))
 - b. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#))
 - c. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - d. C-pillar trim (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - e. Rear package trim (See [REAR PACKAGE TRIM REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

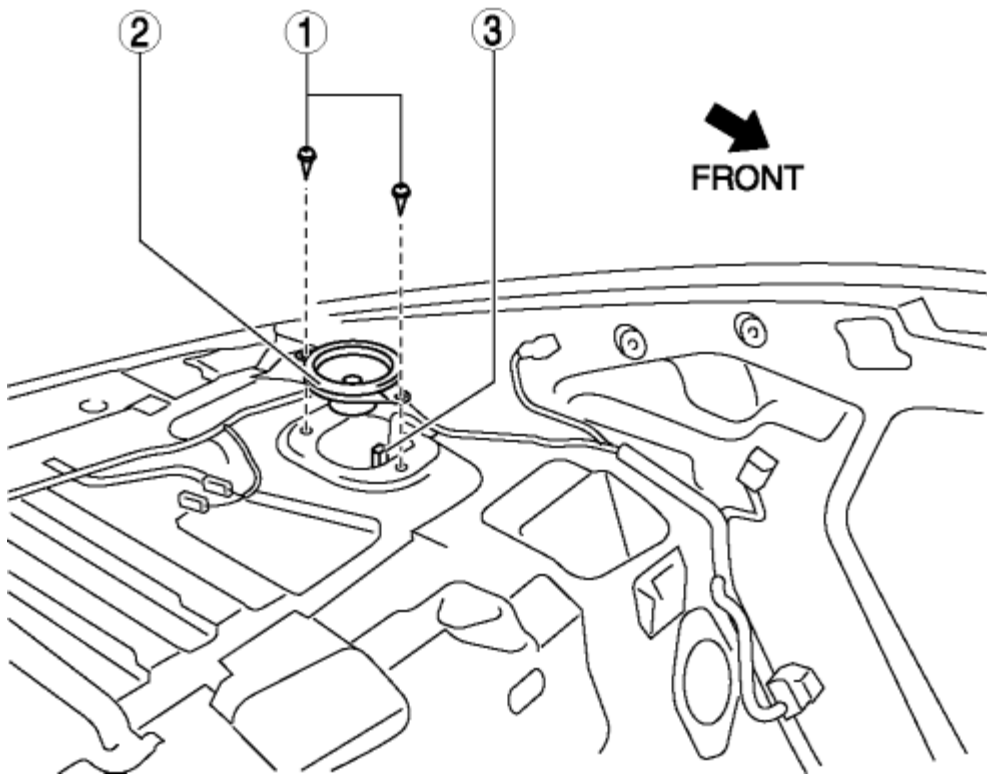

1	Screw
2	Rear speaker
3	Connector

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)