


2012 - Mazda6 - Body and Accessories

REAR DOOR SPEAKER INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
- 3. Remove the rear door speaker. (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
- 4. Verify the resistance between the rear door speaker terminals.

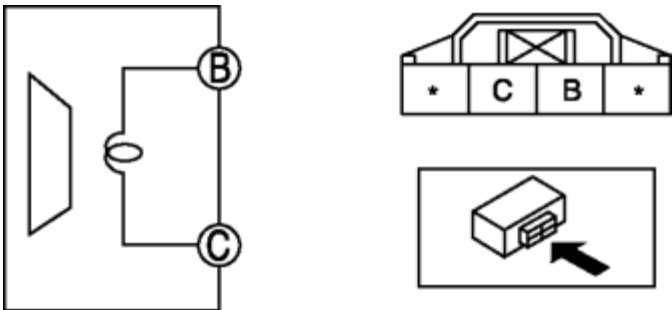

- If not within the specification, replace the rear door speaker.

○○ : Resistance

Test condition	Terminal	
	B	C
Under any condition	○○	○○


Resistance

- Without Bose®: 3.4—4.6 ohms
- With Bose®: 1.83—2.47 ohms

2012 - Mazda6 - Body and Accessories

REAR DOOR SPEAKER INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/ INSTALLATION.](#))
- 3. Remove the rear door speaker. (See [REAR DOOR SPEAKER REMOVAL/ INSTALLATION.](#))
- 4. Verify the resistance between the rear door speaker terminals.

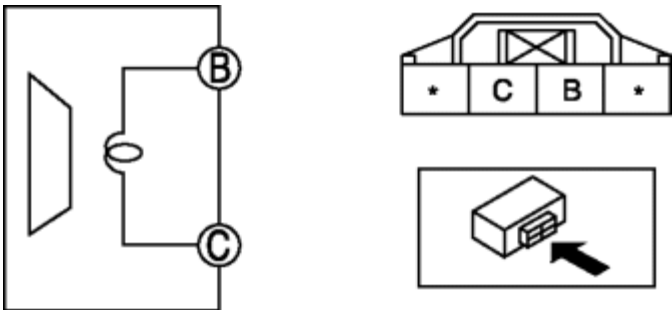

- If not within the specification, replace the rear door speaker.

○○ : Resistance

Test condition	Terminal	
	B	C
Under any condition	○○	

Resistance

- Without Bose®: 3.4—4.6 ohms
- With Bose®: 1.83—2.47 ohms