


 
2012 - Mazda6 - Body and Accessories

GLASS ANTENNA INSPECTION

1. Disconnect the negative battery cable.
2. Disconnect the antenna amplifier connector B. (See [ANTENNA AMPLIFIER REMOVAL/ INSTALLATION](#).)
3. Inspect the glass antenna for damage visually.
4. Inspect for continuity between the glass antenna terminals using an ohmmeter.

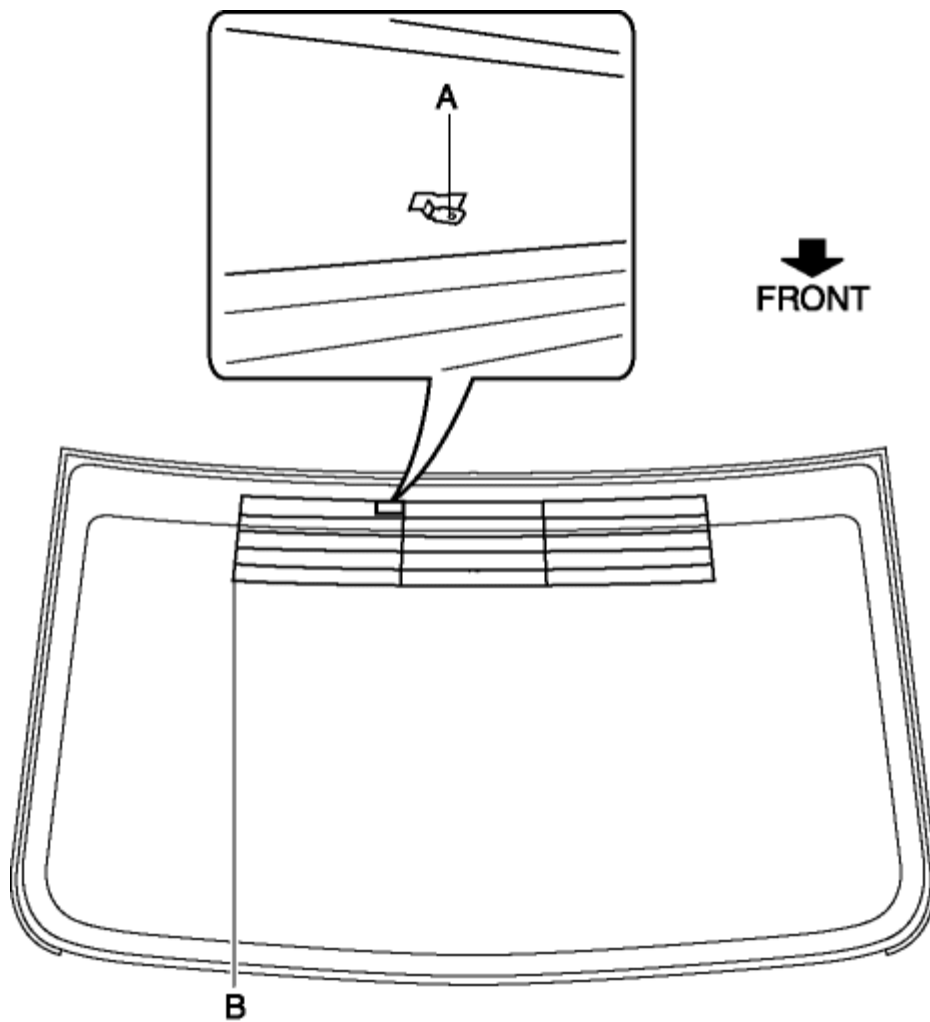

- If not as specified, repair the glass antenna. (See [FILAMENT REPAIR](#).)

 : Continuity

Test condition	Terminal	
	A	B
Under any condition		

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

 
2012 - Mazda6 - Body and Accessories

GLASS ANTENNA INSPECTION

1. Disconnect the negative battery cable.
2. Disconnect the antenna amplifier connector B. (See [ANTENNA AMPLIFIER REMOVAL/ INSTALLATION](#).)
3. Inspect the glass antenna for damage visually.
4. Inspect for continuity between the glass antenna terminals using an ohmmeter.

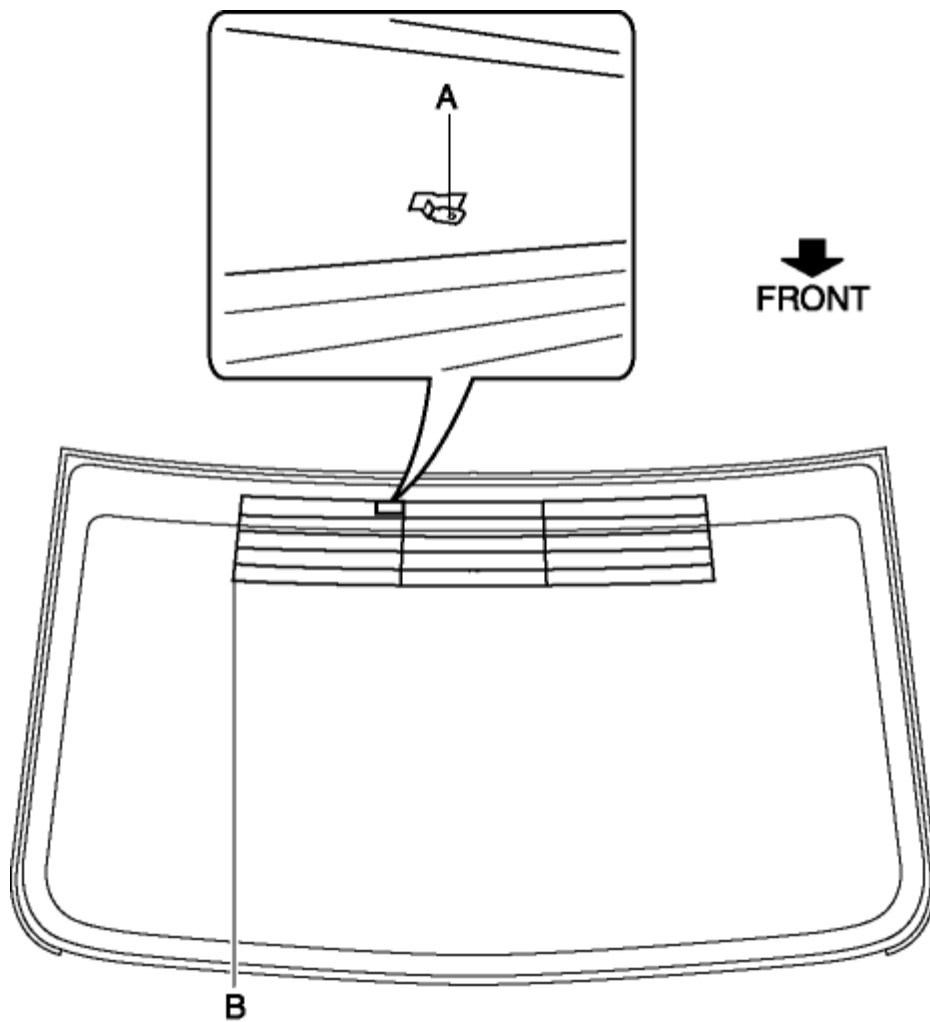

- If not as specified, repair the glass antenna. (See [FILAMENT REPAIR](#).)

 : Continuity

Test condition	Terminal	
	A	B
Under any condition		

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.