


2012 - Mazda6 - Body and Accessories

TWEETER INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
- 3. Remove the tweeter. (See [TWEETER REMOVAL/ INSTALLATION](#).)
- 4. Verify the resistance between tweeter terminals.

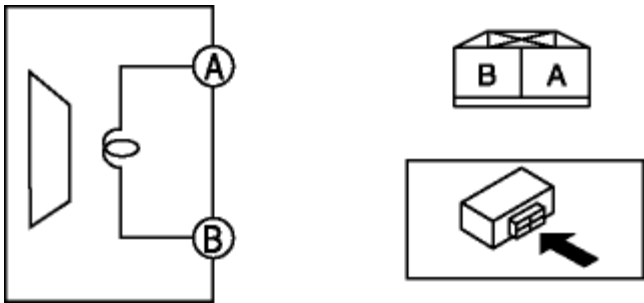

- If not within the specification, replace the tweeter.

○○ : Resistance

Test condition	Terminal	
	A	B
Under any condition	○○	


Resistance

- Without Bose®: 3.4—4.6 ohms
- With Bose®: 3.06—3.94 ohms

2012 - Mazda6 - Body and Accessories

TWEETER INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the inner garnish. (See [INNER GARNISH REMOVAL/ INSTALLATION](#).)
- 3. Remove the tweeter. (See [TWEETER REMOVAL/ INSTALLATION](#).)
- 4. Verify the resistance between tweeter terminals.

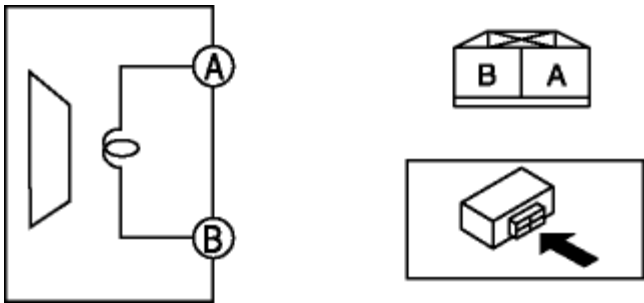

- If not within the specification, replace the tweeter.

○—Ω—○ : Resistance

Test condition	Terminal	
	A	B
Under any condition	○—Ω—○	

Resistance

- Without Bose®: 3.4—4.6 ohms
- With Bose®: 3.06—3.94 ohms