


2012 - Mazda6 - Body and Accessories

AUXILIARY JACK REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - c. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - d. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Rear console (See [REAR CONSOLE DISASSEMBLY/ ASSEMBLY.](#))
3. Remove the auxiliary jack in the direction of the arrow (2) shown in the figure while pressing the auxiliary jack tabs in the direction of the arrow (1).

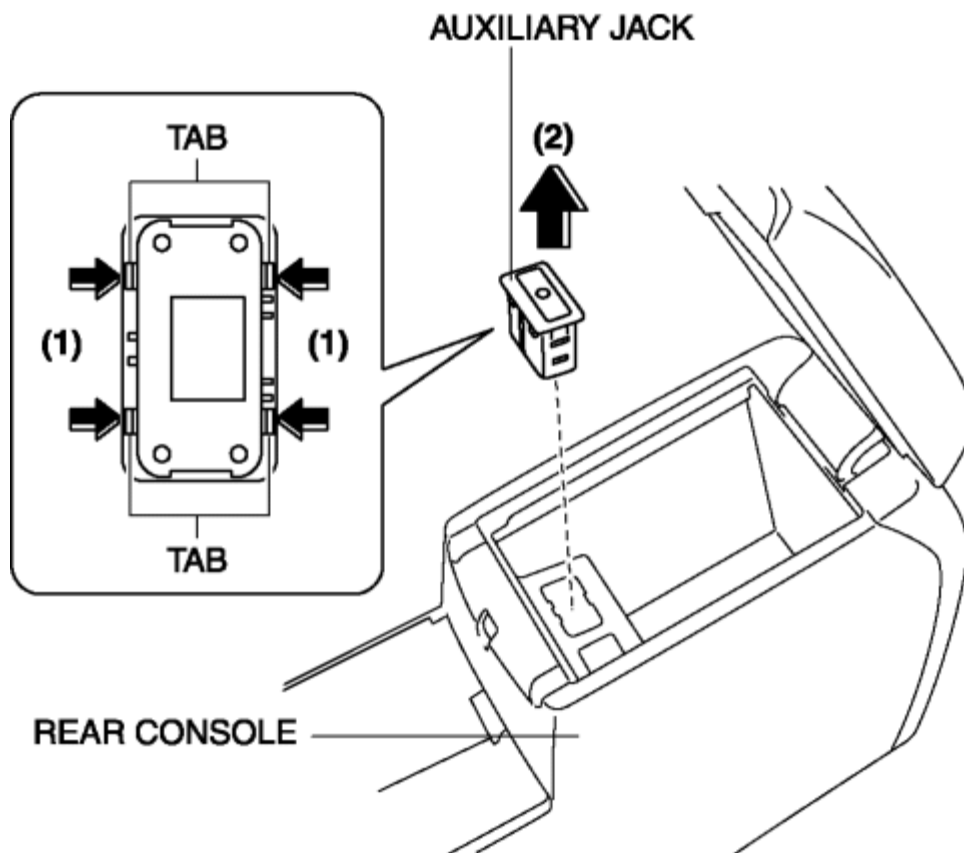


4. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

AUXILIARY JACK REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - c. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - d. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Rear console (See [REAR CONSOLE DISASSEMBLY/ ASSEMBLY.](#))
3. Remove the auxiliary jack in the direction of the arrow (2) shown in the figure while pressing the auxiliary jack tabs in the direction of the arrow (1).

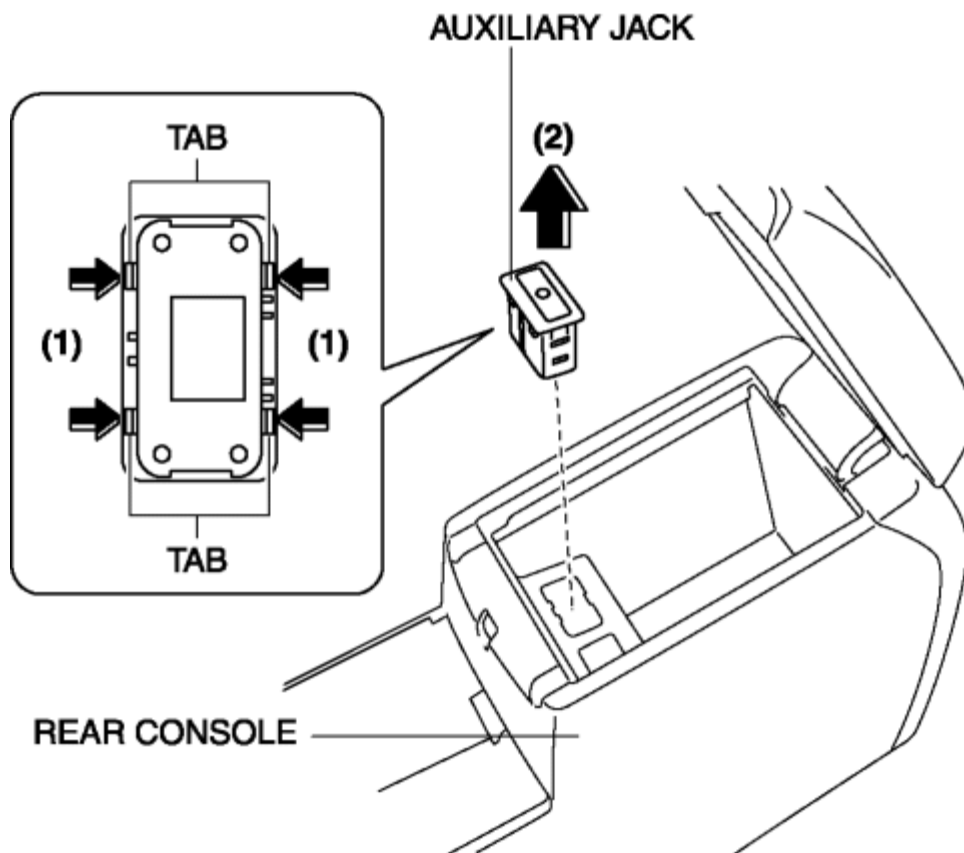

4. Install in the reverse order of removal.

