

2012 - Mazda6 - Body and Accessories


ANTENNA FEEDER NO.1 REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
 - b. Dashboard under cover (See [DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - e. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - f. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - g. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.](#))
 - h. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - i. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - j. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\].](#)) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
 - k. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - l. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
 - m. Lower panel (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
 - n. Driver-side air bag module (See [DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - o. Steering wheel (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - p. Column cover (See [COLUMN COVER REMOVAL/ INSTALLATION.](#))
 - q. Combination switch (See [COMBINATION SWITCH REMOVAL/ INSTALLATION.](#))
 - r. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
 - s. Instrument cluster (See [INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.](#))
 - t. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
 - u. Audio unit (With audio system) (See [AUDIO UNIT REMOVAL/ INSTALLATION.](#))
 - v. Car-navigation unit (With car-navigation system) (See [CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION.](#))
 - w. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - x. Steering shaft (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - y. Side panel (See [SIDE PANEL REMOVAL/ INSTALLATION.](#))
 - z. SIRIUS satellite radio unit (With SIRIUS satellite radio system) (See [SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.](#))
 - aa. Passenger-side air bag module (See [PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - ab. A-pillar trim (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - ac. Dashboard (See [DASHBOARD REMOVAL/ INSTALLATION.](#))
3. Remove the clips A and B.
4. Remove the antenna feeder No.1.
5. Install in the reverse order of removal.

With audio system

DASHBOARD

FRONT

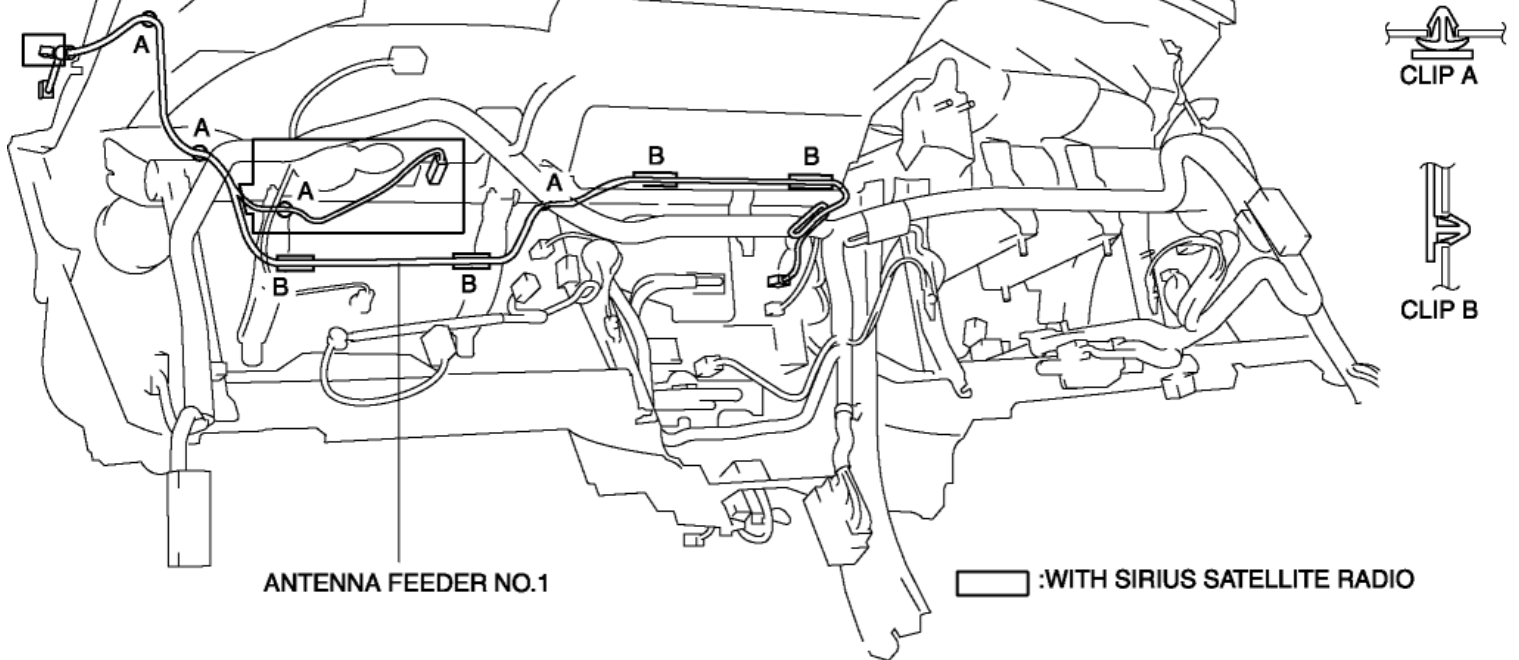


With car-navigation system

ANTENNA FEEDER NO.1

DASHBOARD

FRONT

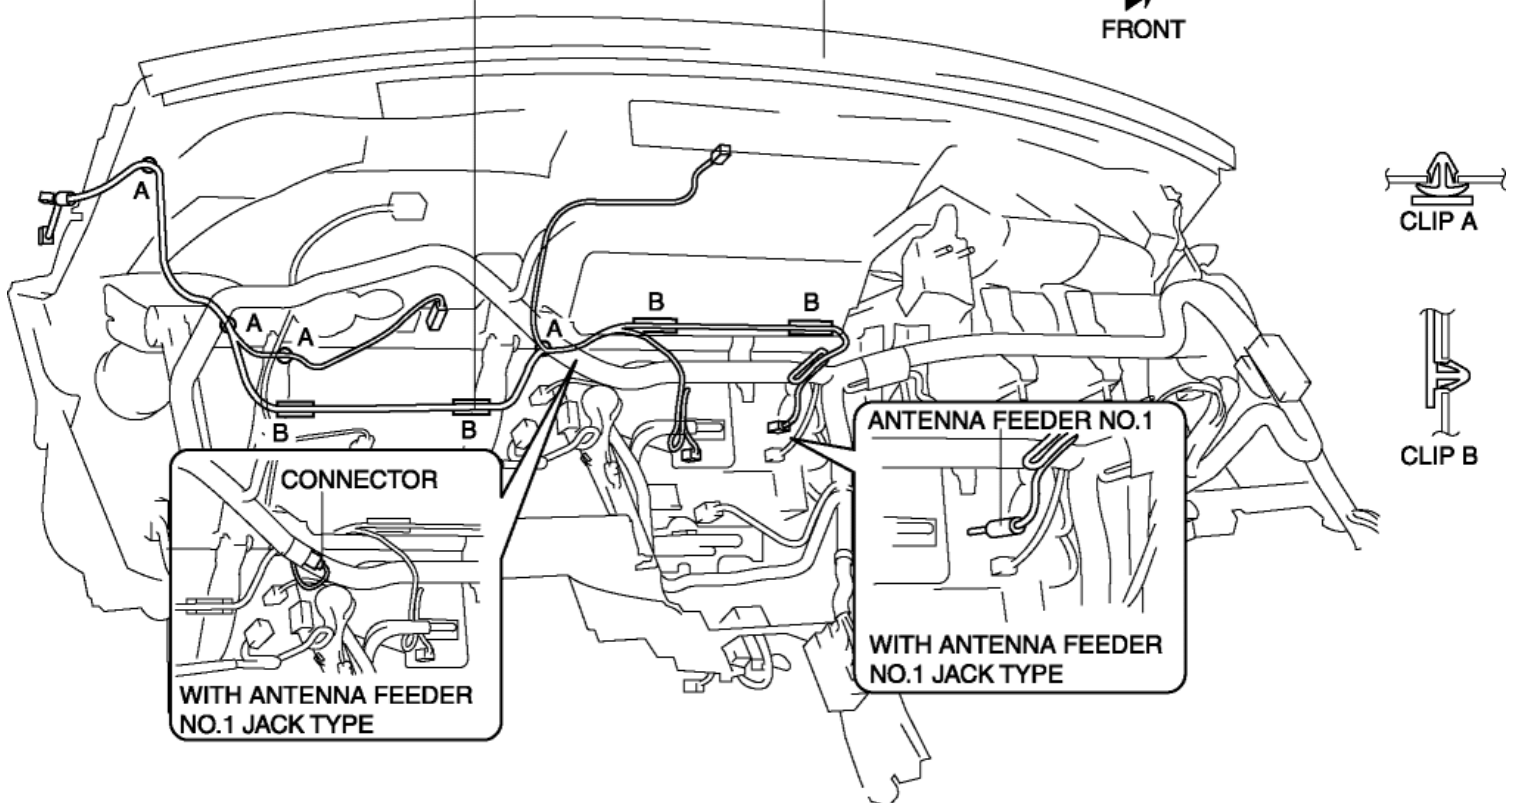

2012 - Mazda6 - Body and Accessories


ANTENNA FEEDER NO.1 REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Glove compartment (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
 - b. Dashboard under cover (See [DASHBOARD UNDER COVER REMOVAL/ INSTALLATION.](#))
 - c. Front scuff plates (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - d. Front side trims (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - e. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - f. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - g. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.](#))
 - h. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - i. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - j. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\].](#)) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
 - k. Rear console (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
 - l. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
 - m. Lower panel (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
 - n. Driver-side air bag module (See [DRIVER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - o. Steering wheel (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - p. Column cover (See [COLUMN COVER REMOVAL/ INSTALLATION.](#))
 - q. Combination switch (See [COMBINATION SWITCH REMOVAL/ INSTALLATION.](#))
 - r. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
 - s. Instrument cluster (See [INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.](#))
 - t. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
 - u. Audio unit (With audio system) (See [AUDIO UNIT REMOVAL/ INSTALLATION.](#))
 - v. Car-navigation unit (With car-navigation system) (See [CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION.](#))
 - w. Steering shaft cover (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - x. Steering shaft (See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))(See [STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION \[WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\].](#))
 - y. Side panel (See [SIDE PANEL REMOVAL/ INSTALLATION.](#))
 - z. SIRIUS satellite radio unit (With SIRIUS satellite radio system) (See [SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION.](#))
 - aa. Passenger-side air bag module (See [PASSENGER-SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.](#))
 - ab. A-pillar trim (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - ac. Dashboard (See [DASHBOARD REMOVAL/ INSTALLATION.](#))
3. Remove the clips A and B.
4. Remove the antenna feeder No.1.
5. Install in the reverse order of removal.

With audio system

DASHBOARD

FRONT

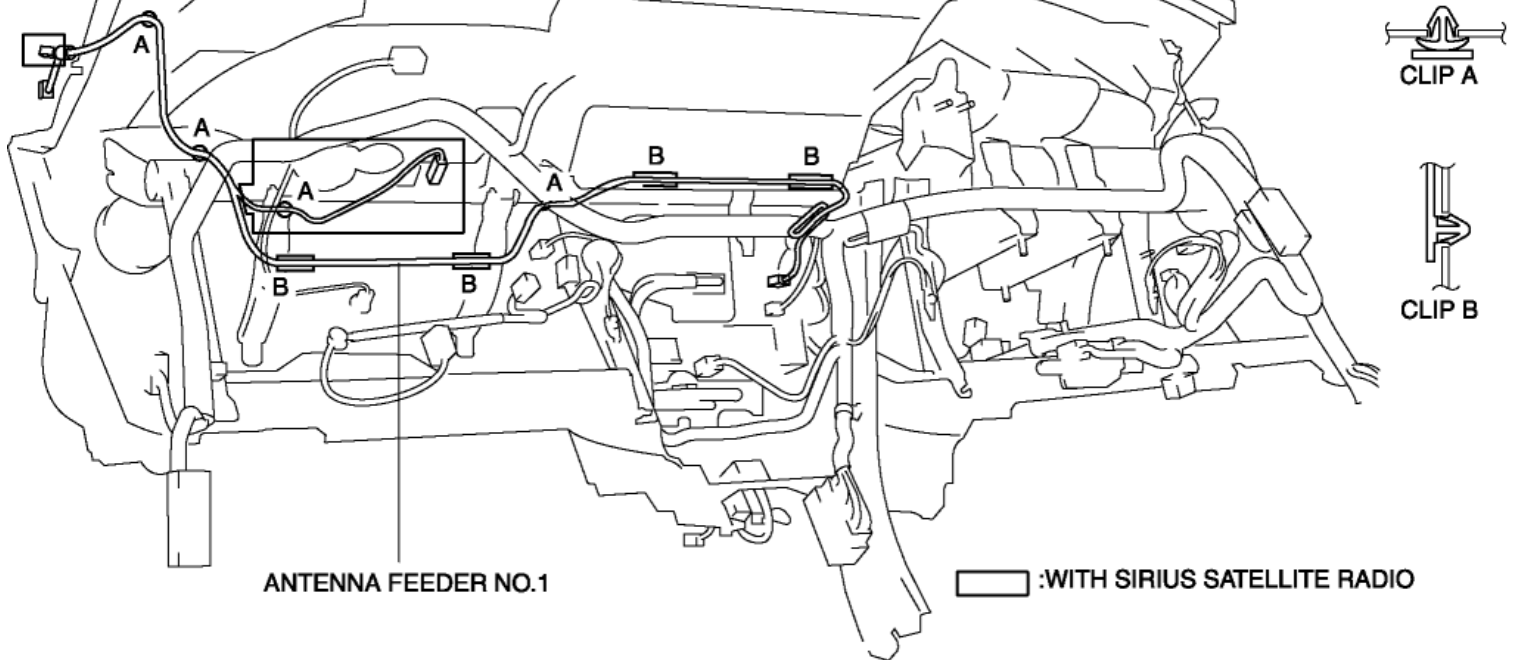

With car-navigation system

ANTENNA FEEDER NO.1

DASHBOARD

FRONT

