


2012 - Mazda6 - Body and Accessories

 

ANTENNA FEEDER NO.1 INSPECTION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - c. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
 - g. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\].](#)) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
 - h. Audio unit (With audio system) (See [AUDIO UNIT REMOVAL/ INSTALLATION.](#))
 - i. Car-navigation unit (With car-navigation system) (See [CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION.](#))
 - j. A-pillar trim (RH) (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
3. Disconnect the antenna feeder No.2.

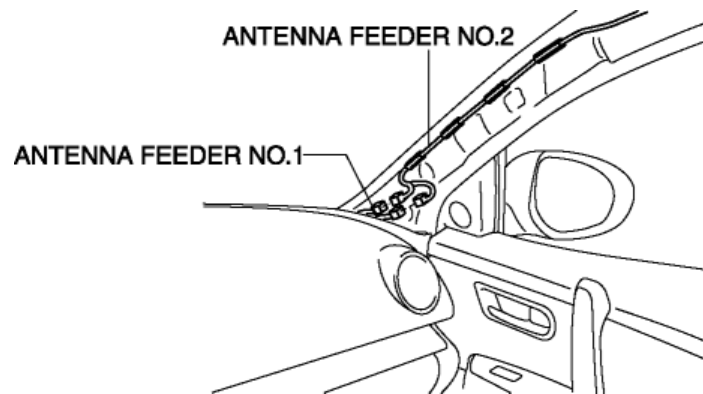


4. Verify that the continuity between antenna feeder No.1 terminals is as indicated in the table.

With audio system

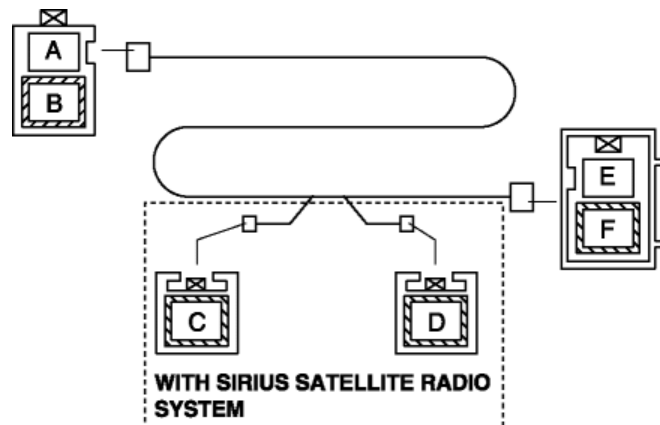


With car-navigation system

WITHOUT ANTENNA FEEDER No.1 JACK TYPE

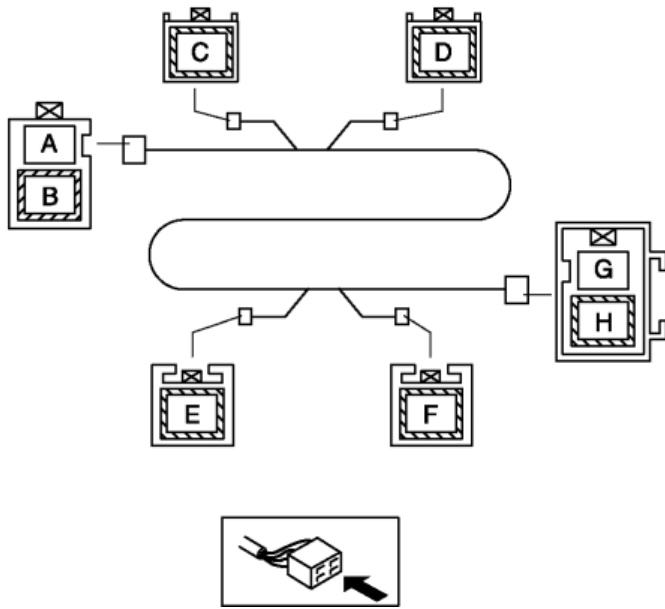

WITH ANTENNA FEEDER No.1 JACK TYPE

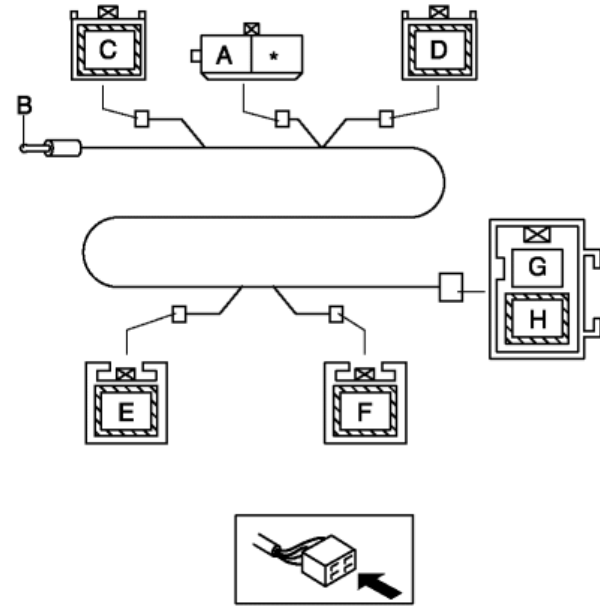

- If not as indicated in the table, replace antenna feeder No.1.

With audio system

○—○ : Continuity

Test condition	Terminal					
	A	B	C	D	E	F
Under any condition	○				○	
		○				○
			○	○ ^{*1}		

***1 : WITH SIRIUS SATELLITE RADIO SYSTEM**

With car-navigation system

○—○ : Continuity


Test condition	Terminal							
	A	B	C	D	E	F	G	H
Under any condition	○						○	
		○						○
			○	○				
					○	○		

< Previous Next >

2012 - Mazda6 - Body and Accessories



ANTENNA FEEDER NO.1 INSPECTION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - c. Shift knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
 - f. Center panel upper (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
 - g. Climate control unit (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[FULL-AUTO AIR CONDITIONER\].](#)) (See [CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION \[MANUAL AIR CONDITIONER\].](#))
 - h. Audio unit (With audio system) (See [AUDIO UNIT REMOVAL/ INSTALLATION.](#))
 - i. Car-navigation unit (With car-navigation system) (See [CAR-NAVIGATION UNIT REMOVAL/ INSTALLATION.](#))
 - j. A-pillar trim (RH) (See [A-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
3. Disconnect the antenna feeder No.2.

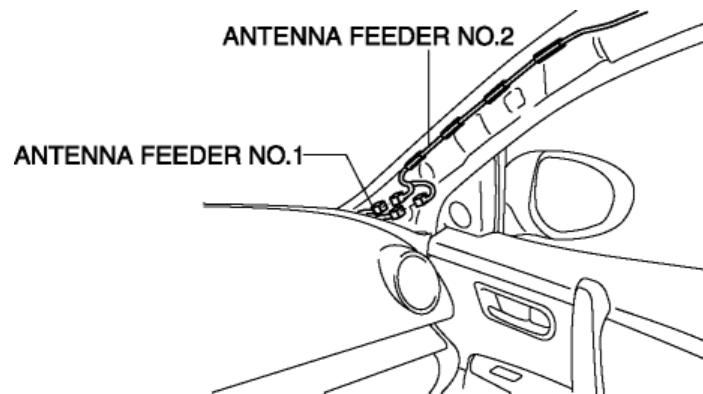


4. Verify that the continuity between antenna feeder No.1 terminals is as indicated in the table.

 With audio system

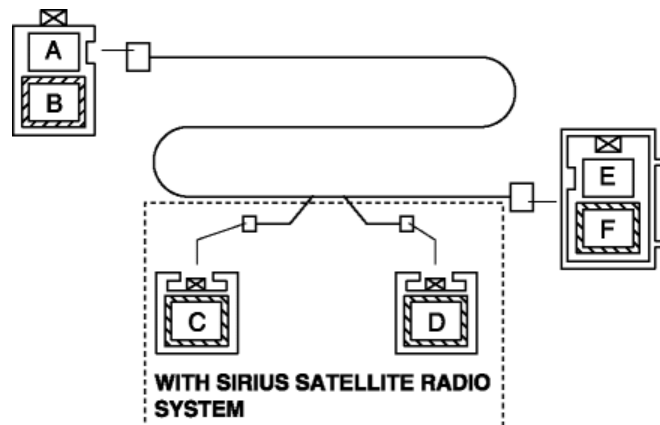


With car-navigation system

WITHOUT ANTENNA FEEDER No.1 JACK TYPE

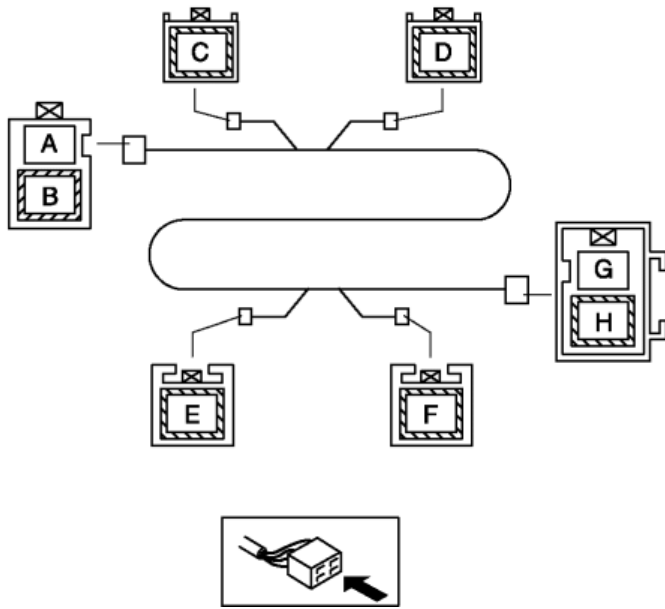

WITH ANTENNA FEEDER No.1 JACK TYPE

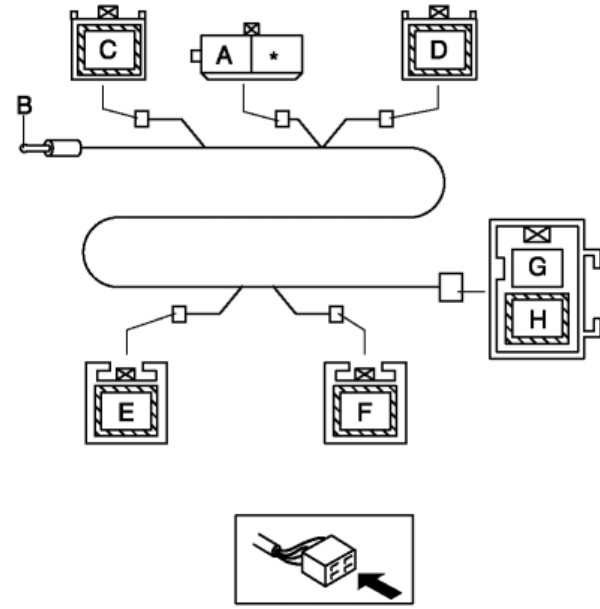

- If not as indicated in the table, replace antenna feeder No.1.

With audio system

○—○ : Continuity

Test condition	Terminal					
	A	B	C	D	E	F
Under any condition	○				○	
		○				○
			○	○ ^{*1}		

***1 : WITH SIRIUS SATELLITE RADIO SYSTEM**

With car-navigation system

○—○ : Continuity

Test condition	Terminal							
	A	B	C	D	E	F	G	H
Under any condition	○						○	
		○						○
			○	○				
					○	○		

< Previous Next >