


2012 - Mazda6 - Body and Accessories

SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the glove compartment. (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

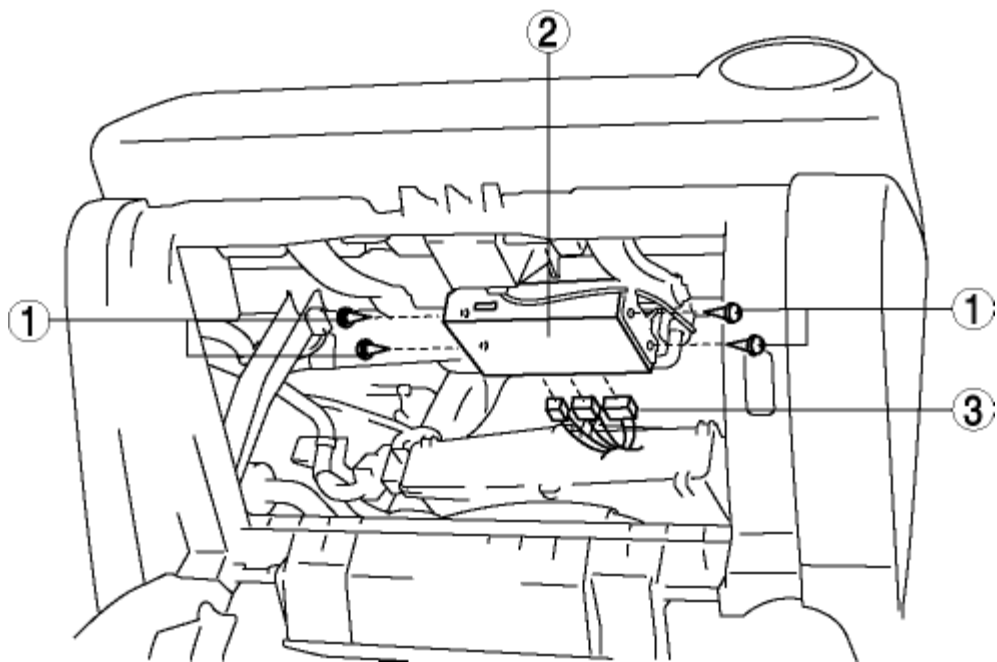


1	Screw
2	SIRIUS satellite radio unit
3	Connector

- 4. Install in the reverse order of removal.

SIRIUS Satellite Radio Unit Removal Note

- 1. Spread the SIRIUS satellite radio unit bracket apart in the direction of the arrow shown in the figure (1) to remove the SIRIUS satellite radio unit (2).

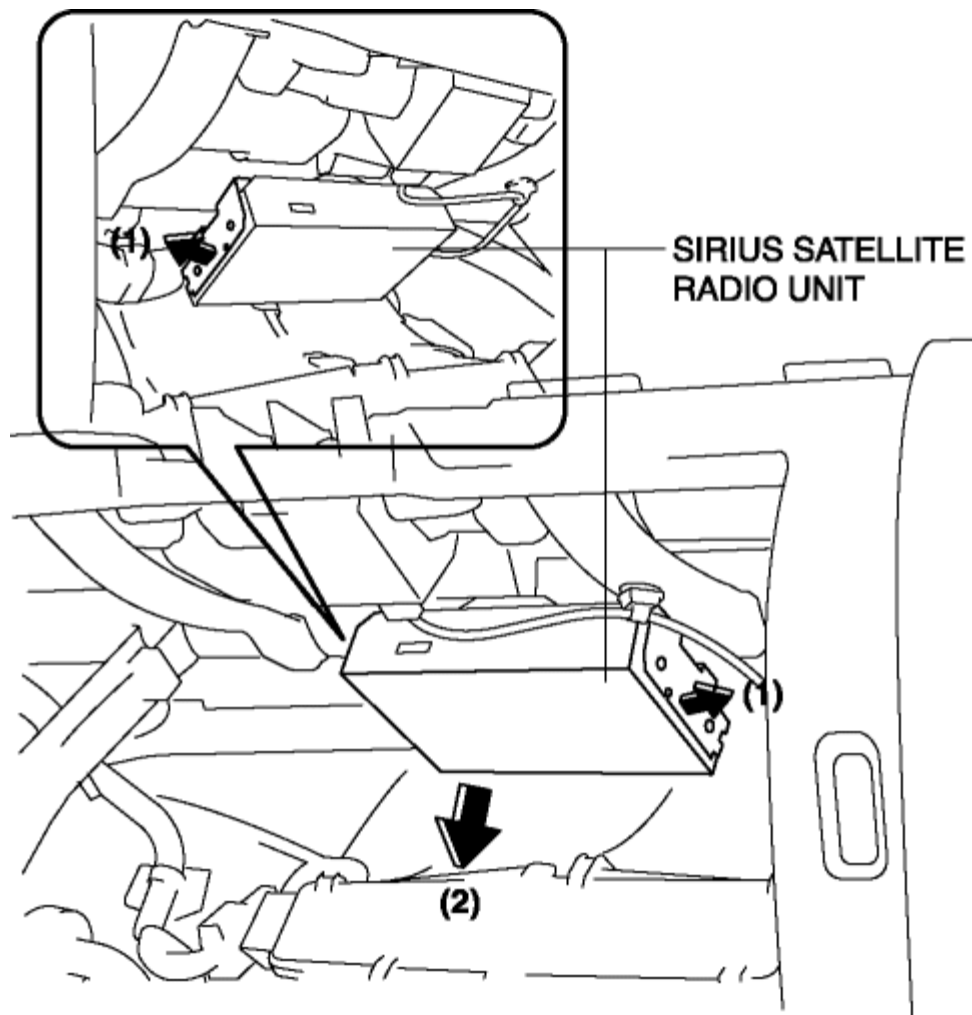

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

SIRIUS SATELLITE RADIO UNIT REMOVAL/ INSTALLATION

- 1. Disconnect the negative battery cable.
- 2. Remove the glove compartment. (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

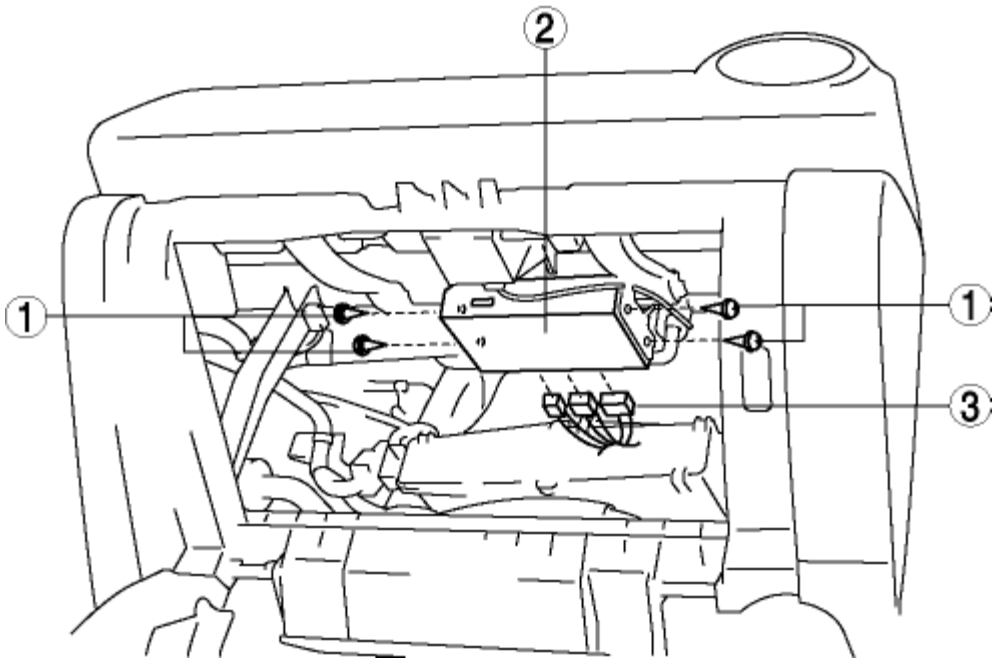


1	Screw
2	SIRIUS satellite radio unit
3	Connector

- 4. Install in the reverse order of removal.

SIRIUS Satellite Radio Unit Removal Note

- 1. Spread the SIRIUS satellite radio unit bracket apart in the direction of the arrow shown in the figure (1) to remove the SIRIUS satellite radio unit (2).

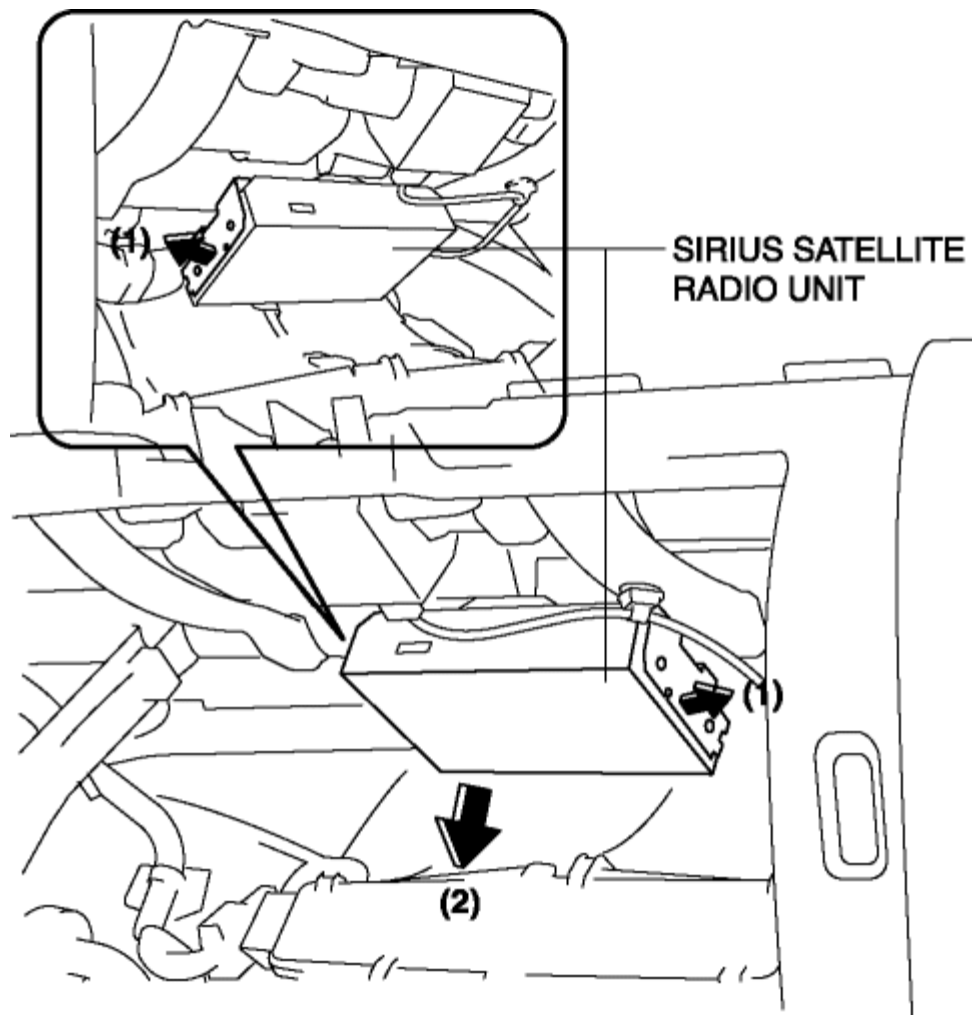

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.