


2012 - Mazda6 - Body and Accessories

FRONT CENTER SPEAKER INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the center panel upper. (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
- 3. Remove the front center speaker. (See [FRONT CENTER SPEAKER REMOVAL/ INSTALLATION.](#))
- 4. Verify the resistance between the front center speaker terminals.

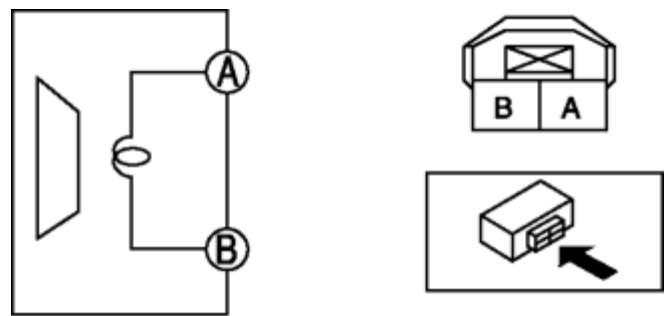

- If not within the specification, replace the front center speaker.

○○ : Resistance

Test condition	Terminal	
	A	B
Under any condition	○○	


Resistance

- 2.24—3.96 ohms

2012 - Mazda6 - Body and Accessories

FRONT CENTER SPEAKER INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the center panel upper. (See [CENTER PANEL UPPER REMOVAL/ INSTALLATION.](#))
- 3. Remove the front center speaker. (See [FRONT CENTER SPEAKER REMOVAL/ INSTALLATION.](#))
- 4. Verify the resistance between the front center speaker terminals.

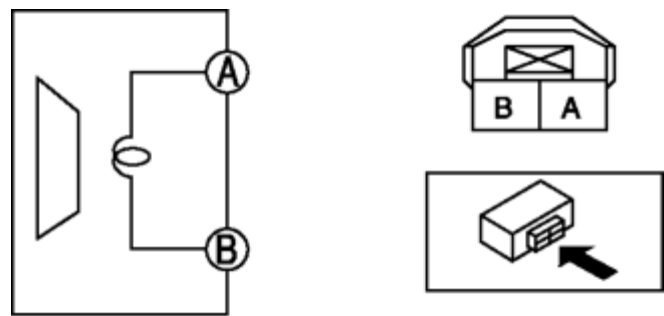

- If not within the specification, replace the front center speaker.

○○ : Resistance

Test condition	Terminal	
	A	B
Under any condition	○○	

Resistance

- 2.24—3.96 ohms