


2012 - Mazda6 - Body and Accessories

REAR CENTER SPEAKER INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. High-mount brake light (See [HIGH-MOUNT BRAKE LIGHT REMOVAL/ INSTALLATION](#))
 - b. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#))
 - c. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - d. C-pillar trim (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - e. Rear package trim (See [REAR PACKAGE TRIM REMOVAL/ INSTALLATION.](#))
 - f. Rear center speaker (See [REAR CENTER SPEAKER REMOVAL/ INSTALLATION.](#))
- 3. Verify the resistance between the rear center speaker terminals.

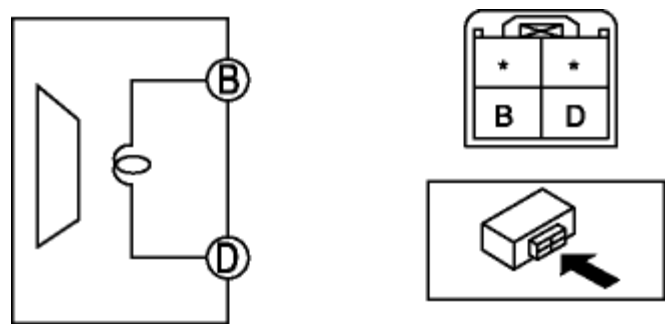

- If not within the specification, replace the rear center speaker.

○○ : Resistance

Test condition	Terminal	
	B	D
Under any condition		


Resistance

- 0.9—1.1 ohms

2012 - Mazda6 - Body and Accessories

REAR CENTER SPEAKER INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. High-mount brake light (See [HIGH-MOUNT BRAKE LIGHT REMOVAL/ INSTALLATION](#))
 - b. Rear seat cushion (See [REAR SEAT CUSHION REMOVAL/ INSTALLATION](#))
 - c. Rear side seat back (See [REAR SIDE SEAT BACK REMOVAL/ INSTALLATION.](#))
 - d. C-pillar trim (See [C-PILLAR TRIM REMOVAL/ INSTALLATION.](#))
 - e. Rear package trim (See [REAR PACKAGE TRIM REMOVAL/ INSTALLATION.](#))
 - f. Rear center speaker (See [REAR CENTER SPEAKER REMOVAL/ INSTALLATION.](#))
- 3. Verify the resistance between the rear center speaker terminals.

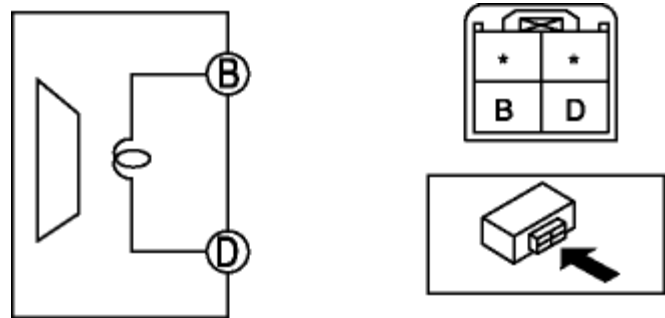

- If not within the specification, replace the rear center speaker.

○○ : Resistance

Test condition	Terminal	
	B	D
Under any condition		

Resistance

- 0.9—1.1 ohms