


2012 - Mazda6 - Body and Accessories

POWER SYSTEMS PERSONALIZATION FEATURES SETTING PROCEDURE

1. Connect the M-MDS (IDS) to the DLC-2.

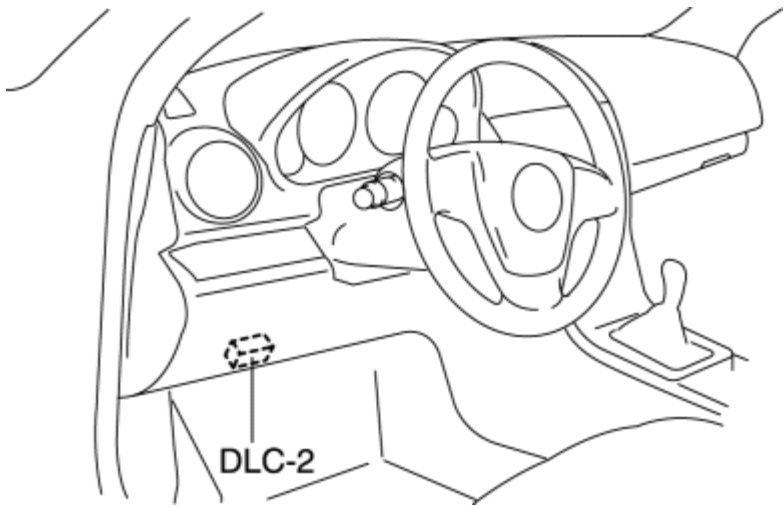


2. After the vehicle is identified, select the following items from the initial screen of the M-MDS (IDS).
- Select the "Module Programming".
3. Then, select items from the screen menu in the following order.
1. Select "Programmable Parameters".
 2. Select "RKE".
4. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting content	Control unit
ACC auto off	The function to automatically switch off the ignition after one hour has elapsed since the ignition was switched to ACC can be set to operable or inoperable.	Enabled	Disabled/Enabled	Keyless control module
Power off mode	The transition pattern in which the ignition position is switched by pressing the push button start can be selected.	Direct	Direct/Stepwise	Keyless control module

2012 - Mazda6 - Body and Accessories

POWER SYSTEMS PERSONALIZATION FEATURES SETTING PROCEDURE

1. Connect the M-MDS (IDS) to the DLC-2.

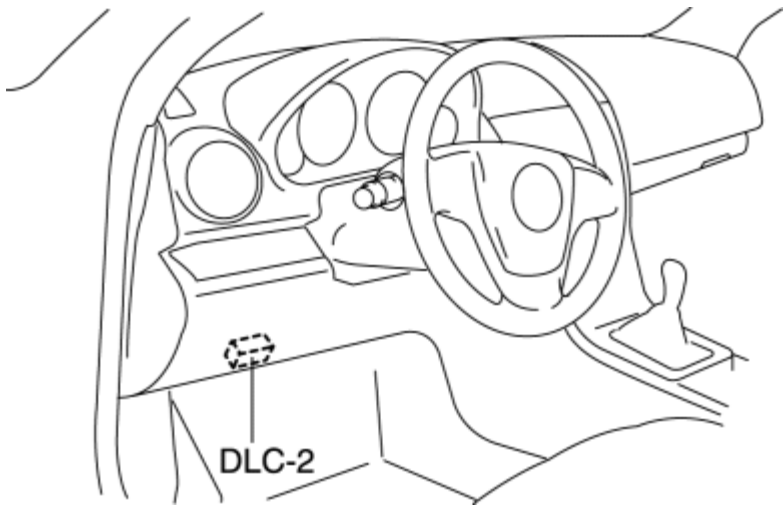

2. After the vehicle is identified, select the following items from the initial screen of the M-MDS (IDS).
- Select the "Module Programming".
3. Then, select items from the screen menu in the following order.
1. Select "Programmable Parameters".
 2. Select "RKE".
4. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting content	Control unit
ACC auto off	The function to automatically switch off the ignition after one hour has elapsed since the ignition was switched to ACC can be set to operable or inoperable.	Enabled	Disabled/Enabled	Keyless control module
Power off mode	The transition pattern in which the ignition position is switched by pressing the push button start can be selected.	Direct	Direct/Stepwise	Keyless control module

