


2012 - Mazda6 - Body and Accessories

MAIN FUSE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the nuts.

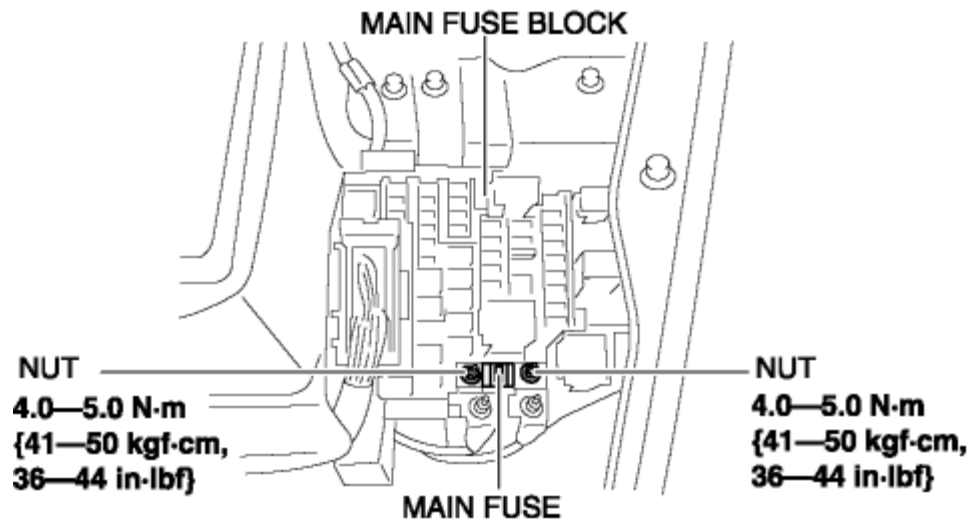


3. Remove the main fuse from the main fuse block.
4. Install in the reverse order of removal.

2012 - Mazda6 - Body and Accessories

MAIN FUSE REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the nuts.

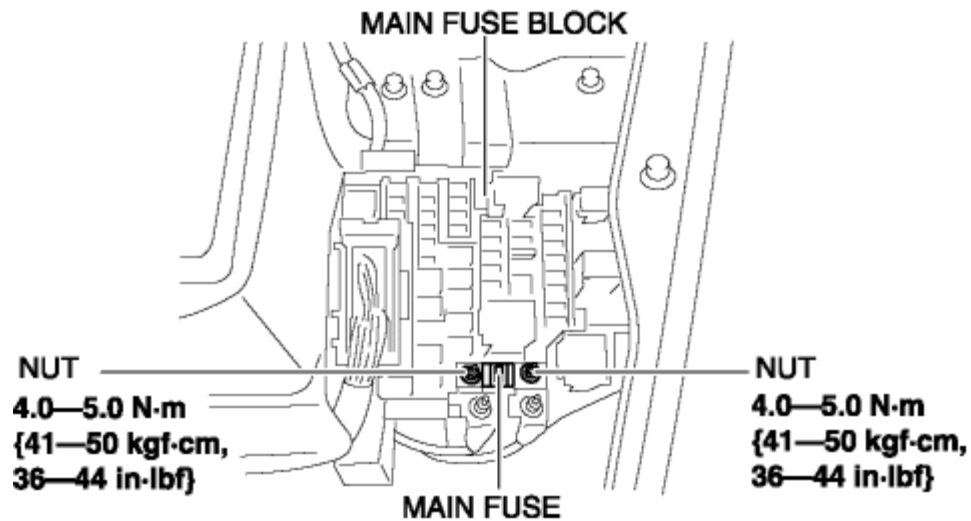

3. Remove the main fuse from the main fuse block.
4. Install in the reverse order of removal.