


2012 - Mazda6 - Body and Accessories

INFO SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. Front scuff plate (Driver side) (See FRONT SCUFF PLATE REMOVAL/ INSTALLATION.)
 - b. Front side trim (Driver side) (See FRONT SIDE TRIM REMOVAL/ INSTALLATION.)
 - c. Upper panel (See UPPER PANEL REMOVAL/ INSTALLATION.)
 - d. Decoration panel (Driver side) (See DECORATION PANEL REMOVAL/ INSTALLATION.)
 - e. Hood release lever (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
 - f. Meter hood (See METER HOOD REMOVAL/ INSTALLATION.)
 - g. Lower panel (Driver side) (See LOWER PANEL REMOVAL/ INSTALLATION.)
 - h. INFO switch (See INFO SWITCH REMOVAL/ INSTALLATION.)
- 3. Verify that the continuity between the INFO switch terminals is as indicated in the table.

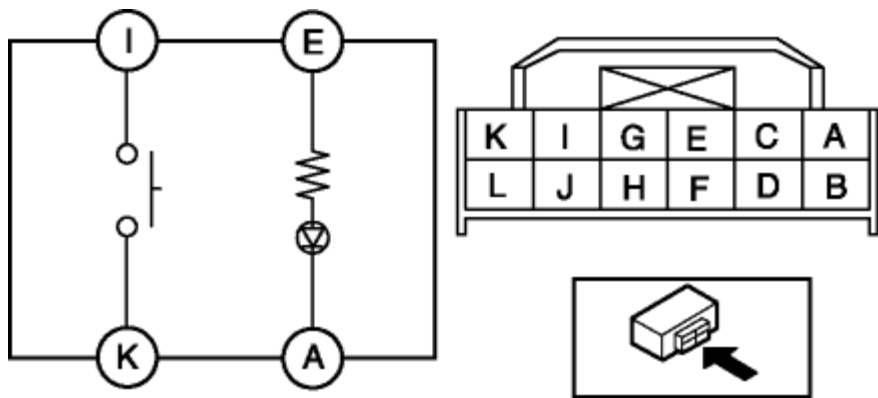

- If not as indicated in the table, replace the INFO switch.

○—○: CONTINUITY

SWITCH POSITION	TERMINAL	
	I	K
Switch released		
Switch pressed	○—○	○—○

- 4. Apply battery positive voltage to INFO switch terminal E, and connect terminal A to ground.

5. Verify that the LED illuminates.

- If there is any malfunction, replace the INFO switch.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

INFO SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. Front scuff plate (Driver side) (See FRONT SCUFF PLATE REMOVAL/ INSTALLATION.)
 - b. Front side trim (Driver side) (See FRONT SIDE TRIM REMOVAL/ INSTALLATION.)
 - c. Upper panel (See UPPER PANEL REMOVAL/ INSTALLATION.)
 - d. Decoration panel (Driver side) (See DECORATION PANEL REMOVAL/ INSTALLATION.)
 - e. Hood release lever (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
 - f. Meter hood (See METER HOOD REMOVAL/ INSTALLATION.)
 - g. Lower panel (Driver side) (See LOWER PANEL REMOVAL/ INSTALLATION.)
 - h. INFO switch (See INFO SWITCH REMOVAL/ INSTALLATION.)
- 3. Verify that the continuity between the INFO switch terminals is as indicated in the table.

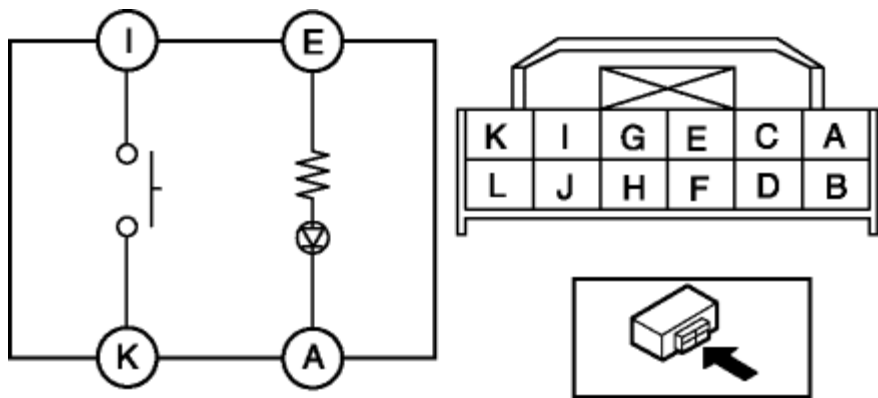

- If not as indicated in the table, replace the INFO switch.

○—○ : CONTINUITY

SWITCH POSITION	TERMINAL	
	I	K
Switch released		
Switch pressed	○—○	○—○

- 4. Apply battery positive voltage to INFO switch terminal E, and connect terminal A to ground.

5. Verify that the LED illuminates.

- If there is any malfunction, replace the INFO switch.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.