



2012 - Mazda6 - Body and Accessories

INSTRUMENTATION/ DRIVER INFO. LOCATION INDEX

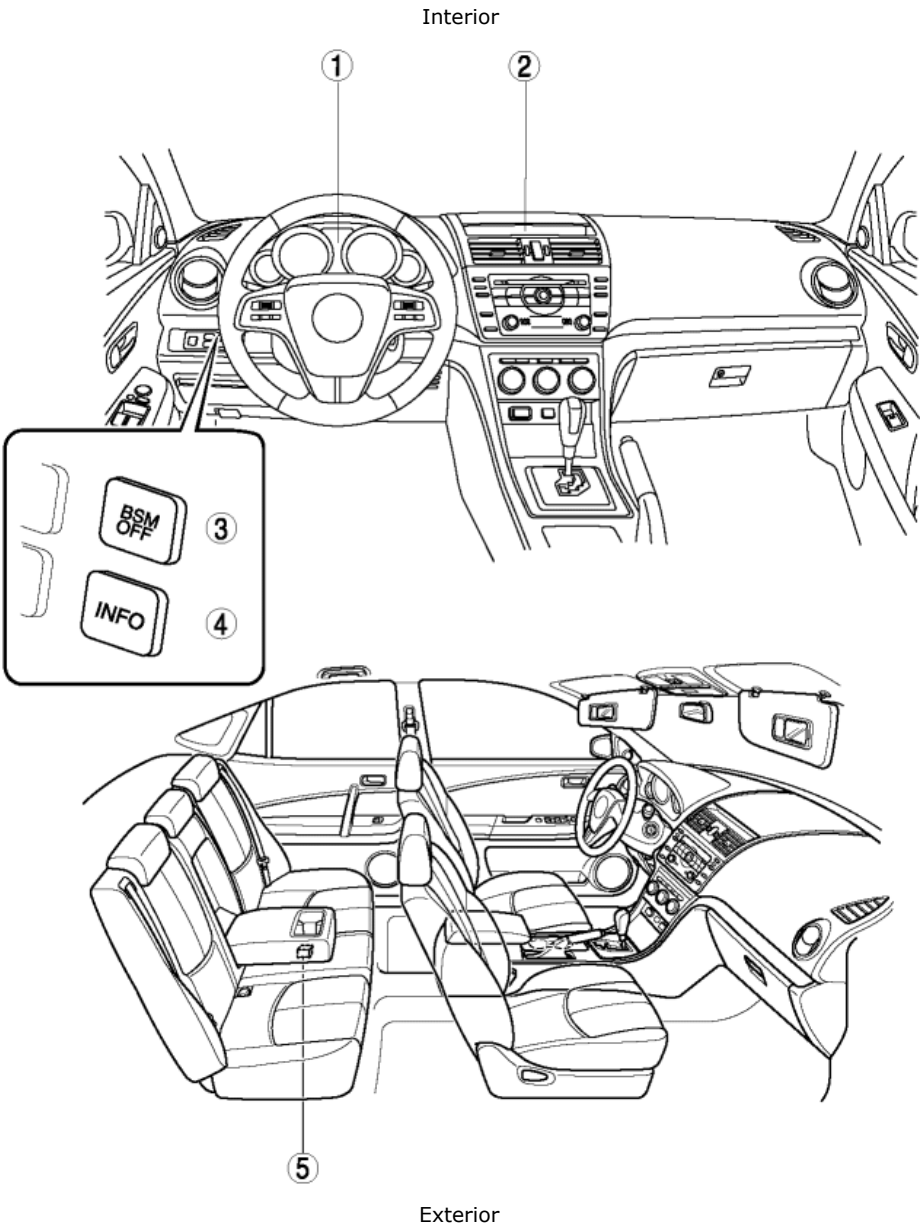

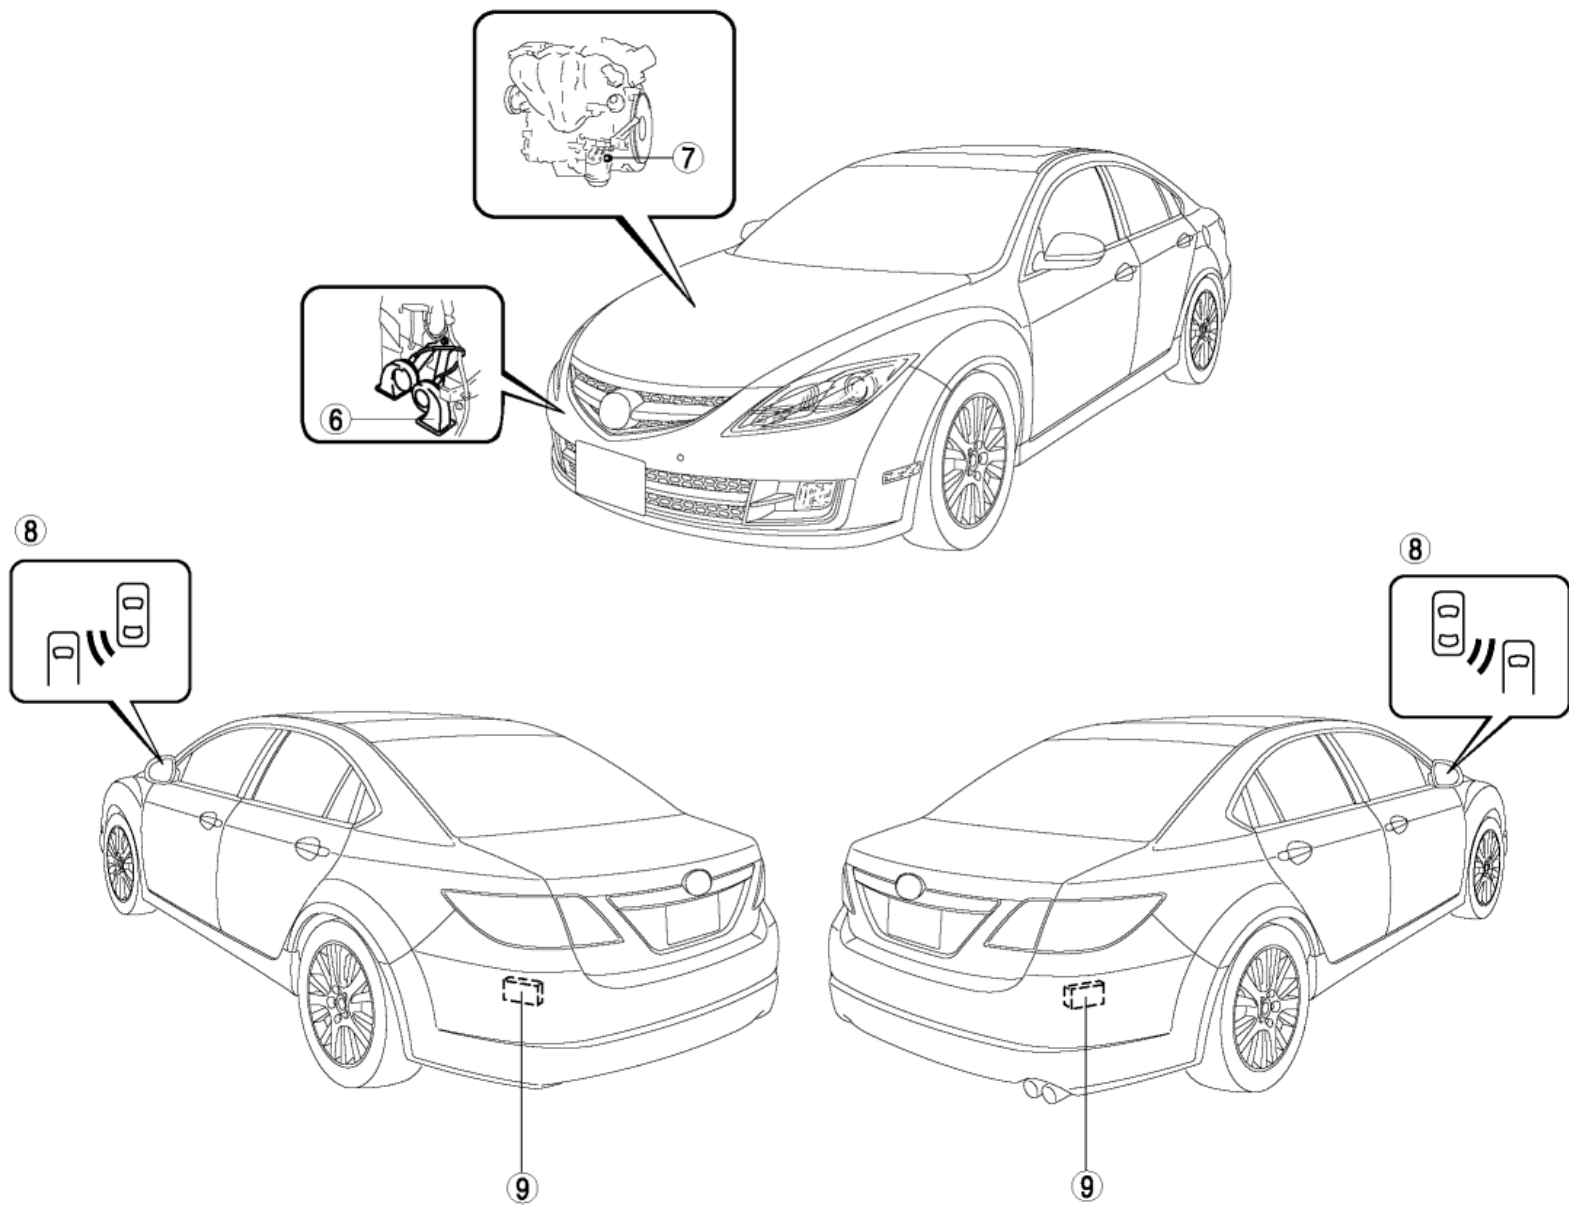



1Instrument cluster
(See INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.)
(See INSTRUMENT CLUSTER DISASSEMBLY/ ASSEMBLY.)
(See INSTRUMENT CLUSTER INSPECTION.)
(See INSTRUMENT CLUSTER CONFIGURATION.)
(See INSTRUMENTATION/ DRIVER INFO. PERSONALIZATION FEATURES SETTING PROCEDURE.)
2Information display
(See INFORMATION DISPLAY REMOVAL/ INSTALLATION.)
(See INFORMATION DISPLAY INPUT/ OUTPUT CHECK MODE.)
3BSM OFF switch
(See BLIND SPOT MONITORING (BSM) OFF SWITCH REMOVAL/ INSTALLATION.)
(See BLIND SPOT MONITORING (BSM) OFF SWITCH INSPECTION.)
4INFO switch
(See INFO SWITCH REMOVAL/ INSTALLATION.)

	(See INFO SWITCH INSPECTION.)
5	Fuel gauge sender unit (See FUEL GAUGE SENDER UNIT REMOVAL/ INSTALLATION.) (See FUEL GAUGE SENDER UNIT INSPECTION.)
6	Horn (See HORN REMOVAL/ INSTALLATION.)
7	Oil pressure switch (See OIL PRESSURE SWITCH INSPECTION.)
8	BSM indicator light (See BLIND SPOT MONITORING (BSM) INDICATOR LIGHT REMOVAL/ INSTALLATION.) (See BLIND SPOT MONITORING (BSM) INDICATOR LIGHT INSPECTION.)
9	BSM control module (See BLIND SPOT MONITORING (BSM) CONTROL MODULE REMOVAL/ INSTALLATION.) (See BLIND SPOT MONITORING (BSM) CONTROL MODULE INSPECTION.) (See BLIND SPOT MONITORING (BSM) BRACKET REMOVAL/ INSTALLATION.) (See BLIND SPOT MONITORING (BSM) RADAR TEST.) (See INSTRUMENTATION/ DRIVER INFO. PERSONALIZATION FEATURES SETTING PROCEDURE.)

2012 - Mazda6 - Body and Accessories

INSTRUMENTATION/ DRIVER INFO. LOCATION INDEX

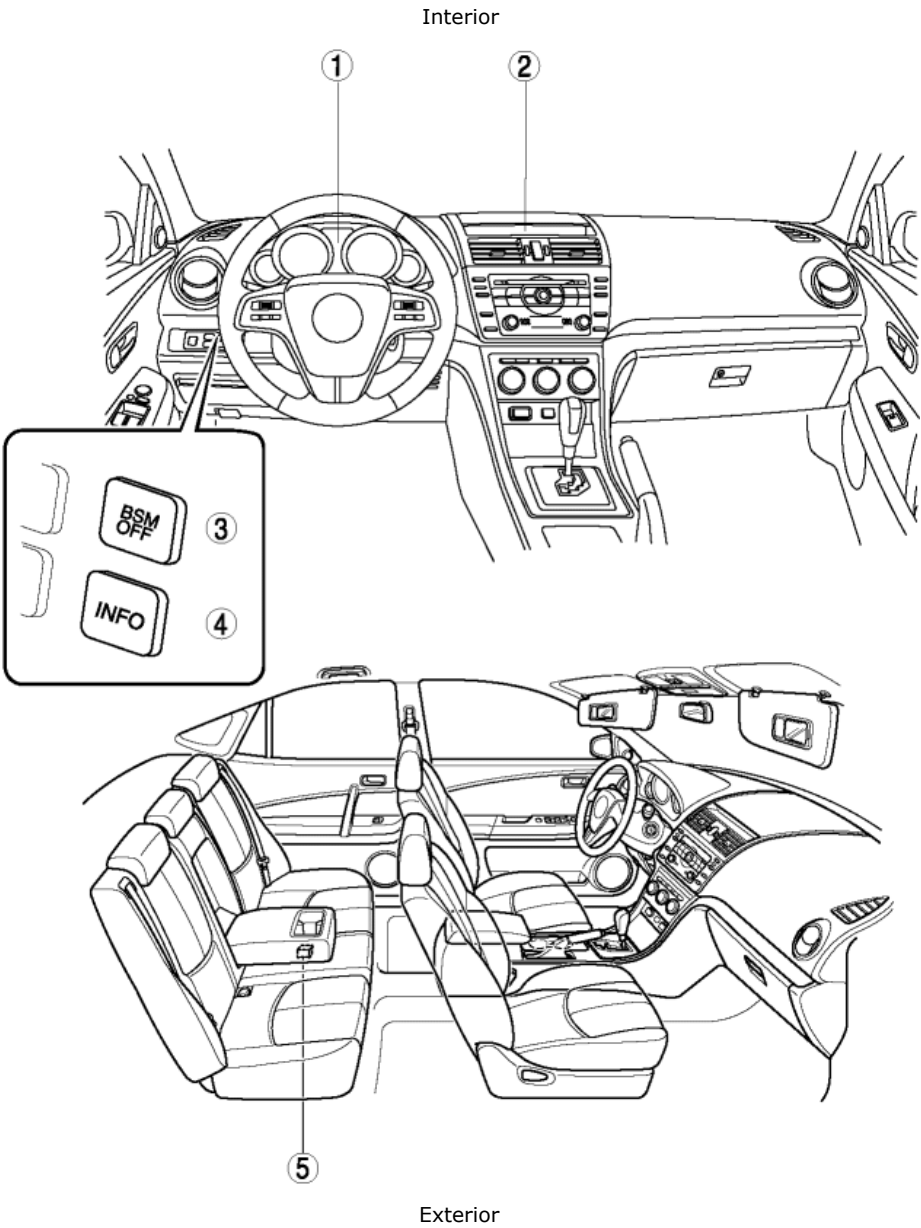

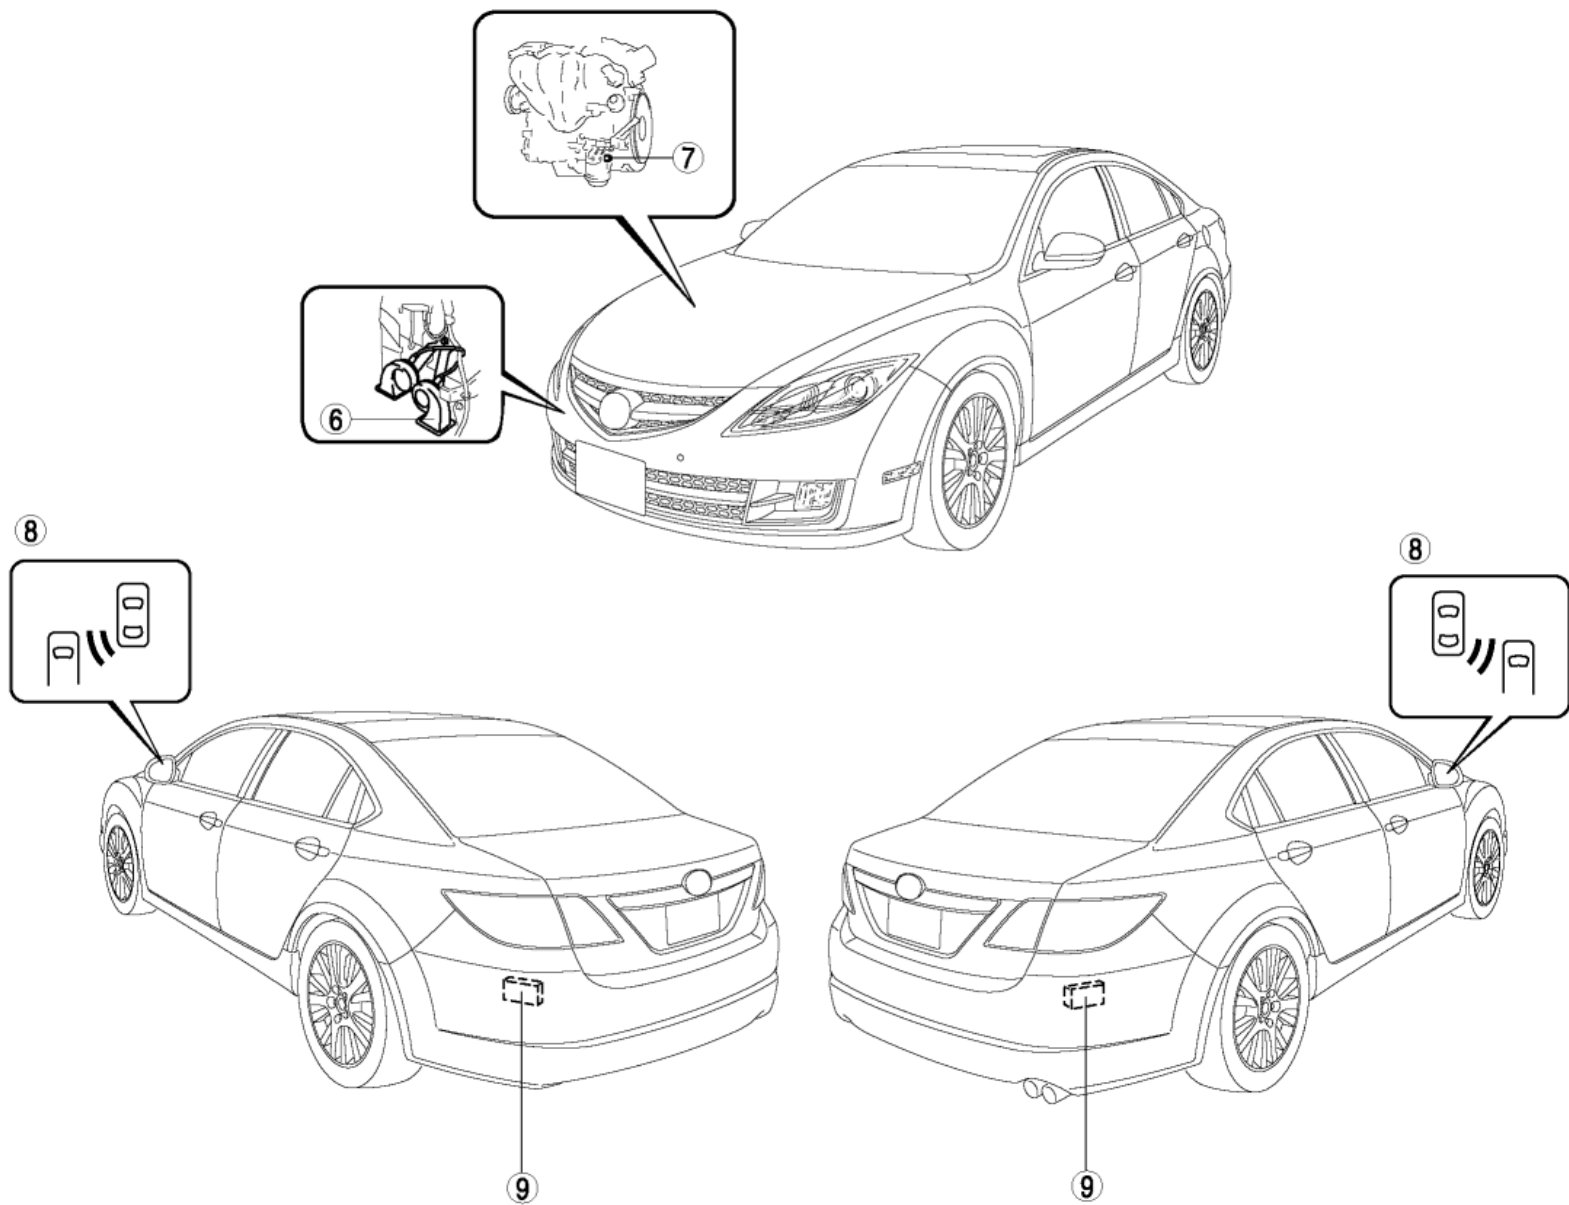

1Instrument cluster
(See INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.)
(See INSTRUMENT CLUSTER DISASSEMBLY/ ASSEMBLY.)
(See INSTRUMENT CLUSTER INSPECTION.)
(See INSTRUMENT CLUSTER CONFIGURATION.)
(See INSTRUMENTATION/ DRIVER INFO. PERSONALIZATION FEATURES SETTING PROCEDURE.)
2Information display
(See INFORMATION DISPLAY REMOVAL/ INSTALLATION.)
(See INFORMATION DISPLAY INPUT/ OUTPUT CHECK MODE.)
3BSM OFF switch
(See BLIND SPOT MONITORING (BSM) OFF SWITCH REMOVAL/ INSTALLATION.)
(See BLIND SPOT MONITORING (BSM) OFF SWITCH INSPECTION.)
4INFO switch
(See INFO SWITCH REMOVAL/ INSTALLATION.)

	(See INFO SWITCH INSPECTION.)
5	Fuel gauge sender unit (See FUEL GAUGE SENDER UNIT REMOVAL/ INSTALLATION.) (See FUEL GAUGE SENDER UNIT INSPECTION.)
6	Horn (See HORN REMOVAL/ INSTALLATION.)
7	Oil pressure switch (See OIL PRESSURE SWITCH INSPECTION.)
8	BSM indicator light (See BLIND SPOT MONITORING (BSM) INDICATOR LIGHT REMOVAL/ INSTALLATION.) (See BLIND SPOT MONITORING (BSM) INDICATOR LIGHT INSPECTION.)
9	BSM control module (See BLIND SPOT MONITORING (BSM) CONTROL MODULE REMOVAL/ INSTALLATION.) (See BLIND SPOT MONITORING (BSM) CONTROL MODULE INSPECTION.) (See BLIND SPOT MONITORING (BSM) BRACKET REMOVAL/ INSTALLATION.) (See BLIND SPOT MONITORING (BSM) RADAR TEST.) (See INSTRUMENTATION/ DRIVER INFO. PERSONALIZATION FEATURES SETTING PROCEDURE.)