

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

FUEL GAUGE SENDER UNIT REMOVAL/ INSTALLATION

1. Remove the fuel gauge sender unit. (See [FUEL PUMP UNIT DISASSEMBLY/ ASSEMBLY \[MZI 3.7 V6\]](#) .) (See [FUEL PUMP UNIT DISASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#) .)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Body and Accessories

FUEL GAUGE SENDER UNIT REMOVAL/ INSTALLATION

1. Remove the fuel gauge sender unit. (See [FUEL PUMP UNIT DISASSEMBLY/ ASSEMBLY \[MZI 3.7 V6\]](#) .) (See [FUEL PUMP UNIT DISASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#) .)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.