


2012 - Mazda6 - Body and Accessories

BLIND SPOT MONITORING (BSM) OFF SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Front scuff plate (Driver side) (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - b. Front side trim (Driver side) (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - c. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - d. Decoration panel (Driver side) (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - e. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
 - f. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
 - g. Lower panel (Driver side) (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
3. Remove the BSM OFF switch.

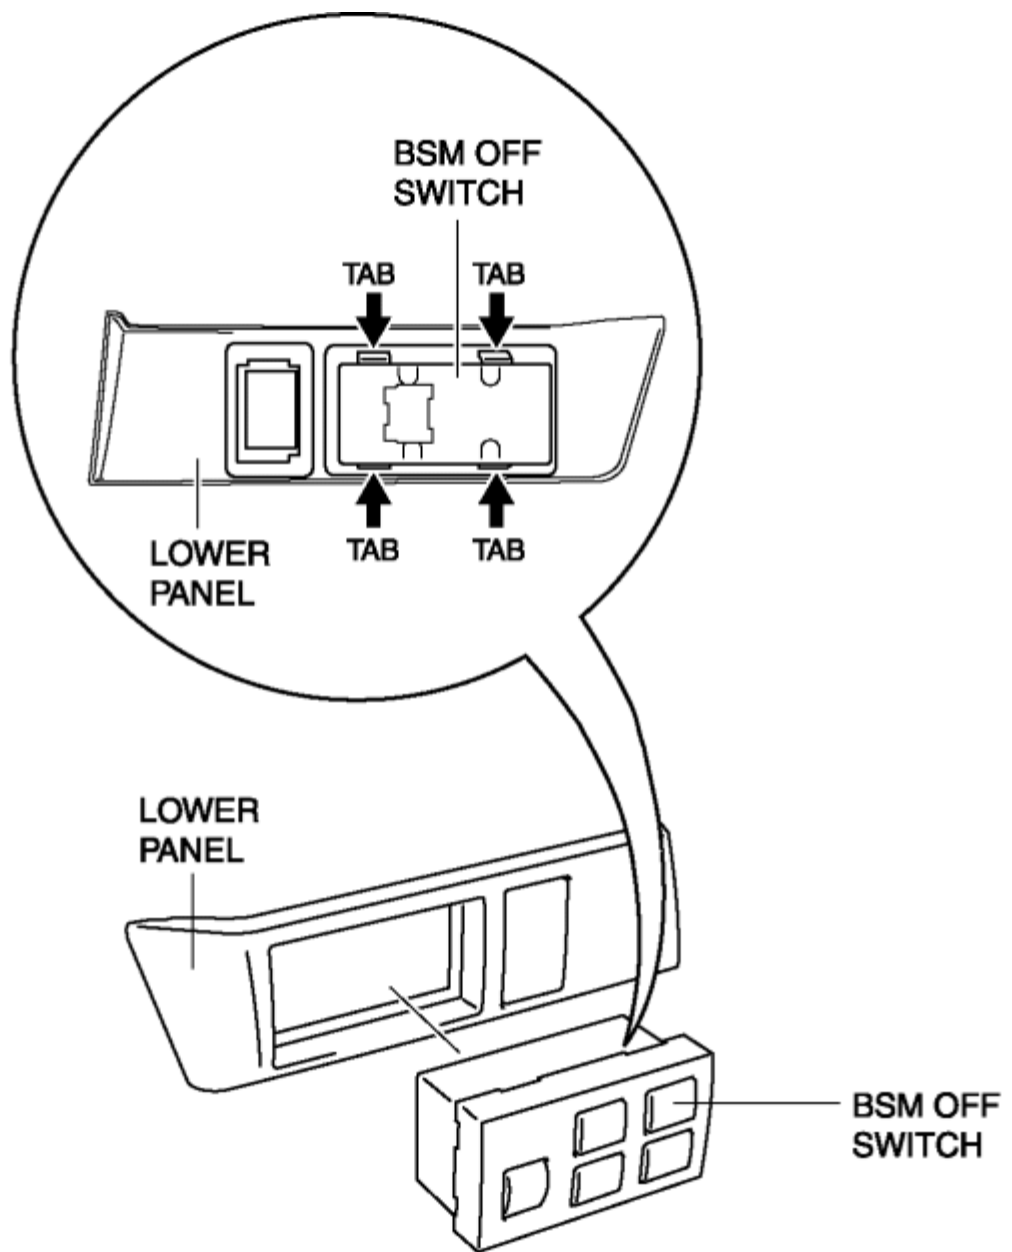

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

BLIND SPOT MONITORING (BSM) OFF SWITCH REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - a. Front scuff plate (Driver side) (See [FRONT SCUFF PLATE REMOVAL/ INSTALLATION.](#))
 - b. Front side trim (Driver side) (See [FRONT SIDE TRIM REMOVAL/ INSTALLATION.](#))
 - c. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - d. Decoration panel (Driver side) (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - e. Hood release lever (See [HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.](#))
 - f. Meter hood (See [METER HOOD REMOVAL/ INSTALLATION.](#))
 - g. Lower panel (Driver side) (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
3. Remove the BSM OFF switch.

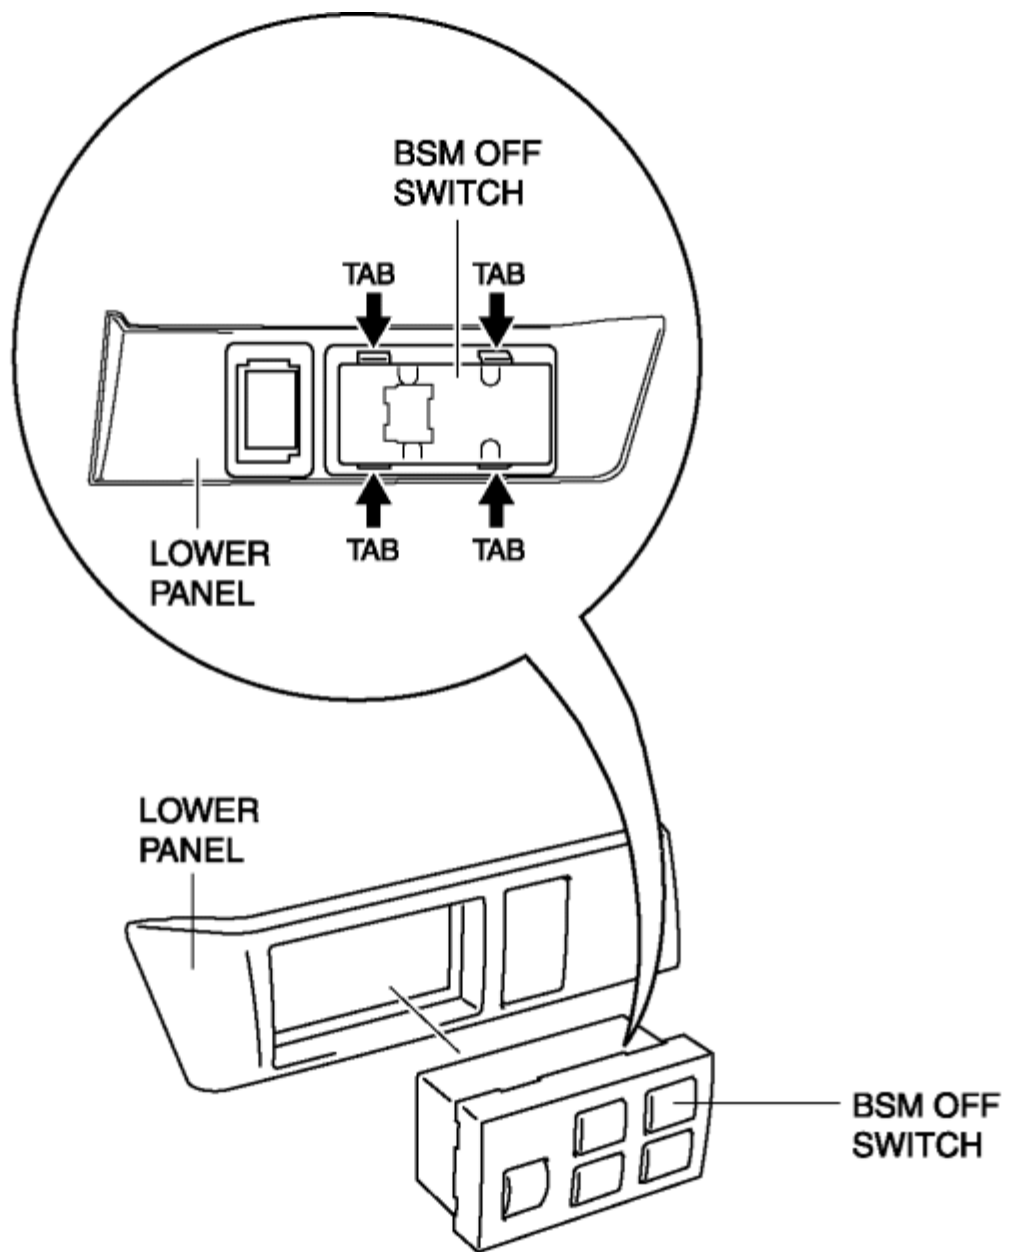

4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.