


2012 - Mazda6 - Body and Accessories

BLIND SPOT MONITORING (BSM) OFF SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. Front scuff plate (Driver side) (See FRONT SCUFF PLATE REMOVAL/ INSTALLATION.)
 - b. Front side trim (Driver side) (See FRONT SIDE TRIM REMOVAL/ INSTALLATION.)
 - c. Upper panel (See UPPER PANEL REMOVAL/ INSTALLATION.)
 - d. Decoration panel (Driver side) (See DECORATION PANEL REMOVAL/ INSTALLATION.)
 - e. Hood release lever (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
 - f. Meter hood (See METER HOOD REMOVAL/ INSTALLATION.)
 - g. Lower panel (Driver side) (See LOWER PANEL REMOVAL/ INSTALLATION.)
 - h. BSM OFF switch (See BLIND SPOT MONITORING (BSM) OFF SWITCH REMOVAL/ INSTALLATION.)
- 3. Verify that the continuity between the BSM OFF switch terminals is as indicated in the table.

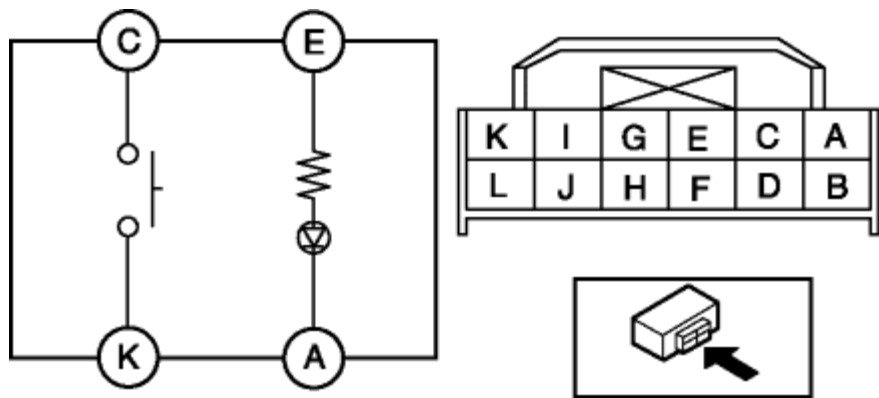

- If not as indicated in the table, replace the BSM OFF switch.

○—○ : CONTINUITY

SWITCH POSITION	TERMINAL	
	C	K
Switch released		
Switch pressed	○—○	○—○

- 4. Apply battery positive voltage to BSM OFF switch terminal E, and connect terminal A to

ground.

5. Verify that the LED illuminates.

- If there is any malfunction, replace the BSM OFF switch.

[< Previous](#) [Next >](#)


© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)

2012 - Mazda6 - Body and Accessories

BLIND SPOT MONITORING (BSM) OFF SWITCH INSPECTION

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. Front scuff plate (Driver side) (See FRONT SCUFF PLATE REMOVAL/ INSTALLATION.)
 - b. Front side trim (Driver side) (See FRONT SIDE TRIM REMOVAL/ INSTALLATION.)
 - c. Upper panel (See UPPER PANEL REMOVAL/ INSTALLATION.)
 - d. Decoration panel (Driver side) (See DECORATION PANEL REMOVAL/ INSTALLATION.)
 - e. Hood release lever (See HOOD LATCH AND RELEASE LEVER REMOVAL/ INSTALLATION.)
 - f. Meter hood (See METER HOOD REMOVAL/ INSTALLATION.)
 - g. Lower panel (Driver side) (See LOWER PANEL REMOVAL/ INSTALLATION.)
 - h. BSM OFF switch (See BLIND SPOT MONITORING (BSM) OFF SWITCH REMOVAL/ INSTALLATION.)
- 3. Verify that the continuity between the BSM OFF switch terminals is as indicated in the table.

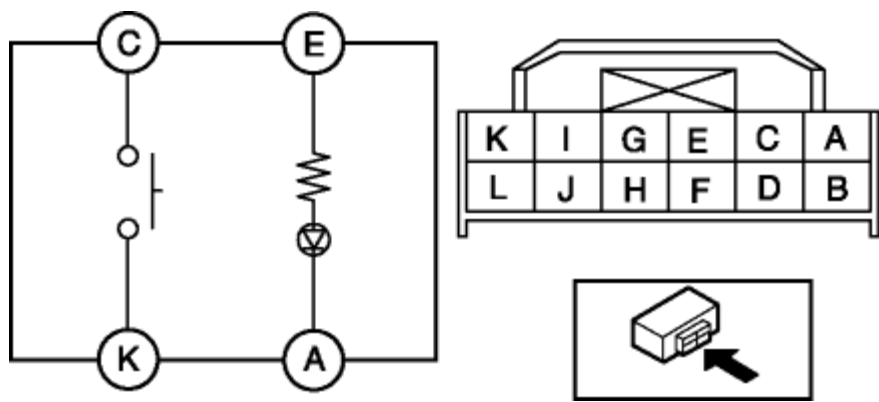

- If not as indicated in the table, replace the BSM OFF switch.

○—○ : CONTINUITY

SWITCH POSITION	TERMINAL	
	C	K
Switch released		
Switch pressed	○—○	○—○

- 4. Apply battery positive voltage to BSM OFF switch terminal E, and connect terminal A to

ground.

5. Verify that the LED illuminates.

- If there is any malfunction, replace the BSM OFF switch.

[< Previous](#) [Next >](#)

© 2012 Mazda North American Operations, U.S.A.

[Back to Top](#)