


2012 - Mazda6 - Body and Accessories

BLIND SPOT MONITORING (BSM) BRACKET REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the rear combination light. (See [REAR COMBINATION LIGHT REMOVAL/ INSTALLATION.](#))
3. Remove the rear bumper. (See [REAR BUMPER REMOVAL/ INSTALLATION.](#))
4. Remove the BSM control module. (See [BLIND SPOT MONITORING \(BSM\) CONTROL MODULE REMOVAL/ INSTALLATION.](#))
5. Remove the nuts.

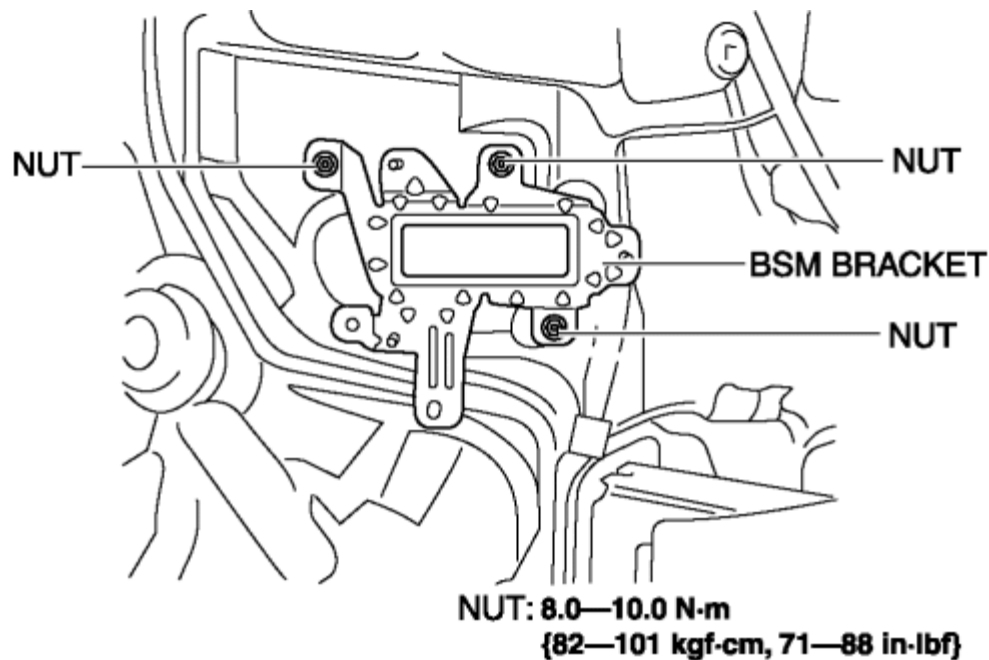


6. Remove the BSM bracket.
7. Install in the reverse order of removal.
8. Perform the blind spot monitoring radar test. (See [BLIND SPOT MONITORING \(BSM\) RADAR TEST.](#))

2012 - Mazda6 - Body and Accessories

BLIND SPOT MONITORING (BSM) BRACKET REMOVAL/ INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the rear combination light. (See [REAR COMBINATION LIGHT REMOVAL/ INSTALLATION.](#))
3. Remove the rear bumper. (See [REAR BUMPER REMOVAL/ INSTALLATION.](#))
4. Remove the BSM control module. (See [BLIND SPOT MONITORING \(BSM\) CONTROL MODULE REMOVAL/ INSTALLATION.](#))
5. Remove the nuts.

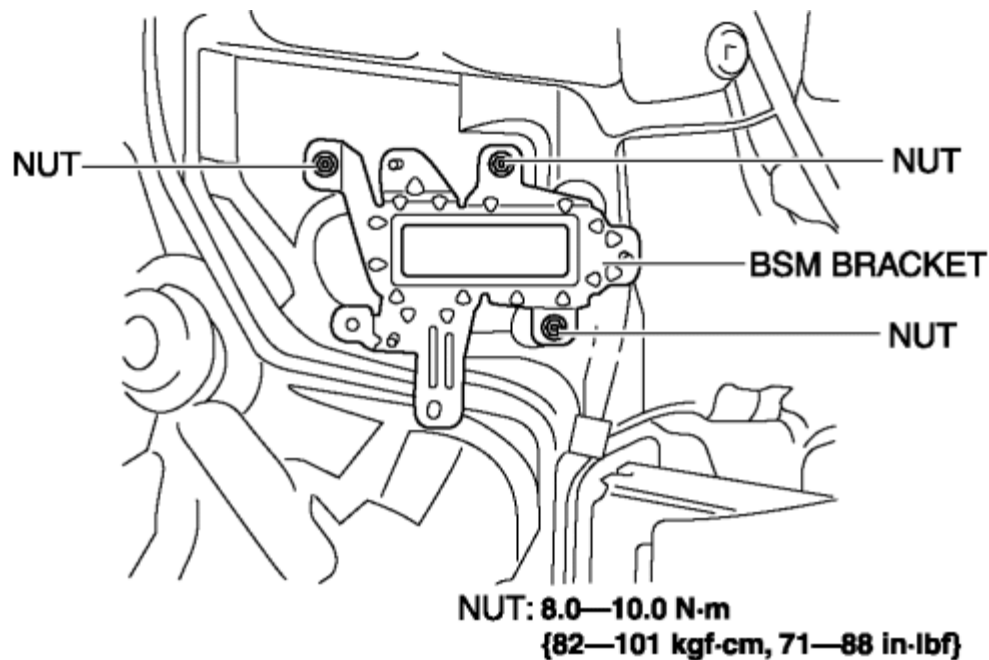

6. Remove the BSM bracket.
7. Install in the reverse order of removal.
8. Perform the blind spot monitoring radar test. (See [BLIND SPOT MONITORING \(BSM\) RADAR TEST.](#))