


2012 - Mazda6 - Body and Accessories

CONTROL SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE

NOTE:

- Use the IDS (laptop PC) because the PDS (Pocket PC) does not support the PERSONALIZATION FEATURES SETTING PROCEDURE.

1. Connect the M-MDS to the DLC-2.

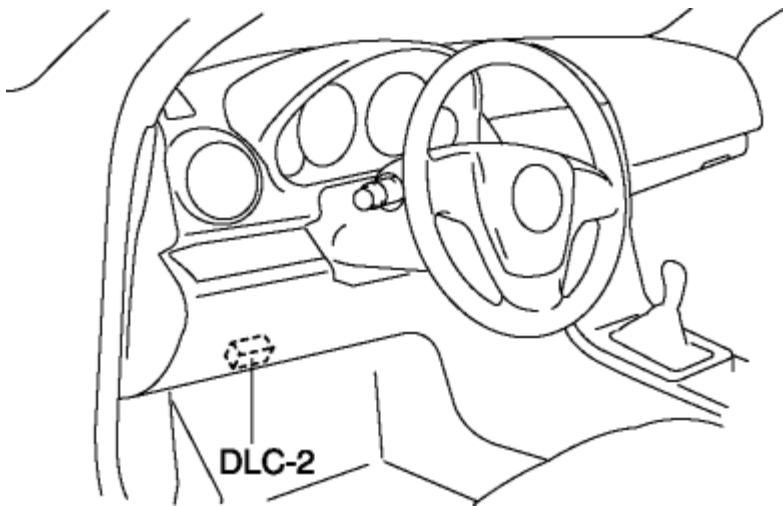

2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.

- When using the IDS (laptop PC)
 - Select the "Module Programming".
 - Select menu in the "BCM/GEM".

3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting content	Control unit
Smart turn	The 'turn light system' function can be set.	Disabled	Disabled / Enabled	BCM
2 stage door unlocking (with AKE)	2-step unlocking system can be set.	Enabled	Disabled / Enabled	BCM
Auto room lamp (when doors unlocked)	The automatic illumination function of the interior light when the doors are locked can be canceled.	Enabled	Disabled / Enabled	BCM


Auto relock timer (without AKE)	Auto re-lock operation timing can be changed.	30sec	Disabled, 30sec, 60sec, 90sec	BCM
Auto room lamp (when IG-Off)	The automatic illumination function of the interior light after the ignition is switched off can be canceled.	Enabled	Disabled / Enabled	BCM
Answer Back Buzzer	Answer back buzzer can be set to inoperable.	Enabled	Disabled / Enabled	BCM
Window closing/opening with advanced-key/transmitter	Exterior open/close function can be set to inoperable.	Enabled	Disabled / Enabled	BCM
Room lamp timer	The elapsed time between the doors closing and the interior light turning off can be adjusted.	15sec	15sec, 7.5sec, 30sec, 60sec	BCM
Room Lamp Battery Saver Timer	The elapsed time for the interior light to automatically turn off when a door is ajar can be adjusted.	30min	30min / 10min	BCM
Window closing with key	Exterior close function can be set to inoperable.	Enabled	Disabled / Enabled	BCM
Window opening with key	Exterior open function can be set to inoperable.	Enabled	Disabled / Enabled	BCM

2012 - Mazda6 - Body and Accessories

CONTROL SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE

NOTE:

- Use the IDS (laptop PC) because the PDS (Pocket PC) does not support the PERSONALIZATION FEATURES SETTING PROCEDURE.
1. Connect the M-MDS to the DLC-2.

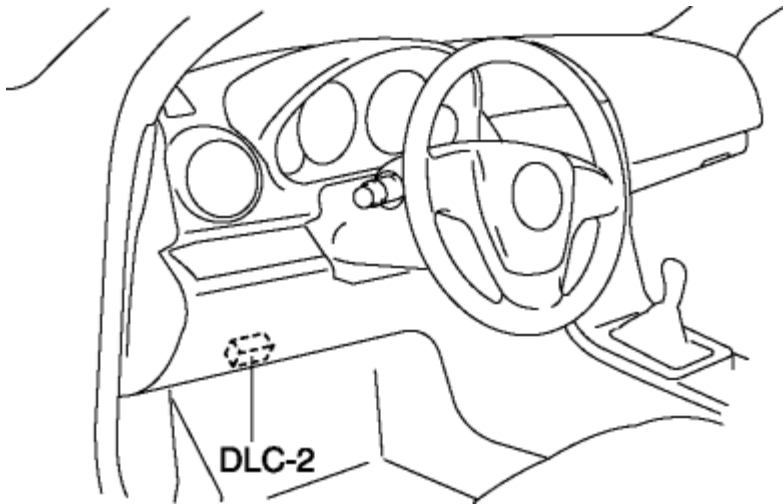

2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
 - When using the IDS (laptop PC)
 - Select the "Module Programming".
 - Select menu in the "BCM/GEM".
3. Select an item name, and then select option.

M-MDS display	Function	Initial setting	Setting content	Control unit
Smart turn	The 'turn light system' function can be set.	Disabled	Disabled / Enabled	BCM
2 stage door unlocking (with AKE)	2-step unlocking system can be set.	Enabled	Disabled / Enabled	BCM
Auto room lamp (when doors unlocked)	The automatic illumination function of the interior light when the doors are locked can be canceled.	Enabled	Disabled / Enabled	BCM

Auto relock timer (without AKE)	Auto re-lock operation timing can be changed.	30sec	Disabled, 30sec, 60sec, 90sec	BCM
Auto room lamp (when IG-Off)	The automatic illumination function of the interior light after the ignition is switched off can be canceled.	Enabled	Disabled / Enabled	BCM
Answer Back Buzzer	Answer back buzzer can be set to inoperable.	Enabled	Disabled / Enabled	BCM
Window closing/opening with advanced-key/transmitter	Exterior open/close function can be set to inoperable.	Enabled	Disabled / Enabled	BCM
Room lamp timer	The elapsed time between the doors closing and the interior light turning off can be adjusted.	15sec	15sec, 7.5sec, 30sec, 60sec	BCM
Room Lamp Battery Saver Timer	The elapsed time for the interior light to automatically turn off when a door is ajar can be adjusted.	30min	30min / 10min	BCM
Window closing with key	Exterior close function can be set to inoperable.	Enabled	Disabled / Enabled	BCM
Window opening with key	Exterior open function can be set to inoperable.	Enabled	Disabled / Enabled	BCM