


2012 - Mazda6 - Body and Accessories

BODY CONTROL MODULE (BCM) CONFIGURATION

NOTE:

- Use the IDS (laptop PC) because the PDS (Pocket PC) does not support the BCM CONFIGURATION.
1. Connect the M-MDS to DLC-2.

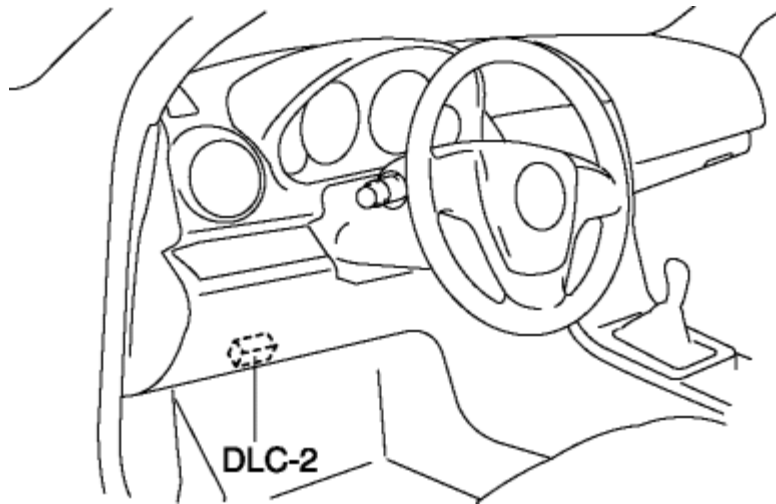


2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
 - When using the IDS (laptop PC)
 1. Select "Module Programming".
3. Then, select items from the screen menu in the following order.
 1. Select "Programmable Module Installation".
 2. Select "BCM/GEM".
4. Perform the configuration according to the directions on the screen.
5. Retrieve DTCs by the M-MDS, then verify that there is no DTC present.
 - If a DTC(s) is detected, perform the applicable DTC inspection. (See [DTC TABLE \[BCM\]](#).)

2012 - Mazda6 - Body and Accessories

BODY CONTROL MODULE (BCM) CONFIGURATION

NOTE:

- Use the IDS (laptop PC) because the PDS (Pocket PC) does not support the BCM CONFIGURATION.
1. Connect the M-MDS to DLC-2.

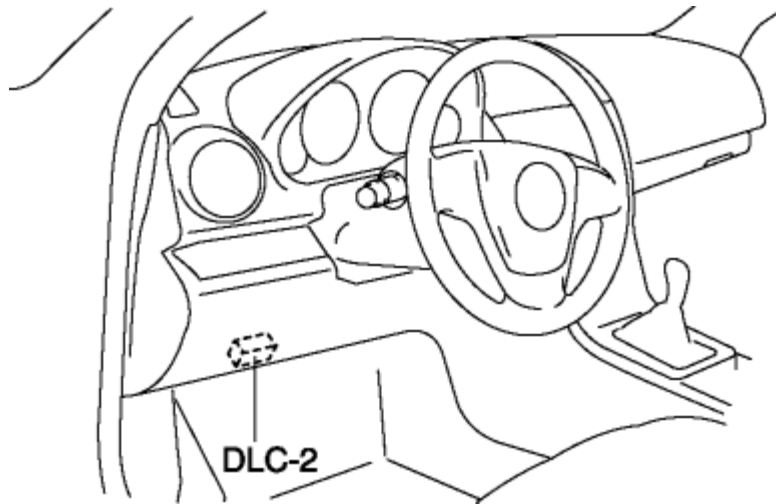

2. After the vehicle is identified, select the following items from the initial screen of the M-MDS.
 - When using the IDS (laptop PC)
 1. Select "Module Programming".
3. Then, select items from the screen menu in the following order.
 1. Select "Programmable Module Installation".
 2. Select "BCM/GEM".
4. Perform the configuration according to the directions on the screen.
5. Retrieve DTCs by the M-MDS, then verify that there is no DTC present.
 - If a DTC(s) is detected, perform the applicable DTC inspection. (See [DTC TABLE \[BCM\]](#).)