

Workshop Manual - Transmission/ Transaxle

2012 - Mazda6

On-Board Diagnostics

- ON-BOARD DIAGNOSTIC SYSTEM WIRING DIAGRAM [FS5A-EL]
- ON-BOARD DIAGNOSTIC SYSTEM DTC INSPECTION [FS5A-EL]
- ON-BOARD DIAGNOSTIC SYSTEM DTC TABLE [FS5A-EL]
- DTC P06B8:00 [FS5A-EL]
- DTC P0706:00 [FS5A-EL]
- DTC P0707:00 [FS5A-EL]
- DTC P0708:00 [FS5A-EL]
- DTC P0711:00 [FS5A-EL]
- DTC P0712:00 [FS5A-EL]
- DTC P0713:00 [FS5A-EL]
- DTC P0715:00 [FS5A-EL]
- DTC P0720:00 [FS5A-EL]
- DTC P0731:00 [FS5A-EL]
- DTC P0732:00 [FS5A-EL]
- DTC P0733:00 [FS5A-EL]
- DTC P0734:00 [FS5A-EL]
- DTC P0735:00 [FS5A-EL]
- DTC P0741:00 [FS5A-EL]
- DTC P0742:00 [FS5A-EL]
- DTC P0744:00 [FS5A-EL]
- DTC P0745:00 [FS5A-EL]
- DTC P0751:00 [FS5A-EL]
- DTC P0752:00 [FS5A-EL]
- DTC P0753:00 [FS5A-EL]
- DTC P0756:00 [FS5A-EL]
- DTC P0757:00 [FS5A-EL]
- DTC P0758:00 [FS5A-EL]
- DTC P0761:00 [FS5A-EL]
- DTC P0762:00 [FS5A-EL]
- DTC P0763:00 [FS5A-EL]
- DTC P0766:00 [FS5A-EL]
- DTC P0767:00 [FS5A-EL]
- DTC P0768:00 [FS5A-EL]
- DTC P0771:00 [FS5A-EL]
- DTC P0772:00 [FS5A-EL]
- DTC P0773:00 [FS5A-EL]
- DTC P0777:00 [FS5A-EL]
- DTC P0778:00 [FS5A-EL]
- DTC P0791:00 [FS5A-EL]
- DTC P0841:00 [FS5A-EL]

- DTC P0882:00 [FS5A-EL]
- DTC P0883:00 [FS5A-EL]
- DTC P0884:00 [FS5A-EL]
- DTC P0894:00 [FS5A-EL]
- DTC P1712:00 [FS5A-EL]
- DTC P1783:00 [FS5A-EL]
- DTC P2707:00 [FS5A-EL]
- DTC P2708:00 [FS5A-EL]
- DTC P2709:00 [FS5A-EL]
- DTC U0401:00 [FS5A-EL]
- DTC U0415:00 [FS5A-EL]
- ON-BOARD DIAGNOSTIC SYSTEM PID/ DATA MONITOR INSPECTION [FS5A-EL]
- ON-BOARD DIAGNOSTIC SYSTEM SIMULATION INSPECTION [FS5A-EL]

On-Board Diagnostics

- ON-BOARD DIAGNOSTIC SYSTEM WIRING DIAGRAM [AY6A-EL]
- ON-BOARD DIAGNOSTIC SYSTEM DTC INSPECTION [AY6A-EL]
- ON-BOARD DIAGNOSTIC SYSTEM DTC TABLE [AY6A-EL]
- DTC P0220:00 [AY6A-EL]
- DTC P0601:00 [AY6A-EL]
- DTC P0603:00 [AY6A-EL]
- DTC P0604:00 [AY6A-EL]
- DTC P0702:00 [AY6A-EL]
- DTC P0706:00 [AY6A-EL]
- DTC P0707:00 [AY6A-EL]
- DTC P0708:00 [AY6A-EL]
- DTC P0711:00 [AY6A-EL]
- DTC P0712:00 [AY6A-EL]
- DTC P0713:00 [AY6A-EL]
- DTC P0715:00 [AY6A-EL]
- DTC P0717:00 [AY6A-EL]
- DTC P0720:00 [AY6A-EL]
- DTC P0722:00 [AY6A-EL]
- DTC P0727:00 [AY6A-EL]
- DTC P0729:00 [AY6A-EL]
- DTC P072D:00 [AY6A-EL]
- DTC P0730:00 [AY6A-EL]
- DTC P0731:00 [AY6A-EL]
- DTC P0732:00 [AY6A-EL]
- DTC P0733:00 [AY6A-EL]
- DTC P0734:00 [AY6A-EL]
- DTC P0735:00 [AY6A-EL]
- DTC P073F:00 [AY6A-EL]
- DTC P074A:00 [AY6A-EL]
- DTC P074B:00 [AY6A-EL]
- DTC P074C:00 [AY6A-EL]
- DTC P074D:00 [AY6A-EL]
- DTC P074E:00 [AY6A-EL]
- DTC P0762:00 [AY6A-EL]
- DTC P0766:00 [AY6A-EL]
- DTC P0771:00 [AY6A-EL]
- DTC P0817:00 [AY6A-EL]
- DTC P0819:00 [AY6A-EL]
- DTC P0867:00 [AY6A-EL]
- DTC P0882:00 [AY6A-EL]
- DTC P0883:00 [AY6A-EL]

- DTC P0942:00 [AY6A-EL]
- DTC P0961:00 [AY6A-EL]
- DTC P0962:00 [AY6A-EL]
- DTC P0963:00 [AY6A-EL]
- DTC P0973:00 [AY6A-EL]
- DTC P0974:00 [AY6A-EL]
- DTC P0976:00 [AY6A-EL]
- DTC P0977:00 [AY6A-EL]
- DTC P0978:00 [AY6A-EL]
- DTC P0979:00 [AY6A-EL]
- DTC P0980:00 [AY6A-EL]
- DTC P0981:00 [AY6A-EL]
- DTC P0982:00 [AY6A-EL]
- DTC P0983:00 [AY6A-EL]
- DTC P0984:00 [AY6A-EL]
- DTC P0985:00 [AY6A-EL]
- DTC P0986:00 [AY6A-EL]
- DTC P0997:00 [AY6A-EL]
- DTC P0998:00 [AY6A-EL]
- DTC P0999:00 [AY6A-EL]
- DTC P1700:00 [AY6A-EL]
- DTC P1719:00 [AY6A-EL]
- DTC P1738:00 [AY6A-EL]
- DTC P1783:00 [AY6A-EL]
- DTC P1919:00 [AY6A-EL]
- DTC P2544:00 [AY6A-EL]
- DTC P2708:00 [AY6A-EL]
- DTC P2757:00 [AY6A-EL]
- DTC P2762:00 [AY6A-EL]
- DTC P2763:00 [AY6A-EL]
- DTC P2764:00 [AY6A-EL]
- DTC P2806:00 [AY6A-EL]
- DTC U0415:00 [AY6A-EL]
- ON-BOARD DIAGNOSTIC SYSTEM PID/ DATA MONITOR INSPECTION [AY6A-EL]
- ON-BOARD DIAGNOSTIC SYSTEM SIMULATION INSPECTION [AY6A-EL]

Symptom Troubleshooting

- AUTOMATIC TRANSAXLE CONTROL SYSTEM WIRING DIAGRAM [FS5A-EL]
- FOREWORD [FS5A-EL]
- BASIC INSPECTION [FS5A-EL]
- SYMPTOM TROUBLESHOOTING ITEM TABLE [FS5A-EL]
- QUICK DIAGNOSIS CHART [FS5A-EL]
- NO.1 VEHICLE DOES NOT MOVE IN D, M OR IN R POSITION [FS5A-EL]
- NO.2 VEHICLE MOVES IN N POSITION [FS5A-EL]
- NO.3 VEHICLE MOVES IN P POSITION, OR PARKING GEAR DOES NOT DISENGAGE WHEN P IS DISENGAGED [FS5A-EL]
- NO.4 EXCESSIVE CREEP [FS5A-EL]
- NO.5 NO CREEP AT ALL [FS5A-EL]
- NO.6 LOW MAXIMUM SPEED AND POOR ACCELERATION [FS5A-EL]
- NO.7 NO SHIFTING [FS5A-EL]
- NO.8 DOES NOT SHIFT TO 5GR [FS5A-EL]
- NO.9 ABNORMAL SHIFTING [FS5A-EL]
- NO.10 FREQUENT SHIFTING [FS5A-EL]
- NO.11 SHIFT POINT IS HIGH OR LOW [FS5A-EL]
- NO.12 TORQUE CONVERTER CLUTCH (TCC) NON-OPERATION [FS5A-EL]
- NO.13 NO KICKDOWN [FS5A-EL]

- NO.14 ENGINE FLARES UP OR SLIPS WHEN UPSHIFTING OR DOWNSHIFTING [FS5A-EL]
- NO.15 ENGINE FLARES UP OR SLIPS WHEN ACCELERATING VEHICLE [FS5A-EL]
- NO.16 JUDDER UPON TORQUE CONVERTER CLUTCH (TCC) OPERATION [FS5A-EL]
- NO.17 EXCESSIVE SHIFT SHOCK FROM N TO D OR N TO R POSITION [FS5A-EL]
- NO.18 EXCESSIVE SHIFT SHOCK IS FELT WHEN UPSHIFTING AND DOWNSHIFTING [FS5A-EL]
- NO.19 EXCESSIVE SHIFT SHOCK ON TORQUE CONVERTER CLUTCH (TCC) [FS5A-EL]
- NO.20 NOISE OCCURS AT IDLE WHEN VEHICLE IS STOPPED IN ALL POSITIONS [FS5A-EL]
- NO.21 NOISE OCCURS AT IDLE WHEN VEHICLE IS STOPPED IN D, M OR IN R POSITION [FS5A-EL]
- NO.22 NO ENGINE BRAKING IN 1GR POSITION OF M POSITION [FS5A-EL]
- NO.23 TRANSAXLE OVERHEATS [FS5A-EL]
- NO.24 ENGINE STALLS WHEN SHIFTED TO D, M OR IN R POSITION [FS5A-EL]
- NO.25 ENGINE STALLS WHEN DRIVING AT SLOW SPEEDS OR STOPPING [FS5A-EL]
- NO.26 STARTER DOES NOT WORK [FS5A-EL]
- NO.27 GEAR POSITION INDICATOR LIGHT DOES NOT ILLUMINATE IN M POSITION [FS5A-EL]
- NO.28 GEAR POSITION INDICATOR LIGHT ILLUMINATES IN P, R, N AND D POSITION [FS5A-EL]
- NO.29 DOES NOT UPSHIFT IN M POSITION [FS5A-EL]
- NO.30 DOES NOT DOWNSHIFT IN M POSITION [FS5A-EL]
- NO.31 M POSITION INDICATOR LIGHT DOES NOT ILLUMINATE IN M POSITION/ M POSITION INDICATOR LIGHT ILLUMINATES IN D POSITION [FS5A-EL]
- NO.32 ATF SEEPING FROM AUTOMATIC TRANSAXLE [FS5A-EL]

Symptom Troubleshooting

- AUTOMATIC TRANSAXLE CONTROL SYSTEM WIRING DIAGRAM [AY6A-EL]
- FOREWORD [AY6A-EL]
- BASIC INSPECTION [AY6A-EL]
- SYMPTOM TROUBLESHOOTING ITEM TABLE [AY6A-EL]
- QUICK DIAGNOSIS CHART [AY6A-EL]
- NO.1 VEHICLE DOES NOT MOVE IN D OR IN R POSITION [AY6A-EL]
- NO.2 VEHICLE MOVES IN N POSITION [AY6A-EL]
- NO.3 VEHICLE MOVES IN P POSITION, OR PARKING GEAR DOES NOT DISENGAGE WHEN P IS DISENGAGED [AY6A-EL]
- NO.4 EXCESSIVE CREEP [AY6A-EL]
- NO.5 NO CREEP AT ALL [AY6A-EL]
- NO.6 LOW MAXIMUM SPEED AND POOR ACCELERATION [AY6A-EL]
- NO.7 NO SHIFTING [AY6A-EL]
- NO.8 DOES NOT SHIFT TO 6GR [AY6A-EL]
- NO.9 ABNORMAL SHIFTING [AY6A-EL]
- NO.10 FREQUENT SHIFTING [AY6A-EL]
- NO.11 SHIFT POINT IS HIGH OR LOW [AY6A-EL]
- NO.12 TORQUE CONVERTER CLUTCH (TCC) NON-OPERATION [AY6A-EL]
- NO.13 NO KICKDOWN [AY6A-EL]
- NO.14 ENGINE FLARES UP OR SLIPS WHEN UPSHIFTING OR DOWNSHIFTING [AY6A-EL]
- NO.15 ENGINE FLARES UP OR SLIPS WHEN ACCELERATING VEHICLE [AY6A-EL]
- NO.16 JUDDER UPON TORQUE CONVERTER CLUTCH (TCC) OPERATION [AY6A-EL]
- NO.17 EXCESSIVE SHIFT SHOCK FROM N TO D OR N TO R POSITION [AY6A-EL]
- NO.18 EXCESSIVE SHIFT SHOCK IS GIVEN WHEN UPSHIFTING AND DOWNSHIFTING [AY6A-EL]
- NO.19 EXCESSIVE SHIFT SHOCK ON TORQUE CONVERTER CLUTCH (TCC) [AY6A-EL]
- NO.20 NOISE OCCURS AT IDLE WHEN VEHICLE IS STOPPED IN ALL POSITIONS [AY6A-EL]
- NO.21 NOISE OCCURS AT IDLE WHEN VEHICLE IS STOPPED IN D OR IN R POSITION [AY6A-EL]
- NO.22 NO ENGINE BRAKING IN 1GR POSITION OF M POSITION [AY6A-EL]
- NO.23 TRANSAXLE OVERHEATS [AY6A-EL]
- NO.24 ENGINE STALLS WHEN SHIFTED TO D OR IN R POSITION [AY6A-EL]
- NO.25 ENGINE STALLS WHEN DRIVING AT SLOW SPEED OR STOPPING [AY6A-EL]
- NO.26 STARTER DOES NOT WORK [AY6A-EL]
- NO.27 GEAR POSITION INDICATOR LIGHT DOES NOT ILLUMINATE IN D OR M POSITION [AY6A-EL]
- NO.28 GEAR POSITION INDICATOR LIGHT ILLUMINATE IN P, R OR N POSITION [AY6A-EL]

- NO.29 DOES NOT UPSHIFT IN M POSITION [AY6A-EL]
- NO.30 DOES NOT DOWNSHIFT IN M POSITION [AY6A-EL]
- NO.31 M POSITION INDICATOR LIGHT DOES NOT ILLUMINATE IN M POSITION/ M POSITION INDICATOR LIGHT ILLUMINATES IN D POSITION [AY6A-EL]

Clutch

- CLUTCH LOCATION INDEX [G66M-R]
- CLUTCH FLUID INSPECTION [G66M-R]
- CLUTCH FLUID AIR BLEEDING/ REPLACEMENT [G66M-R]
- CLUTCH PEDAL INSPECTION/ ADJUSTMENT [G66M-R]
- CLUTCH PEDAL REMOVAL/ INSTALLATION [G66M-R]
- CLUTCH MASTER CYLINDER REMOVAL/ INSTALLATION [G66M-R]
- CLUTCH MASTER CYLINDER DISASSEMBLY/ ASSEMBLY [G66M-R]
- CLUTCH RELEASE CYLINDER REMOVAL/ INSTALLATION [G66M-R]
- CLUTCH RELEASE CYLINDER DISASSEMBLY/ ASSEMBLY [G66M-R]
- CLUTCH UNIT REMOVAL/ INSTALLATION [G66M-R]
- CLUTCH COVER INSPECTION [G66M-R]
- CLUTCH DISC INSPECTION [G66M-R]
- CLUTCH RELEASE COLLAR INSPECTION [G66M-R]
- PILOT BEARING INSPECTION [G66M-R]
- FLYWHEEL INSPECTION [G66M-R]

Manual Transaxle

- MANUAL TRANSAXLE LOCATION INDEX [G66M-R]
- NEUTRAL SWITCH REMOVAL/ INSTALLATION [G66M-R]
- BACK-UP LIGHT SWITCH REMOVAL/ INSTALLATION [G66M-R]
- TRANSAXLE OIL INSPECTION [G66M-R]
- TRANSAXLE OIL REPLACEMENT [G66M-R]
- OIL SEAL (DIFFERENTIAL) REPLACEMENT [G66M-R]
- MANUAL TRANSAXLE REMOVAL/ INSTALLATION [G66M-R]
- INSPECTION AFTER TRANSAXLE INSTALLATION [G66M-R]

Manual Transaxle Shift Mechanism

- MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX
- MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION

Automatic Transaxle

- AUTOMATIC TRANSAXLE LOCATION INDEX [FS5A-EL]
- MECHANICAL SYSTEM TEST [FS5A-EL]
- ROAD TEST [FS5A-EL]
- AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [FS5A-EL]
- AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [FS5A-EL]
- TRANSAXLE RANGE (TR) SWITCH INSPECTION [FS5A-EL]
- TRANSAXLE RANGE (TR) SWITCH ADJUSTMENT [FS5A-EL]
- TRANSAXLE RANGE (TR) SWITCH REMOVAL/ INSTALLATION [FS5A-EL]
- M POSITION SWITCH INSPECTION [FS5A-EL]
- M POSITION SWITCH REMOVAL/ INSTALLATION [FS5A-EL]
- UP SWITCH INSPECTION [FS5A-EL]
- UP SWITCH REMOVAL/ INSTALLATION [FS5A-EL]
- DOWN SWITCH INSPECTION [FS5A-EL]
- DOWN SWITCH REMOVAL/ INSTALLATION [FS5A-EL]
- TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR INSPECTION [FS5A-EL]
- TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/ INSTALLATION [FS5A-EL]
- OIL PRESSURE SWITCH INSPECTION [FS5A-EL]
- OIL PRESSURE SWITCH REMOVAL/ INSTALLATION [FS5A-EL]

- INPUT/ TURBINE SPEED SENSOR INSPECTION [FS5A-EL]
- INPUT/ TURBINE SPEED SENSOR REMOVAL/ INSTALLATION [FS5A-EL]
- INTERMEDIATE SENSOR INSPECTION [FS5A-EL]
- INTERMEDIATE SENSOR REMOVAL/ INSTALLATION [FS5A-EL]
- VEHICLE SPEED SENSOR (VSS) INSPECTION [FS5A-EL]
- VEHICLE SPEED SENSOR (VSS) REMOVAL/ INSTALLATION [FS5A-EL]
- SOLENOID VALVE INSPECTION [FS5A-EL]
- SOLENOID VALVE REMOVAL/ INSTALLATION [FS5A-EL]
- TCM INSPECTION [FS5A-EL]
- TCM REMOVAL/ INSTALLATION [FS5A-EL]
- AUTOMATIC TRANSAXLE REMOVAL/ INSTALLATION [FS5A-EL]
- DRIVE PLATE REMOVAL/ INSTALLATION [FS5A-EL]
- OIL SEAL REPLACEMENT [FS5A-EL]
- OIL COOLER REMOVAL/ INSTALLATION [FS5A-EL]
- OIL COOLER FLUSHING [FS5A-EL]
- CONTROL VALVE BODY REMOVAL/ INSTALLATION [FS5A-EL]

Automatic Transaxle

- AUTOMATIC TRANSAXLE LOCATION INDEX [AY6A-EL]
- MECHANICAL SYSTEM TEST [AY6A-EL]
- ROAD TEST [AY6A-EL]
- AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [AY6A-EL]
- AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [AY6A-EL]
- AUTOMATIC TRANSAXLE FLUID (ATF) LEVEL ADJUSTMENT [AY6A-EL]
- TRANSAXLE RANGE (TR) SWITCH INSPECTION [AY6A-EL]
- TRANSAXLE RANGE (TR) SWITCH REMOVAL/ INSTALLATION [AY6A-EL]
- M POSITION SWITCH INSPECTION [AY6A-EL]
- M POSITION SWITCH REMOVAL/ INSTALLATION [AY6A-EL]
- UP SWITCH INSPECTION [AY6A-EL]
- UP SWITCH REMOVAL/ INSTALLATION [AY6A-EL]
- DOWN SWITCH INSPECTION [AY6A-EL]
- DOWN SWITCH REMOVAL/ INSTALLATION [AY6A-EL]
- TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR INSPECTION [AY6A-EL]
- TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/ INSTALLATION [AY6A-EL]
- INPUT/ TURBINE SPEED SENSOR INSPECTION [AY6A-EL]
- INPUT/ TURBINE SPEED SENSOR REMOVAL/ INSTALLATION [AY6A-EL]
- VEHICLE SPEED SENSOR (VSS) INSPECTION [AY6A-EL]
- VEHICLE SPEED SENSOR (VSS) REMOVAL/ INSTALLATION [AY6A-EL]
- COUPLER COMPONENT INSPECTION [AY6A-EL]
- COUPLER COMPONENT REMOVAL/ INSTALLATION [AY6A-EL]
- LINE PRESSURE CONTROL SOLENOID INSPECTION [AY6A-EL]
- LINE PRESSURE CONTROL SOLENOID REMOVAL/ INSTALLATION [AY6A-EL]
- SHIFT SOLENOID A INSPECTION [AY6A-EL]
- SHIFT SOLENOID A REMOVAL/ INSTALLATION [AY6A-EL]
- SHIFT SOLENOID B INSPECTION [AY6A-EL]
- SHIFT SOLENOID B REMOVAL/ INSTALLATION [AY6A-EL]
- SHIFT SOLENOID C INSPECTION [AY6A-EL]
- SHIFT SOLENOID C REMOVAL/ INSTALLATION [AY6A-EL]
- SHIFT SOLENOID D INSPECTION [AY6A-EL]
- SHIFT SOLENOID D REMOVAL/ INSTALLATION [AY6A-EL]
- SHIFT SOLENOID E INSPECTION [AY6A-EL]
- SHIFT SOLENOID E REMOVAL/ INSTALLATION [AY6A-EL]
- SHIFT SOLENOID F INSPECTION [AY6A-EL]
- SHIFT SOLENOID F REMOVAL/ INSTALLATION [AY6A-EL]
- TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID INSPECTION [AY6A-EL]
- TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID REMOVAL/ INSTALLATION [AY6A-EL]

TCM INSPECTION [AY6A-EL]

- **TCM REMOVAL/ INSTALLATION [AY6A-EL]**
- **TCM NEUTRAL POSITION LEARNING [AY6A-EL]**
- **BREATHER COMPONENT REMOVAL/ INSTALLATION [AY6A-EL]**
- **B1 BRAKE PISTON COVER REMOVAL/ INSTALLATION [AY6A-EL]**
- **OIL SEAL (MANUAL SHAFT) REPLACEMENT [AY6A-EL]**
- **OIL SEAL (DIFFERENTIAL) REPLACEMENT [AY6A-EL]**
- **DIFFERENTIAL GEAR O-RING REPLACEMENT [AY6A-EL]**
- **OIL COOLER FLUSHING [AY6A-EL]**
- **OIL COOLER REMOVAL/ INSTALLATION [AY6A-EL]**
- **CONTROL VALVE BODY COVER REPLACEMENT [AY6A-EL]**
- **CONTROL VALVE BODY REMOVAL/ INSTALLATION [AY6A-EL]**
- **AUTOMATIC TRANSAXLE REMOVAL/ INSTALLATION [AY6A-EL]**
- **AUTOMATIC TRANSAXLE CLEANING [AY6A-EL]**
- **AUTOMATIC TRANSAXLE DISASSEMBLY/ ASSEMBLY PRECAUTION [AY6A-EL]**
- **TORQUE CONVERTER REMOVAL/ INSTALLATION [AY6A-EL]**
- **OIL SEAL (OIL PUMP) REPLACEMENT [AY6A-EL]**
- **CONVERTER HOUSING REMOVAL/ INSTALLATION [AY6A-EL]**
- **OIL PUMP REMOVAL/ INSTALLATION [AY6A-EL]**
- **OIL PUMP DISASSEMBLY/ ASSEMBLY [AY6A-EL]**
- **OIL STRAINER REMOVAL/ INSTALLATION [AY6A-EL]**
- **FRONT PLANETARY GEAR COMPONENT AND INPUT SHAFT REMOVAL/ INSTALLATION [AY6A-EL]**
- **FRONT PLANETARY GEAR COMPONENT AND INPUT SHAFT DISASSEMBLY/ ASSEMBLY [AY6A-EL]**
- **DRIVE PLATE REMOVAL/ INSTALLATION [AY6A-EL]**

Automatic Transaxle Shift Mechanism

- **AUTOMATIC TRANSAXLE SHIFT MECHANISM LOCATION INDEX**
- **AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION**
- **SELECTOR LEVER INSPECTION**
- **SHIFT-LOCK SYSTEM INSPECTION**
- **KEY INTERLOCK SYSTEM INSPECTION**

Technical Data

- **TRANSMISSION/ TRANSAXLE TECHNICAL DATA**

Maintenance/ Service Tools

- **TRANSMISSION/ TRANSAXLE SST**