


2012 - Mazda6 - Engine

FOREWORD [MZI 3.7 V6]

- When the customer reports a vehicle malfunction, check the malfunction indicator lamp (MIL) indication and diagnostic trouble code (DTC), then diagnose the malfunction according to the following flowchart:
 - If a DTC exists, diagnose the applicable DTC inspection. (See [DTC TABLE \[MZI 3.7 V6\]](#).)
 - If no DTC exists and the MIL does not illuminate or flash, diagnose the applicable symptom troubleshooting. (See [QUICK DIAGNOSTIC CHART \[MZI 3.7 V6\]](#).)

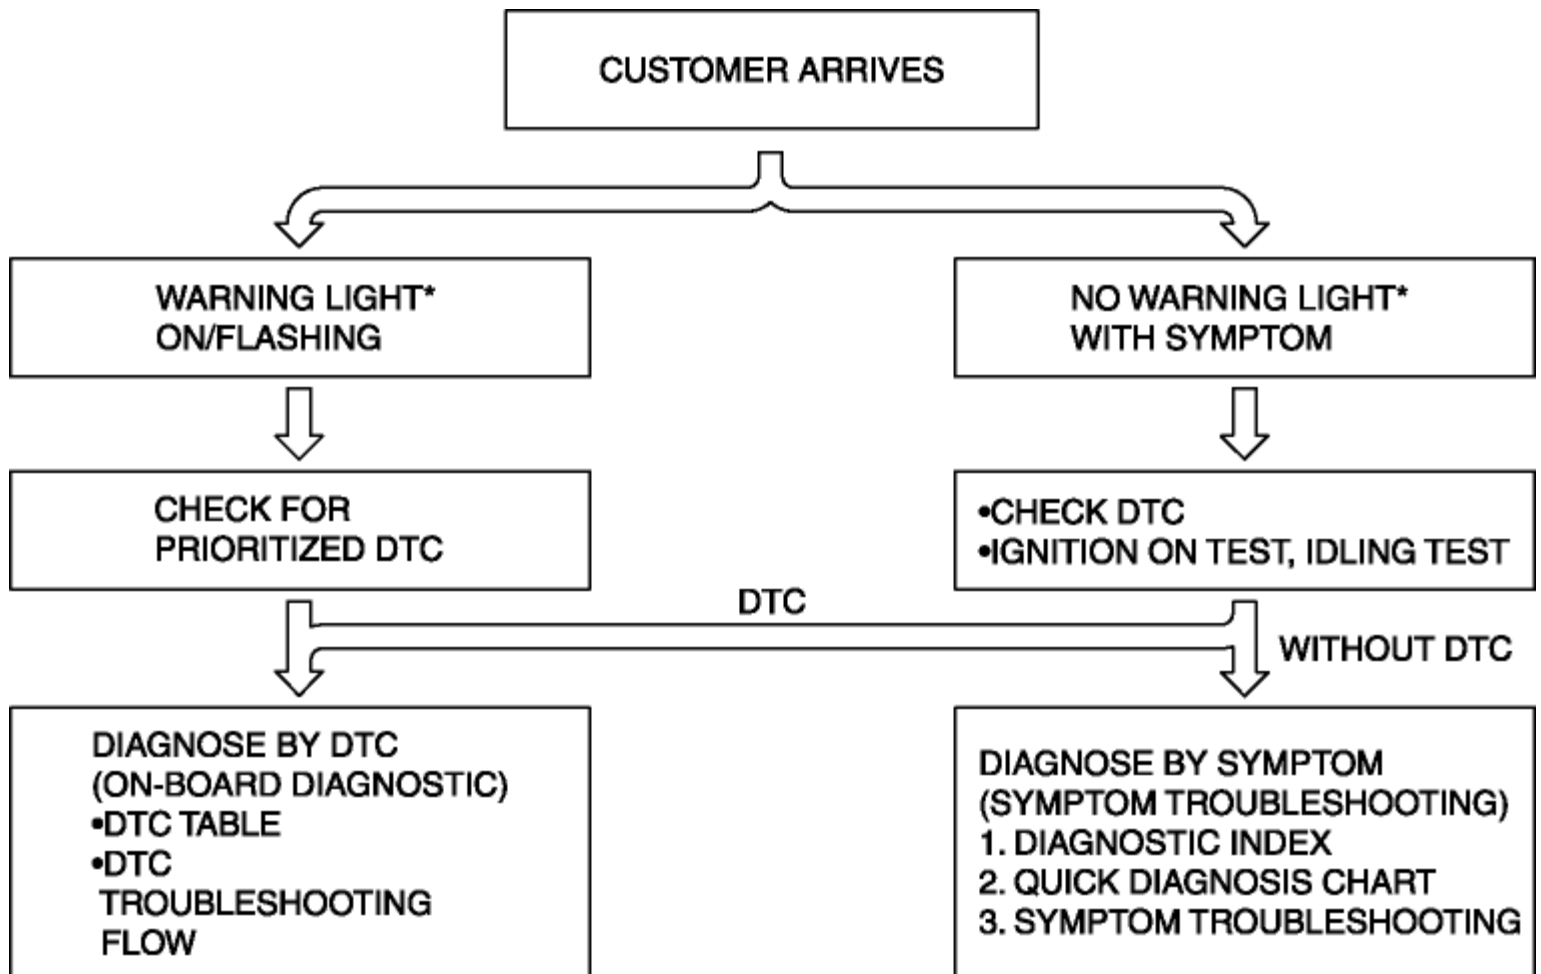


*: Malfunction indicator lamp (MIL), generator warning light, security light

2012 - Mazda6 - Engine

FOREWORD [MZI 3.7 V6]

- When the customer reports a vehicle malfunction, check the malfunction indicator lamp (MIL) indication and diagnostic trouble code (DTC), then diagnose the malfunction according to the following flowchart:
 - If a DTC exists, diagnose the applicable DTC inspection. (See [DTC TABLE \[MZI 3.7 V6\]](#).)
 - If no DTC exists and the MIL does not illuminate or flash, diagnose the applicable symptom troubleshooting. (See [QUICK DIAGNOSTIC CHART \[MZI 3.7 V6\]](#).)

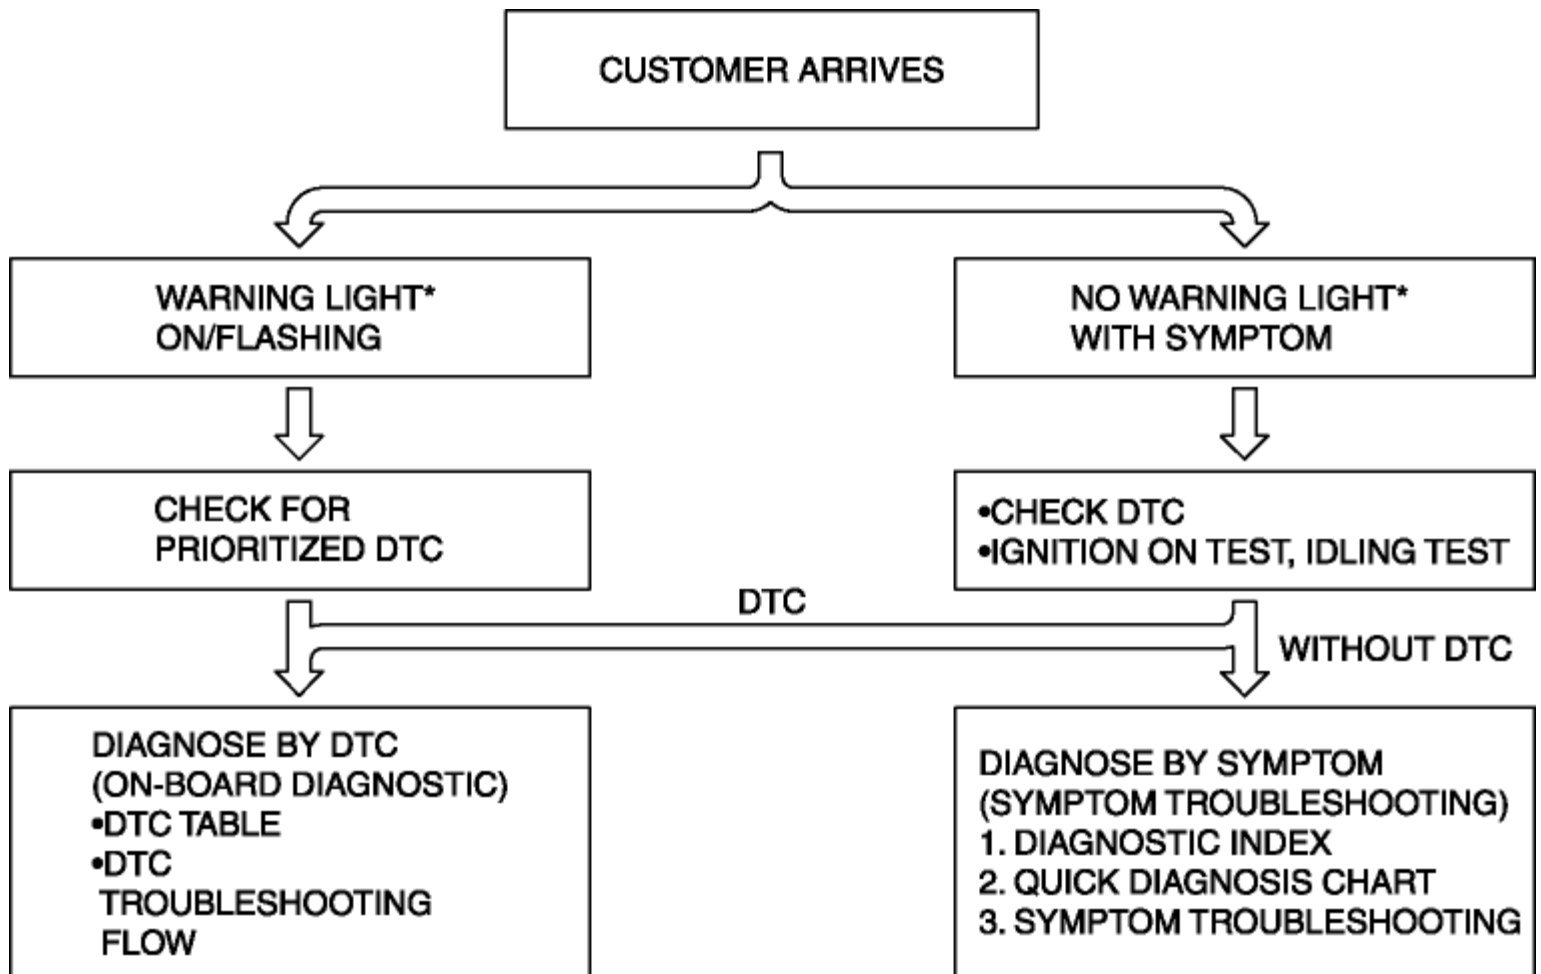

*: Malfunction indicator lamp (MIL), generator warning light, security light