

Workshop Manual - Steering

2012 - Mazda6

General Procedures

- GENERAL PROCEDURES (STEERING)

Power Steering

- STEERING LOCATION INDEX
- AIR BLEEDING
- POWER STEERING FLUID INSPECTION
- STEERING WHEEL AND COLUMN INSPECTION
- STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITHOUT ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]
- STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION [WITH ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]
- STEERING SHAFT INSPECTION
- STEERING GEAR AND LINKAGE REMOVAL/ INSTALLATION [MZR 2.5]
- STEERING GEAR AND LINKAGE REMOVAL/ INSTALLATION [MZI 3.7 V6]
- STEERING GEAR AND LINKAGE DISASSEMBLY
- STEERING GEAR AND LINKAGE INSPECTION
- STEERING GEAR AND LINKAGE ASSEMBLY
- POWER STEERING FLUID LINE COMPONENT REMOVAL/ INSTALLATION [MZR 2.5]
- POWER STEERING FLUID LINE COMPONENT REMOVAL/ INSTALLATION [MZI 3.7 V6]
- POWER STEERING OIL PUMP REMOVAL/ INSTALLATION [MZR 2.5]
- POWER STEERING OIL PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6]
- POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY [MZR 2.5]
- POWER STEERING OIL PUMP DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6]

Technical Data

- STEERING TECHNICAL DATA

Maintenance/ Service Tools

- STEERING SST