

Workshop Manual - Engine

2012 - Mazda6

On-Board Diagnostics

- ON-BOARD DIAGNOSTIC WIRING DIAGRAM [MZR 2.5]
- MONITORING SYSTEM AND CONTROL SYSTEM DEVICE RELATIONSHIP CHART [MZR 2.5]
- OBD-II PENDING TROUBLE CODE [MZR 2.5]
- OBD-II FREEZE FRAME DATA [MZR 2.5]
- OBD-II ON-BOARD SYSTEM READINESS TEST [MZR 2.5]
- OBD-II READ/ CLEAR DIAGNOSTIC TEST RESULTS [MZR 2.5]
- OBD-II PARAMETER IDENTIFICATION (PID) ACCESS [MZR 2.5]
- ON-BOARD DIAGNOSTIC TEST [MZR 2.5]
- AFTER REPAIR PROCEDURE [MZR 2.5]
- KOEO/ KOER SELF TEST [MZR 2.5]
- OBD-II DRIVE MODE [MZR 2.5]
- DIAGNOSTIC MONITORING TEST RESULTS [MZR 2.5]
- DTC TABLE [MZR 2.5]
- DTC P0011:00 [MZR 2.5]
- DTC P0012:00 [MZR 2.5]
- DTC P0016:00 [MZR 2.5]
- DTC P0030:00 [MZR 2.5]
- DTC P0031:00 [MZR 2.5]
- DTC P0032:00 [MZR 2.5]
- DTC P0037:00 [MZR 2.5]
- DTC P0038:00 [MZR 2.5]
- DTC P0053:00 [MZR 2.5]
- DTC P0054:00 [MZR 2.5]
- DTC P0069:00 [MZR 2.5]
- DTC P0101:00 [MZR 2.5]
- DTC P0102:00 [MZR 2.5]
- DTC P0103:00 [MZR 2.5]
- DTC P0107:00 [MZR 2.5]
- DTC P0108:00 [MZR 2.5]
- DTC P0111:00 [MZR 2.5]
- DTC P0112:00 [MZR 2.5]
- DTC P0113:00 [MZR 2.5]
- DTC P0116:00 [MZR 2.5]
- DTC P0117:00 [MZR 2.5]
- DTC P0118:00 [MZR 2.5]
- DTC P0122:00 [MZR 2.5]
- DTC P0123:00 [MZR 2.5]
- DTC P0125:00 [MZR 2.5]
- DTC P0126:00, P0128:00 [MZR 2.5]
- DTC P0130:00 [MZR 2.5]

- DTC P0131:00 [MZR 2.5]
- DTC P0132:00 [MZR 2.5]
- DTC P0133:00 [MZR 2.5]
- DTC P0134:00 [MZR 2.5]
- DTC P0137:00 [MZR 2.5]
- DTC P0138:00 [MZR 2.5]
- DTC P0139:00 [MZR 2.5]
- DTC P0140:00 [MZR 2.5]
- DTC P0171:00 [MZR 2.5]
- DTC P0172:00 [MZR 2.5]
- DTC P0222:00 [MZR 2.5]
- DTC P0223:00 [MZR 2.5]
- DTC P0300:00 [MZR 2.5]
- DTC P0301:00, P0302:00, P0303:00, P0304:00 [MZR 2.5]
- DTC P0327:00 [MZR 2.5]
- DTC P0328:00 [MZR 2.5]
- DTC P0335:00 [MZR 2.5]
- DTC P0340:00 [MZR 2.5]
- DTC P0401:00 [MZR 2.5]
- DTC P0403:00 [MZR 2.5]
- DTC P0421:00 [MZR 2.5]
- DTC P0442:00, P0455:00, P0456:00 [MZR 2.5]
- DTC P0443:00 [MZR 2.5]
- DTC P0446:00 [MZR 2.5]
- DTC P0451:00 [MZR 2.5]
- DTC P0452:00 [MZR 2.5]
- DTC P0453:00 [MZR 2.5]
- DTC P0454:00 [MZR 2.5]
- DTC P0457:00 [MZR 2.5]
- DTC P0460:00 [MZR 2.5]
- DTC P0461:00 [MZR 2.5]
- DTC P0462:00 [MZR 2.5]
- DTC P0463:00 [MZR 2.5]
- DTC P0480:00 [MZR 2.5]
- DTC P0500:00 [MZR 2.5]
- DTC P0505:00 [MZR 2.5]
- DTC P0506:00 [MZR 2.5]
- DTC P0507:00 [MZR 2.5]
- DTC P050A:00 [MZR 2.5]
- DTC P050B:00 [MZR 2.5]
- DTC P0550:00 [MZR 2.5]
- DTC P0571:00 [MZR 2.5]
- DTC P0579:00 [MZR 2.5]
- DTC P0581:00 [MZR 2.5]
- DTC P0600:00 [MZR 2.5]
- DTC P0601:00 [MZR 2.5]
- DTC P0602:00 [MZR 2.5]
- DTC P0604:00 [MZR 2.5]
- DTC P0606:00 [MZR 2.5]
- DTC P0607:00 [MZR 2.5]
- DTC P060A:00, P060C:00, P061D:00 [MZR 2.5]
- DTC P060B:00 [MZR 2.5]
- DTC P0610:00 [MZR 2.5]
- DTC P061B:00 [MZR 2.5]
- DTC P061F:00 [MZR 2.5]
- DTC P0638:00 [MZR 2.5]
- DTC P064D:00 [MZR 2.5]

- DTC P0661:00 [MZR 2.5]
- DTC P0662:00 [MZR 2.5]
- DTC P0685:00 [MZR 2.5]
- DTC P06B8:00 [MZR 2.5]
- DTC P0703:00 [MZR 2.5]
- DTC P0704:00 [MZR 2.5]
- DTC P0850:00 [MZR 2.5]
- DTC P1260:00 [MZR 2.5]
- DTC P144A:00 [MZR 2.5]
- DTC P1450:00 [MZR 2.5]
- DTC P1674:00 [MZR 2.5]
- DTC P2088:00 [MZR 2.5]
- DTC P2089:00 [MZR 2.5]
- DTC P2096:00 [MZR 2.5]
- DTC P2004:00 [MZR 2.5]
- DTC P2006:00 [MZR 2.5]
- DTC P2009:00 [MZR 2.5]
- DTC P2010:00 [MZR 2.5]
- DTC P2016:00 [MZR 2.5]
- DTC P2017:00 [MZR 2.5]
- DTC P2097:00 [MZR 2.5]
- DTC P2100:00 [MZR 2.5]
- DTC P2101:00 [MZR 2.5]
- DTC P2105:00 [MZR 2.5]
- DTC P2107:00 [MZR 2.5]
- DTC P2108:00 [MZR 2.5]
- DTC P2110:00 [MZR 2.5]
- DTC P2119:00 [MZR 2.5]
- DTC P2122:00 [MZR 2.5]
- DTC P2123:00 [MZR 2.5]
- DTC P2127:00 [MZR 2.5]
- DTC P2128:00 [MZR 2.5]
- DTC P2135:00 [MZR 2.5]
- DTC P2138:00 [MZR 2.5]
- DTC P2228:00 [MZR 2.5]
- DTC P2229:00 [MZR 2.5]
- DTC P2237:00 [MZR 2.5]
- DTC P2243:00 [MZR 2.5]
- DTC P2251:00 [MZR 2.5]
- DTC P2299:00 [MZR 2.5]
- DTC P2502:00 [MZR 2.5]
- DTC P2503:00 [MZR 2.5]
- DTC P2504:00 [MZR 2.5]
- DTC P2507:00 [MZR 2.5]
- DTC P260F:00 [MZR 2.5]
- DTC P2610:00 [MZR 2.5]
- DTC U3000:41 [MZR 2.5]

On-Board Diagnostics

- ON-BOARD DIAGNOSTIC WIRING DIAGRAM [MZI 3.7 V6]
- FOREWORD [MZI 3.7 V6]
- ON-BOARD DIAGNOSTIC TEST [MZI 3.7 V6]
- AFTER REPAIR PROCEDURE [MZI 3.7 V6]
- KOEO/ KOER SELF TEST [MZI 3.7 V6]
- OBD-II DRIVE MODE [MZI 3.7 V6]
- DIAGNOSTIC MONITORING TEST RESULTS [MZI 3.7 V6]

DTC TABLE [MZI 3.7 V6]

- DTC P0010:00 [MZI 3.7 V6]
- DTC P0011:00 [MZI 3.7 V6]
- DTC P0012:00 [MZI 3.7 V6]
- DTC P0016:00, P0018:00 [MZI 3.7 V6]
- DTC P0020:00 [MZI 3.7 V6]
- DTC P0021:00 [MZI 3.7 V6]
- DTC P0022:00 [MZI 3.7 V6]
- DTC P0030:00, P0050:00 [MZI 3.7 V6]
- DTC P0040:00, P0041:00 [MZI 3.7 V6]
- DTC P0053:00, P0059:00 [MZI 3.7 V6]
- DTC P0054:00, P0060:00 [MZI 3.7 V6]
- DTC P0068:00 [MZI 3.7 V6]
- DTC P0102:00 [MZI 3.7 V6]
- DTC P0103:00 [MZI 3.7 V6]
- DTC P0104:00 [MZI 3.7 V6]
- DTC P0111:00 [MZI 3.7 V6]
- DTC P0112:00 [MZI 3.7 V6]
- DTC P0113:00 [MZI 3.7 V6]
- DTC P0114:00 [MZI 3.7 V6]
- DTC P0116:00 [MZI 3.7 V6]
- DTC P0122:00 [MZI 3.7 V6]
- DTC P0123:00 [MZI 3.7 V6]
- DTC P0128:00 [MZI 3.7 V6]
- DTC P0131:00, P0151:00 [MZI 3.7 V6]
- DTC P0132:00, P0152:00 [MZI 3.7 V6]
- DTC P0133:00, P0153:00 [MZI 3.7 V6]
- DTC P0135:00, P0155:00 [MZI 3.7 V6]
- DTC P0137:00, P0157:00 [MZI 3.7 V6]
- DTC P0138:00, P0158:00 [MZI 3.7 V6]
- DTC P013A:00 [MZI 3.7 V6]
- DTC P013C:00 [MZI 3.7 V6]
- DTC P013E:00 [MZI 3.7 V6]
- DTC P0141:00, P0161:00 [MZI 3.7 V6]
- DTC P0148:00 [MZI 3.7 V6]
- DTC P014A:00 [MZI 3.7 V6]
- DTC P0171:00, P0174:00 [MZI 3.7 V6]
- DTC P0172:00, P0175:00 [MZI 3.7 V6]
- DTC P0201:00 [MZI 3.7 V6]
- DTC P0202:00 [MZI 3.7 V6]
- DTC P0203:00 [MZI 3.7 V6]
- DTC P0204:00 [MZI 3.7 V6]
- DTC P0205:00 [MZI 3.7 V6]
- DTC P0206:00 [MZI 3.7 V6]
- DTC P0217:00 [MZI 3.7 V6]
- DTC P0219:00 [MZI 3.7 V6]
- DTC P0222:00 [MZI 3.7 V6]
- DTC P0223:00 [MZI 3.7 V6]
- DTC P0230:00 [MZI 3.7 V6]
- DTC P0231:00 [MZI 3.7 V6]
- DTC P0232:00 [MZI 3.7 V6]
- DTC P0297:00 [MZI 3.7 V6]
- DTC P0300:00 [MZI 3.7 V6]
- DTC P0301:00, P0302:00, P0303:00, P0304:00, P0305:00, P0306:00, P0316:00 [MZI 3.7 V6]
- DTC P0315:00 [MZI 3.7 V6]
- DTC P0320:00 [MZI 3.7 V6]
- DTC P0325:00 [MZI 3.7 V6]

- DTC P0330:00 [MZI 3.7 V6]
- DTC P0340:00 [MZI 3.7 V6]
- DTC P0341:00 [MZI 3.7 V6]
- DTC P0344:00 [MZI 3.7 V6]
- DTC P0345:00 [MZI 3.7 V6]
- DTC P0346:00 [MZI 3.7 V6]
- DTC P0349:00 [MZI 3.7 V6]
- DTC P0351:00, P0352:00, P0353:00, P0354:00, P0355:00, P0356:00 [MZI 3.7 V6]
- DTC P0420:00, P0430:00 [MZI 3.7 V6]
- DTC P0442:00, P0455:00, P0456:00 [MZI 3.7 V6]
- DTC P0443:00 [MZI 3.7 V6]
- DTC P0446:00 [MZI 3.7 V6]
- DTC P0451:00 [MZI 3.7 V6]
- DTC P0452:00 [MZI 3.7 V6]
- DTC P0453:00 [MZI 3.7 V6]
- DTC P0454:00 [MZI 3.7 V6]
- DTC P0457:00 [MZI 3.7 V6]
- DTC P0460:00 [MZI 3.7 V6]
- DTC P0461:00 [MZI 3.7 V6]
- DTC P0462:00 [MZI 3.7 V6]
- DTC P0463:00 [MZI 3.7 V6]
- DTC P0480:00 [MZI 3.7 V6]
- DTC P0504:00 [MZI 3.7 V6]
- DTC P0505:00 [MZI 3.7 V6]
- DTC P0506:00 [MZI 3.7 V6]
- DTC P0507:00 [MZI 3.7 V6]
- DTC P050A:00 [MZI 3.7 V6]
- DTC P050B:00 [MZI 3.7 V6]
- DTC P050E:00 [MZI 3.7 V6]
- DTC P0532:00 [MZI 3.7 V6]
- DTC P0533:00 [MZI 3.7 V6]
- DTC P0562:00 [MZI 3.7 V6]
- DTC P0563:00 [MZI 3.7 V6]
- DTC P0572:00 [MZI 3.7 V6]
- DTC P0573:00 [MZI 3.7 V6]
- DTC P0579:00 [MZI 3.7 V6]
- DTC P0581:00 [MZI 3.7 V6]
- DTC P0600:00 [MZI 3.7 V6]
- DTC P0602:00 [MZI 3.7 V6]
- DTC P0603:00 [MZI 3.7 V6]
- DTC P0604:00 [MZI 3.7 V6]
- DTC P0605:00 [MZI 3.7 V6]
- DTC P0607:00 [MZI 3.7 V6]
- DTC P060A:00, P060C:00, P061D:00 [MZI 3.7 V6]
- DTC P060B:00 [MZI 3.7 V6]
- DTC P0610:00 [MZI 3.7 V6]
- DTC P061A:00 [MZI 3.7 V6]
- DTC P061B:00 [MZI 3.7 V6]
- DTC P061C:00 [MZI 3.7 V6]
- DTC P0620:00 [MZI 3.7 V6]
- DTC P0625:00 [MZI 3.7 V6]
- DTC P0626:00 [MZI 3.7 V6]
- DTC P062F:00 [MZI 3.7 V6]
- DTC P0642:00 [MZI 3.7 V6]
- DTC P0643:00 [MZI 3.7 V6]
- DTC P0645:00 [MZI 3.7 V6]
- DTC P064D:00, P064E:00 [MZI 3.7 V6]

- DTC P065B:00 [MZI 3.7 V6]
- DTC P0685:00 [MZI 3.7 V6]
- DTC P068A:00 [MZI 3.7 V6]
- DTC P06B8:00 [MZI 3.7 V6]
- DTC P1001:00 [MZI 3.7 V6]
- DTC P1101:00 [MZI 3.7 V6]
- DTC P1124:00 [MZI 3.7 V6]
- DTC P1127:00 [MZI 3.7 V6]
- DTC P115E:00 [MZI 3.7 V6]
- DTC P1260:00 [MZI 3.7 V6]
- DTC P1285:00, P1299:00 [MZI 3.7 V6]
- DTC P1288:00 [MZI 3.7 V6]
- DTC P1289:00 [MZI 3.7 V6]
- DTC P128A:00 [MZI 3.7 V6]
- DTC P1290:00 [MZI 3.7 V6]
- DTC P1336:00 [MZI 3.7 V6]
- DTC P1397:00 [MZI 3.7 V6]
- DTC P144A:00 [MZI 3.7 V6]
- DTC P1450:00 [MZI 3.7 V6]
- DTC P1464:00 [MZI 3.7 V6]
- DTC P1501:00 [MZI 3.7 V6]
- DTC P1575:00 [MZI 3.7 V6]
- DTC P1633:00 [MZI 3.7 V6]
- DTC P1635:00 [MZI 3.7 V6]
- DTC P1639:00 [MZI 3.7 V6]
- DTC P1646:00, P1647:00 [MZI 3.7 V6]
- DTC P164A:00 [MZI 3.7 V6]
- DTC P164B:00 [MZI 3.7 V6]
- DTC P1650:00 [MZI 3.7 V6]
- DTC P1674:00 [MZI 3.7 V6]
- DTC P1703:00 [MZI 3.7 V6]
- DTC P1705:00 [MZI 3.7 V6]
- DTC P2096:00, P2098:00 [MZI 3.7 V6]
- DTC P2097:00, P2099:00 [MZI 3.7 V6]
- DTC P2101:00 [MZI 3.7 V6]
- DTC P2107:00 [MZI 3.7 V6]
- DTC P2111:00 [MZI 3.7 V6]
- DTC P2112:00 [MZI 3.7 V6]
- DTC P2122:00 [MZI 3.7 V6]
- DTC P2123:00 [MZI 3.7 V6]
- DTC P2127:00 [MZI 3.7 V6]
- DTC P2128:00 [MZI 3.7 V6]
- DTC P2135:00 [MZI 3.7 V6]
- DTC P2138:00 [MZI 3.7 V6]
- DTC P2195:00, P2197:00 [MZI 3.7 V6]
- DTC P2196:00, P2198:00 [MZI 3.7 V6]
- DTC P219A:00, P219B:00 [MZI 3.7 V6]
- DTC P2237:00, P2240:00 [MZI 3.7 V6]
- DTC P2243:00, P2247:00 [MZI 3.7 V6]
- DTC P2251:00, P2254:00 [MZI 3.7 V6]
- DTC P2270:00, P2272:00 [MZI 3.7 V6]
- DTC P2271:00, P2273:00 [MZI 3.7 V6]
- DTC P2299:00 [MZI 3.7 V6]
- DTC P260F:00 [MZI 3.7 V6]
- DTC P2610:00 [MZI 3.7 V6]
- DTC P2627:00 [MZI 3.7 V6]
- DTC P2630:00 [MZI 3.7 V6]

- DTC U0300:00, U0300:01, U0300:02 [MZI 3.7 V6]
- DTC P2A01:00, P2A04:00 [MZI 3.7 V6]

Symptom Troubleshooting

- SYMPTOM TROUBLESHOOTING WIRING DIAGRAM [MZR 2.5]
- FOREWORD [MZR 2.5]
- SYMPTOM DIAGNOSTIC INDEX [MZR 2.5]
- CONTROL SYSTEM DEVICE AND CONTROL RELATIONSHIP CHART [MZR 2.5]
- QUICK DIAGNOSTIC CHART [MZR 2.5]
- NO.1 MELTING OF MAIN OR OTHER FUSES [MZR 2.5]
- NO.2 MIL ILLUMINATES [MZR 2.5]
- NO.3 WILL NOT CRANK [MZR 2.5]
- NO.4 HARD TO START/ LONG CRANK/ ERRATIC START/ ERRATIC CRANK [MZR 2.5]
- NO.5 ENGINE STALLS-AFTER START/ AT IDLE [MZR 2.5]
- NO.6 CRANKS NORMALLY BUT WILL NOT START [MZR 2.5]
- NO.7 SLOW RETURN TO IDLE [MZR 2.5]
- NO.8 ENGINE RUNS ROUGH/ ROLLING IDLE [MZR 2.5]
- NO.9 FAST IDLE/ RUNS ON [MZR 2.5]
- NO.10 LOW IDLE/ STALLS DURING DECELERATION [MZR 2.5]
- NO.11 ENGINE STALLS/ QUITTS, ENGINE RUNS ROUGH, MISSES, BUCK/ JERK, HESITATION/ STUMBLE, SURGES [MZR 2.5]
- NO.12 LACK/ LOSS OF POWER-ACCELERATION/ CRUISE [MZR 2.5]
- NO.13 KNOCKING/ PINGING-ACCELERATION/ CRUISE [MZR 2.5]
- NO.14 POOR FUEL ECONOMY [MZR 2.5]
- NO.15 EMISSION COMPLIANCE [MZR 2.5]
- NO.16 HIGH OIL CONSUMPTION/ LEAKAGE [MZR 2.5]
- NO.17 COOLING SYSTEM CONCERNS-OVERHEATING [MZR 2.5]
- NO.18 COOLING SYSTEM CONCERNS-RUNS COLD [MZR 2.5]
- NO.19 EXHAUST SMOKE [MZR 2.5]
- NO.20 FUEL ODOR (IN ENGINE COMPARTMENT) [MZR 2.5]
- NO.21 ENGINE NOISE [MZR 2.5]
- NO.22 VIBRATION CONCERNS (ENGINE) [MZR 2.5]
- NO.23 A/ C DOES NOT WORK SUFFICIENTLY [MZR 2.5]
- NO.24 A/ C IS ALWAYS ON OR A/ C COMPRESSOR RUNS CONTINUOUSLY [MZR 2.5]
- NO.25 A/ C IS NOT CUT OFF UNDER WIDE OPEN THROTTLE CONDITIONS [MZR 2.5]
- NO.26 EXHAUST SULPHUR SMELL [MZR 2.5]
- NO.27 FUEL REFILL CONCERNS [MZR 2.5]
- NO.28 FUEL FILLING SHUT OFF CONCERNS [MZR 2.5]
- NO.29 SPARK PLUG CONDITION [MZR 2.5]
- INTERMITTENT CONCERN TROUBLESHOOTING [MZR 2.5]
- ENGINE CONTROL SYSTEM OPERATION INSPECTION [MZR 2.5]

Symptom Troubleshooting

- SYMPTOM TROUBLESHOOTING WIRING DIAGRAM [MZI 3.7 V6]
- FOREWORD [MZI 3.7 V6]
- SYMPTOM DIAGNOSTIC INDEX [MZI 3.7 V6]
- QUICK DIAGNOSTIC CHART [MZI 3.7 V6]
- NO.1 MELTING OF MAIN OR OTHER FUSES [MZI 3.7 V6]
- NO.2 MIL ILLUMINATES [MZI 3.7 V6]
- NO.3 WILL NOT CRANK [MZI 3.7 V6]
- NO.4 HARD TO START/ LONG CRANK/ ERRATIC START/ ERRATIC CRANK [MZI 3.7 V6]
- NO.5 ENGINE STALLS-AFTER START/ AT IDLE [MZI 3.7 V6]
- NO.6 CRANKS NORMALLY BUT WILL NOT START [MZI 3.7 V6]
- NO.7 SLOW RETURN TO IDLE [MZI 3.7 V6]
- NO.8 ENGINE RUNS ROUGH/ ROLLING IDLE [MZI 3.7 V6]
- NO.9 FAST IDLE/ RUNS ON [MZI 3.7 V6]

- NO.10 LOW IDLE/ STALLS DURING DECELERATION [MZI 3.7 V6]
- NO.11 ENGINE STALLS/ QUITTS, ENGINE RUNS ROUGH, MISSES, BUCK/ JERK, HESITATION/ STUMBLE, SURGES [MZI 3.7 V6]
- NO.12 LACK/ LOSS OF POWER-ACCELERATION/ CRUISE [MZI 3.7 V6]
- NO.13 KNOCKING/ PINGING-ACCELERATION/ CRUISE [MZI 3.7 V6]
- NO.14 POOR FUEL ECONOMY [MZI 3.7 V6]
- NO.15 EMISSION COMPLIANCE [MZI 3.7 V6]
- NO.16 HIGH OIL CONSUMPTION/ LEAKAGE [MZI 3.7 V6]
- NO.17 COOLING SYSTEM CONCERNS-OVERHEATING [MZI 3.7 V6]
- NO.18 COOLING SYSTEM CONCERNS-RUNS COLD [MZI 3.7 V6]
- NO.19 EXHAUST SMOKE [MZI 3.7 V6]
- NO.20 FUEL ODOR (IN ENGINE COMPARTMENT) [MZI 3.7 V6]
- NO.21 ENGINE NOISE [MZI 3.7 V6]
- NO.22 VIBRATION CONCERNS (ENGINE) [MZI 3.7 V6]
- NO.23 A/ C DOES NOT WORK SUFFICIENTLY [MZI 3.7 V6]
- NO.24 A/ C IS ALWAYS ON OR A/ C COMPRESSOR RUNS CONTINUOUSLY [MZI 3.7 V6]
- NO.25 A/ C DOES NOT CUT OFF UNDER WIDE OPEN THROTTLE CONDITIONS [MZI 3.7 V6]
- NO.26 EXHAUST SULPHUR SMELL [MZI 3.7 V6]
- NO.27 FUEL REFILL CONCERNS [MZI 3.7 V6]
- NO.28 FUEL FILLING SHUT OFF CONCERNS [MZI 3.7 V6]
- NO.29 SPARK PLUG CONDITION [MZI 3.7 V6]
- INTERMITTENT CONCERN TROUBLESHOOTING [MZI 3.7 V6]
- ENGINE CONTROL SYSTEM OPERATION INSPECTION [MZI 3.7 V6]

Mechanical

- ENGINE LOCATION INDEX [MZR 2.5]
- ENGINE TUNE-UP [MZR 2.5]
- PLUG HOLE PLATE REMOVAL/ INSTALLATION [MZR 2.5]
- DRIVE BELT INSPECTION [MZR 2.5]
- DRIVE BELT REMOVAL/ INSTALLATION [MZR 2.5]
- DRIVE BELT AUTO TENSIONER INSPECTION [MZR 2.5]
- VALVE CLEARANCE INSPECTION [MZR 2.5]
- VALVE CLEARANCE ADJUSTMENT [MZR 2.5]
- COMPRESSION INSPECTION [MZR 2.5]
- VARIABLE VALVE TIMING ACTUATOR INSPECTION [MZR 2.5]
- VARIABLE VALVE TIMING ACTUATOR REMOVAL/ INSTALLATION [MZR 2.5]
- OIL CONTROL VALVE (OCV) INSPECTION [MZR 2.5]
- OIL CONTROL VALVE (OCV) REMOVAL/ INSTALLATION [MZR 2.5]
- TIMING CHAIN REMOVAL/ INSTALLATION [MZR 2.5]
- CYLINDER HEAD GASKET REPLACEMENT [MZR 2.5]
- FRONT OIL SEAL REPLACEMENT [MZR 2.5]
- REAR OIL SEAL REPLACEMENT [MZR 2.5]
- ENGINE REMOVAL/ INSTALLATION [MZR 2.5]
- ENGINE DISASSEMBLY/ ASSEMBLY [MZR 2.5]

Mechanical

- ENGINE LOCATION INDEX [MZI 3.7 V6]
- ENGINE TUNE-UP [MZI 3.7 V6]
- ENGINE COVER REMOVAL/ INSTALLATION [MZI 3.7 V6]
- DRIVE BELT INSPECTION [MZI 3.7 V6]
- DRIVE BELT REMOVAL/ INSTALLATION [MZI 3.7 V6]
- DRIVE BELT AUTO TENSIONER INSPECTION [MZI 3.7 V6]
- VALVE CLEARANCE INSPECTION/ ADJUSTMENT [MZI 3.7 V6]
- COMPRESSION INSPECTION [MZI 3.7 V6]
- VARIABLE VALVE TIMING ACTUATOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- OIL CONTROL VALVE (OCV) INSPECTION [MZI 3.7 V6]

- OIL CONTROL VALVE (OCV) REMOVAL/ INSTALLATION [MZI 3.7 V6]
- TIMING CHAIN REMOVAL/ INSTALLATION [MZI 3.7 V6]
- CYLINDER HEAD GASKET REPLACEMENT [MZI 3.7 V6]
- FRONT OIL SEAL REPLACEMENT [MZI 3.7 V6]
- REAR OIL SEAL REPLACEMENT [MZI 3.7 V6]
- ENGINE REMOVAL/ INSTALLATION [MZI 3.7 V6]
- ENGINE DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6]

Lubrication

- LUBRICATION SYSTEM LOCATION INDEX [MZR 2.5]
- ENGINE OIL LEVEL INSPECTION [MZR 2.5]
- ENGINE OIL REPLACEMENT [MZR 2.5]
- OIL FILTER REPLACEMENT [MZR 2.5]
- OIL PRESSURE INSPECTION [MZR 2.5]
- OIL COOLER REMOVAL/ INSTALLATION [MZR 2.5]
- OIL PAN REMOVAL/ INSTALLATION [MZR 2.5]
- OIL PUMP REMOVAL/ INSTALLATION [MZR 2.5]

Lubrication

- LUBRICATION SYSTEM LOCATION INDEX [MZI 3.7 V6]
- ENGINE OIL LEVEL INSPECTION [MZI 3.7 V6]
- ENGINE OIL REPLACEMENT [MZI 3.7 V6]
- OIL FILTER REPLACEMENT [MZI 3.7 V6]
- OIL PRESSURE INSPECTION [MZI 3.7 V6]
- OIL PAN REMOVAL/ INSTALLATION [MZI 3.7 V6]
- OIL PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6]

Cooling System

- COOLING SYSTEM LOCATION INDEX [MZR 2.5]
- COOLING SYSTEM SERVICE WARNINGS [MZR 2.5]
- ENGINE COOLANT LEVEL INSPECTION [MZR 2.5]
- ENGINE COOLANT REPLACEMENT [MZR 2.5]
- ENGINE COOLANT PROTECTION INSPECTION [MZR 2.5]
- ENGINE COOLANT LEAKAGE INSPECTION [MZR 2.5]
- COOLING SYSTEM CAP INSPECTION [MZR 2.5]
- COOLANT RESERVE TANK REMOVAL/ INSTALLATION [MZR 2.5]
- RADIATOR REMOVAL/ INSTALLATION [MZR 2.5]
- THERMOSTAT REMOVAL/ INSTALLATION [MZR 2.5]
- THERMOSTAT INSPECTION [MZR 2.5]
- WATER PUMP REMOVAL/ INSTALLATION [MZR 2.5]
- COOLING FAN MOTOR REMOVAL/ INSTALLATION [MZR 2.5]
- COOLING FAN MOTOR INSPECTION [MZR 2.5]
- FAN CONTROL MODULE INSPECTION [MZR 2.5]

Cooling System

- COOLING SYSTEM LOCATION INDEX [MZI 3.7 V6]
- COOLING SYSTEM SERVICE WARNINGS [MZI 3.7 V6]
- ENGINE COOLANT LEVEL INSPECTION [MZI 3.7 V6]
- ENGINE COOLANT REPLACEMENT [MZI 3.7 V6]
- ENGINE COOLANT PROTECTION INSPECTION [MZI 3.7 V6]
- ENGINE COOLANT LEAKAGE INSPECTION [MZI 3.7 V6]
- COOLING SYSTEM CAP INSPECTION [MZI 3.7 V6]
- COOLANT RESERVE TANK REMOVAL/ INSTALLATION [MZI 3.7 V6]
- RADIATOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- THERMOSTAT REMOVAL/ INSTALLATION [MZI 3.7 V6]

- THERMOSTAT INSPECTION [MZI 3.7 V6]
- WATER PUMP REMOVAL/ INSTALLATION [MZI 3.7 V6]
- COOLING FAN MOTOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- COOLING FAN MOTOR INSPECTION [MZI 3.7 V6]
- FAN CONTROL MODULE INSPECTION [MZI 3.7 V6]

In-Take Air System

- INTAKE-AIR SYSTEM LOCATION INDEX [MZR 2.5]
- INTAKE-AIR SYSTEM VACUUM HOSE ROUTING DIAGRAM [MZR 2.5]
- INTAKE-AIR SYSTEM DIAGRAM [MZR 2.5]
- INTAKE MANIFOLD VACUUM INSPECTION [MZR 2.5]
- INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5]
- AIR CLEANER ELEMENT INSPECTION [MZR 2.5]
- THROTTLE BODY INSPECTION [MZR 2.5]
- VARIABLE INTAKE AIR SOLENOID VALVE INSPECTION [MZR 2.5]
- VARIABLE TUMBLE SOLENOID VALVE INSPECTION [MZR 2.5]
- VARIABLE INTAKE AIR SHUTTER VALVE ACTUATOR INSPECTION [MZR 2.5]
- VARIABLE TUMBLE SHUTTER VALVE ACTUATOR INSPECTION [MZR 2.5]
- ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZR 2.5]

In-Take Air System

- INTAKE-AIR SYSTEM LOCATION INDEX [MZI 3.7 V6]
- INTAKE-AIR SYSTEM VACUUM HOSE ROUTING DIAGRAM [MZI 3.7 V6]
- INTAKE-AIR SYSTEM DIAGRAM [MZI 3.7 V6]
- INTAKE MANIFOLD VACUUM INSPECTION [MZI 3.7 V6]
- INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6]
- AIR CLEANER ELEMENT INSPECTION [MZI 3.7 V6]
- THROTTLE BODY INSPECTION [MZI 3.7 V6]
- ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZI 3.7 V6]

Fuel System

- FUEL SYSTEM LOCATION INDEX [MZR 2.5]
- FUEL SYSTEM FLOW DIAGRAM [MZR 2.5]
- BEFORE SERVICE PRECAUTION [MZR 2.5]
- AFTER SERVICE PRECAUTION [MZR 2.5]
- FUEL LINE PRESSURE INSPECTION [MZR 2.5]
- FUEL TANK REMOVAL/ INSTALLATION [MZR 2.5]
- FUEL TANK INSPECTION [MZR 2.5]
- NON-RETURN VALVE INSPECTION [MZR 2.5]
- FUEL PUMP UNIT REMOVAL/ INSTALLATION [MZR 2.5]
- FUEL PUMP UNIT DISASSEMBLY/ ASSEMBLY [MZR 2.5]
- FUEL PUMP UNIT INSPECTION [MZR 2.5]
- QUICK RELEASE CONNECTOR REMOVAL/ INSTALLATION [MZR 2.5]
- FUEL INJECTOR REMOVAL/ INSTALLATION [MZR 2.5]
- FUEL INJECTOR INSPECTION [MZR 2.5]

Fuel System

- FUEL SYSTEM LOCATION INDEX [MZI 3.7 V6]
- FUEL SYSTEM DIAGRAM [MZI 3.7 V6]
- BEFORE SERVICE PRECAUTION [MZI 3.7 V6]
- AFTER SERVICE PRECAUTION [MZI 3.7 V6]
- FUEL LINE PRESSURE INSPECTION [MZI 3.7 V6]
- FUEL TANK REMOVAL/ INSTALLATION [MZI 3.7 V6]
- FUEL TANK INSPECTION [MZI 3.7 V6]
- NON-RETURN VALVE INSPECTION [MZI 3.7 V6]

- FUEL PUMP UNIT REMOVAL/ INSTALLATION [MZI 3.7 V6]
- FUEL PUMP UNIT DI SASSEMBLY/ ASSEMBLY [MZI 3.7 V6]
- FUEL PUMP UNIT INSPECTION [MZI 3.7 V6]
- ELECTRONIC FUEL PUMP RELAY REMOVAL/ INSTALLATION [MZI 3.7 V6]
- QUICK RELEASE CONNECTOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- FUEL INJECTOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- FUEL INJECTOR INSPECTION [MZI 3.7 V6]

Exhaust System

- EXHAUST SYSTEM INSPECTION [MZR 2.5]
- EXHAUST SYSTEM REMOVAL/ INSTALLATION [MZR 2.5]

Exhaust System

- EXHAUST SYSTEM INSPECTION [MZI 3.7 V6]
- EXHAUST SYSTEM REMOVAL/ INSTALLATION [MZI 3.7 V6]

Emission System

- EMISSION SYSTEM LOCATION INDEX [MZR 2.5]
- EMISSION SYSTEM DIAGRAM [MZR 2.5]
- FUEL-FILLER CAP INSPECTION [MZR 2.5]
- PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [MZR 2.5]
- PURGE SOLENOID VALVE INSPECTION [MZR 2.5]
- EGR VALVE REMOVAL/ INSTALLATION [MZR 2.5]
- EGR VALVE INSPECTION [MZR 2.5]
- POSITIVE CRANKCASE VENTILATION (PCV) VALVE REMOVAL/ INSTALLATION [MZR 2.5]
- POSITIVE CRANKCASE VENTILATION (PCV) VALVE INSPECTION [MZR 2.5]
- ROLLOVER VALVE REMOVAL/ INSTALLATION [MZR 2.5]
- ROLLOVER VALVE INSPECTION [MZR 2.5]
- FUEL SHUT-OFF VALVE REMOVAL/ INSTALLATION [MZR 2.5]
- FUEL SHUT-OFF VALVE INSPECTION [MZR 2.5]
- QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/ INSTALLATION [MZR 2.5]
- EVAPORATIVE CHAMBER REMOVAL/ INSTALLATION [MZR 2.5]
- EVAPORATIVE CHAMBER INSPECTION [MZR 2.5]
- CHARCOAL CANISTER, CANISTER VENT (CV) SOLENOID VALVE, AIR FILTER COMPONENT REMOVAL/ INSTALLATION [MZR 2.5]
- CHARCOAL CANISTER, CANISTER VENT (CV) SOLENOID VALVE, AIR FILTER COMPONENT INSPECTION [MZR 2.5]

Emission System

- EMISSION SYSTEM LOCATION INDEX [MZI 3.7 V6]
- EMISSION SYSTEM DIAGRAM [MZI 3.7 V6]
- FUEL-FILLER CAP INSPECTION [MZI 3.7 V6]
- PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [MZI 3.7 V6]
- PURGE SOLENOID VALVE INSPECTION [MZI 3.7 V6]
- POSITIVE CRANKCASE VENTILATION (PCV) VALVE REMOVAL/ INSTALLATION [MZI 3.7 V6]
- POSITIVE CRANKCASE VENTILATION (PCV) VALVE INSPECTION [MZI 3.7 V6]
- POSITIVE CRANKCASE VENTILATION (PCV) FITTING INSPECTION [MZI 3.7 V6]
- POSITIVE CRANKCASE VENTILATION (PCV) FITTING REMOVAL/ INSTALLATION [MZI 3.7 V6]
- ROLLOVER VALVE REMOVAL/ INSTALLATION [MZI 3.7 V6]
- ROLLOVER VALVE INSPECTION [MZI 3.7 V6]
- FUEL SHUT-OFF VALVE REMOVAL/ INSTALLATION [MZI 3.7 V6]
- FUEL SHUT-OFF VALVE INSPECTION [MZI 3.7 V6]
- QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/ INSTALLATION [MZI 3.7 V6]
- EVAPORATIVE CHAMBER REMOVAL/ INSTALLATION [MZI 3.7 V6]
- EVAPORATIVE CHAMBER INSPECTION [MZI 3.7 V6]

- CHARCOAL CANISTER, CANISTER VENT (CV) SOLENOID VALVE, AIR FILTER COMPONENT REMOVAL/ INSTALLATION [MZI 3.7 V6]
- CHARCOAL CANISTER, CANISTER VENT (CV) SOLENOID VALVE, AIR FILTER COMPONENT INSPECTION [MZI 3.7 V6]

Charging System

- CHARGING SYSTEM LOCATION INDEX [MZR 2.5]
- BATTERY REMOVAL/ INSTALLATION [MZR 2.5]
- BATTERY INSPECTION [MZR 2.5]
- BATTERY RECHARGING [MZR 2.5]
- GENERATOR REMOVAL/ INSTALLATION [MZR 2.5]
- GENERATOR INSPECTION [MZR 2.5]
- GENERATOR DISASSEMBLY/ ASSEMBLY [MZR 2.5]

Charging System

- CHARGING SYSTEM LOCATION INDEX [MZI 3.7 V6]
- BATTERY REMOVAL/ INSTALLATION [MZI 3.7 V6]
- BATTERY INSPECTION [MZI 3.7 V6]
- BATTERY RECHARGING [MZI 3.7 V6]
- GENERATOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- GENERATOR INSPECTION [MZI 3.7 V6]
- GENERATOR DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6]

Ignition System

- IGNITION SYSTEM LOCATION INDEX [MZR 2.5]
- IGNITION COIL REMOVAL/ INSTALLATION [MZR 2.5]
- IGNITION COIL INSPECTION [MZR 2.5]
- SPARK PLUG REMOVAL/ INSTALLATION [MZR 2.5]
- SPARK PLUG INSPECTION [MZR 2.5]

Ignition System

- IGNITION SYSTEM LOCATION INDEX [MZI 3.7 V6]
- IGNITION COIL REMOVAL/ INSTALLATION [MZI 3.7 V6]
- IGNITION COIL INSPECTION [MZI 3.7 V6]
- SPARK PLUG REMOVAL/ INSTALLATION [MZI 3.7 V6]
- SPARK PLUG INSPECTION [MZI 3.7 V6]

Starting System

- STARTING SYSTEM LOCATION INDEX [MZR 2.5]
- STARTER REMOVAL/ INSTALLATION [MZR 2.5]
- STARTER INSPECTION [MZR 2.5]
- STARTER DISASSEMBLY/ ASSEMBLY [MZR 2.5]
- STARTER INTERLOCK SWITCH INSPECTION [MZR 2.5]

Starting System

- STARTING SYSTEM LOCATION INDEX [MZI 3.7 V6]
- STARTER REMOVAL/ INSTALLATION [MZI 3.7 V6]
- STARTER INSPECTION [MZI 3.7 V6]
- STARTER DISASSEMBLY/ ASSEMBLY [MZI 3.7 V6]

Cruise Control System

- CRUISE CONTROL SWITCH INSPECTION [MZR 2.5]

Cruise Control System

- CRUISE CONTROL SWITCH INSPECTION [MZI 3.7 V6]

Control System

- CONTROL SYSTEM LOCATION INDEX [MZR 2.5]
- CONTROL SYSTEM DIAGRAM [MZR 2.5]
- CONTROL SYSTEM WIRING DIAGRAM [MZR 2.5]
- PCM REMOVAL/ INSTALLATION [MZR 2.5]
- PCM INSPECTION [MZR 2.5]
- PCM CONFIGURATION [MZR 2.5]
- CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [MZR 2.5]
- NEUTRAL SWITCH INSPECTION [MZR 2.5]
- POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [MZR 2.5]
- VARIABLE TUMBLE SHUTTER VALVE POSITION SENSOR INSPECTION [MZR 2.5]
- ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]
- ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION [MZR 2.5]
- MASS AIR FLOW (MAF) SENSOR INSPECTION [MZR 2.5]
- INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [MZR 2.5]
- MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]
- MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [MZR 2.5]
- BAROMETRIC PRESSURE (BARO) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]
- BAROMETRIC PRESSURE (BARO) SENSOR INSPECTION [MZR 2.5]
- THROTTLE POSITION (TP) SENSOR INSPECTION [MZR 2.5]
- ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [MZR 2.5]
- AIR FUEL RATIO (A/ F) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]
- AIR FUEL RATIO (A/ F) SENSOR INSPECTION [MZR 2.5]
- HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [MZR 2.5]
- HEATED OXYGEN SENSOR (HO2S) INSPECTION [MZR 2.5]
- CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]
- CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [MZR 2.5]
- CAMSHAFT POSITION (CMP) SENSOR REMOVAL/ INSTALLATION [MZR 2.5]
- CAMSHAFT POSITION (CMP) SENSOR INSPECTION [MZR 2.5]
- KNOCK SENSOR (KS) REMOVAL/ INSTALLATION [MZR 2.5]
- KNOCK SENSOR (KS) INSPECTION [MZR 2.5]
- FUEL TANK PRESSURE SENSOR INSPECTION [MZR 2.5]

Control System

- CONTROL SYSTEM LOCATION INDEX [MZI 3.7 V6]
- CONTROL SYSTEM DIAGRAM [MZI 3.7 V6]
- CONTROL SYSTEM WIRING DIAGRAM [MZI 3.7 V6]
- PCM REMOVAL/ INSTALLATION [MZI 3.7 V6]
- PCM INSPECTION [MZI 3.7 V6]
- PCM CONFIGURATION [MZI 3.7 V6]
- POWER STEERING PRESSURE (PSP) SWITCH INSPECTION [MZI 3.7 V6]
- MASS AIR FLOW (MAF)/ INTAKE AIR TEMPERATURE (IAT) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- MASS AIR FLOW (MAF) SENSOR INSPECTION [MZI 3.7 V6]
- INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [MZI 3.7 V6]
- THROTTLE POSITION (TP) SENSOR INSPECTION [MZI 3.7 V6]
- ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [MZI 3.7 V6]
- AIR FUEL RATIO (A/ F) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- AIR FUEL RATIO (A/ F) SENSOR INSPECTION [MZI 3.7 V6]
- HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [MZI 3.7 V6]
- HEATED OXYGEN SENSOR (HO2S) INSPECTION [MZI 3.7 V6]
- CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [MZI 3.7 V6]

- CAMSHAFT POSITION (CMP) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- CAMSHAFT POSITION (CMP) SENSOR INSPECTION [MZI 3.7 V6]
- KNOCK SENSOR (KS) REMOVAL/ INSTALLATION [MZI 3.7 V6]
- KNOCK SENSOR (KS) INSPECTION [MZI 3.7 V6]
- CYLINDER HEAD TEMPERATURE (CHT) SENSOR REMOVAL/ INSTALLATION [MZI 3.7 V6]
- CYLINDER HEAD TEMPERATURE (CHT) SENSOR INSPECTION [MZI 3.7 V6]
- FUEL TANK PRESSURE SENSOR INSPECTION [MZI 3.7 V6]

Technical Data

- ENGINE TECHNICAL DATA [MZR 2.5]

Technical Data

- ENGINE TECHNICAL DATA [MZI 3.7 V6]

Maintenance/ Service Tools

- ENGINE SST [MZR 2.5]

Maintenance/ Service Tools

- ENGINE SST [MZI 3.7 V6]