


2012 - Mazda6 - Engine


DRIVE BELT AUTO TENSIONER INSPECTION [MZI 3.7 V6]

1. Remove the engine cover. (See [ENGINE COVER REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
2. Remove the front wheel and tire (RH). (See [GENERAL PROCEDURES \(SUSPENSION\)](#).)
3. Remove the splash shield (RH).
4. Remove the generator and A/C drive belt. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
5. Verify that the drive belt auto tensioner moves smoothly in the operational direction.
 - Replace the drive belt auto tensioner if necessary.

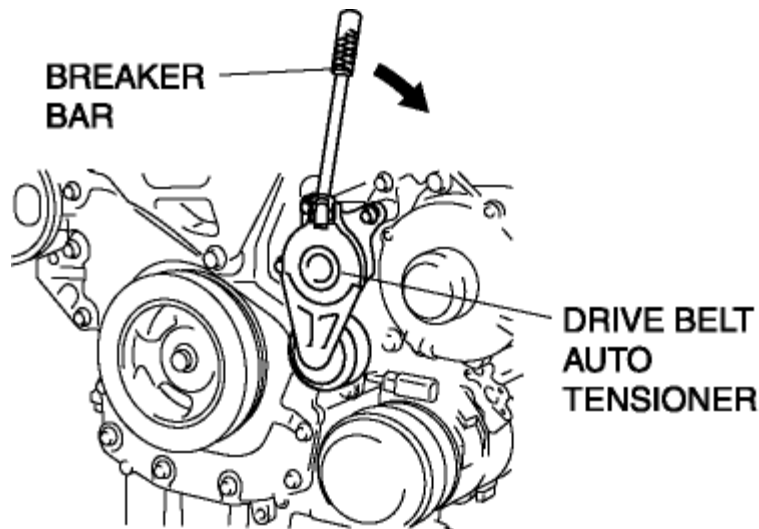

Tightening torque

- 9—12 N·m {92—122 kgf·cm, 80—106 in·lbf}
6. Turn the drive belt auto tensioner pulley by hand and verify that it rotates smoothly.
 - Replace the drive belt auto tensioner if necessary.

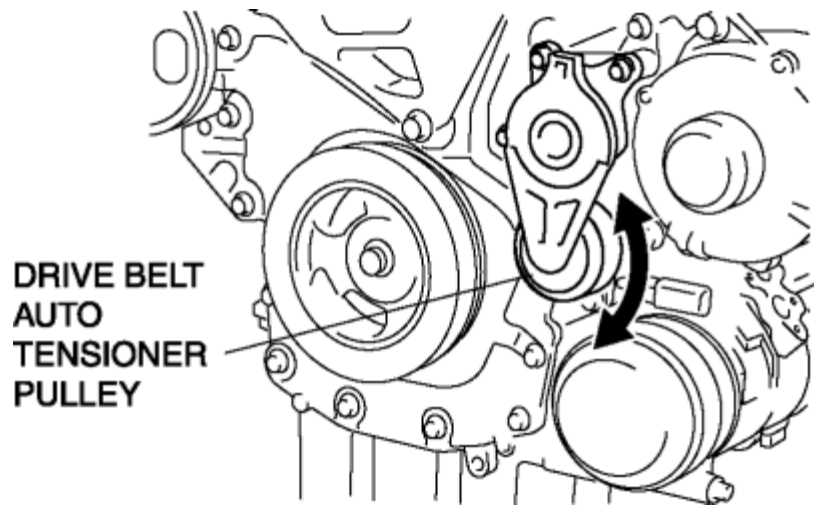

Tightening torque

- 9—12 N·m {92—122 kgf·cm, 80—106 in·lbf}

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Engine


DRIVE BELT AUTO TENSIONER INSPECTION [MZI 3.7 V6]

1. Remove the engine cover. (See [ENGINE COVER REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
2. Remove the front wheel and tire (RH). (See [GENERAL PROCEDURES \(SUSPENSION\)](#).)
3. Remove the splash shield (RH).
4. Remove the generator and A/C drive belt. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#).)
5. Verify that the drive belt auto tensioner moves smoothly in the operational direction.
 - Replace the drive belt auto tensioner if necessary.

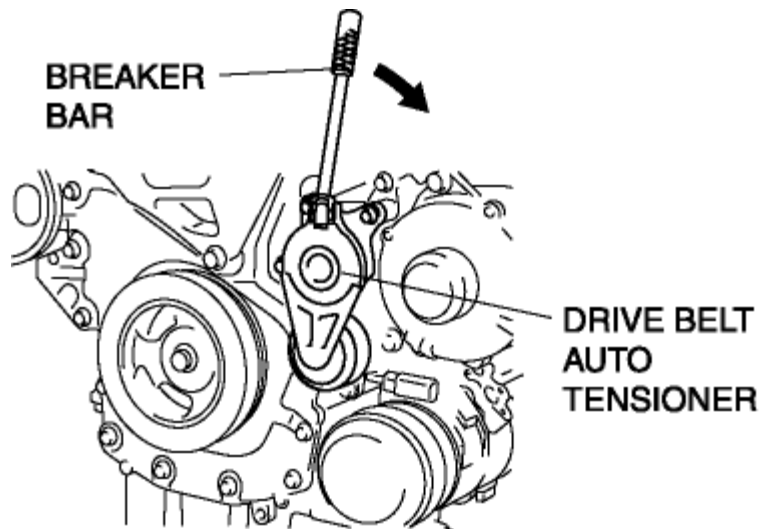

Tightening torque

- 9—12 N·m {92—122 kgf·cm, 80—106 in·lbf}
6. Turn the drive belt auto tensioner pulley by hand and verify that it rotates smoothly.
 - Replace the drive belt auto tensioner if necessary.

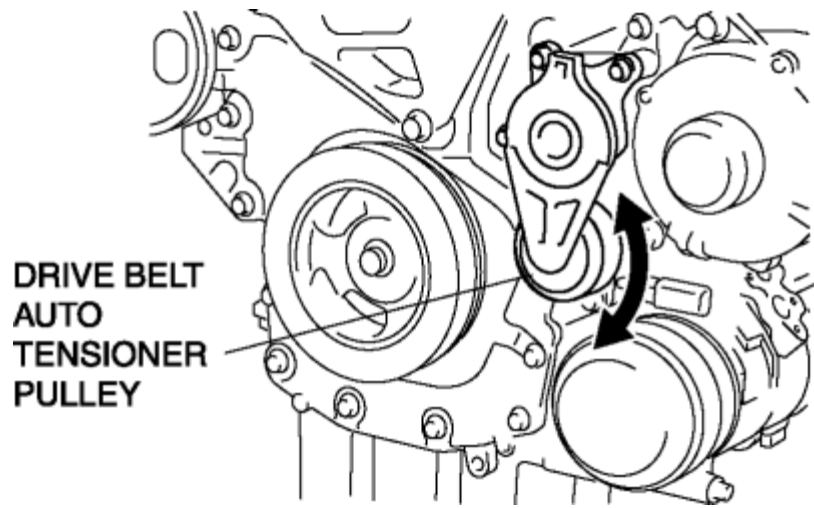

Tightening torque

- 9—12 N·m {92—122 kgf·cm, 80—106 in·lbf}

7. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.