


2012 - Mazda6 - Engine


ENGINE LOCATION INDEX [MZR 2.5]

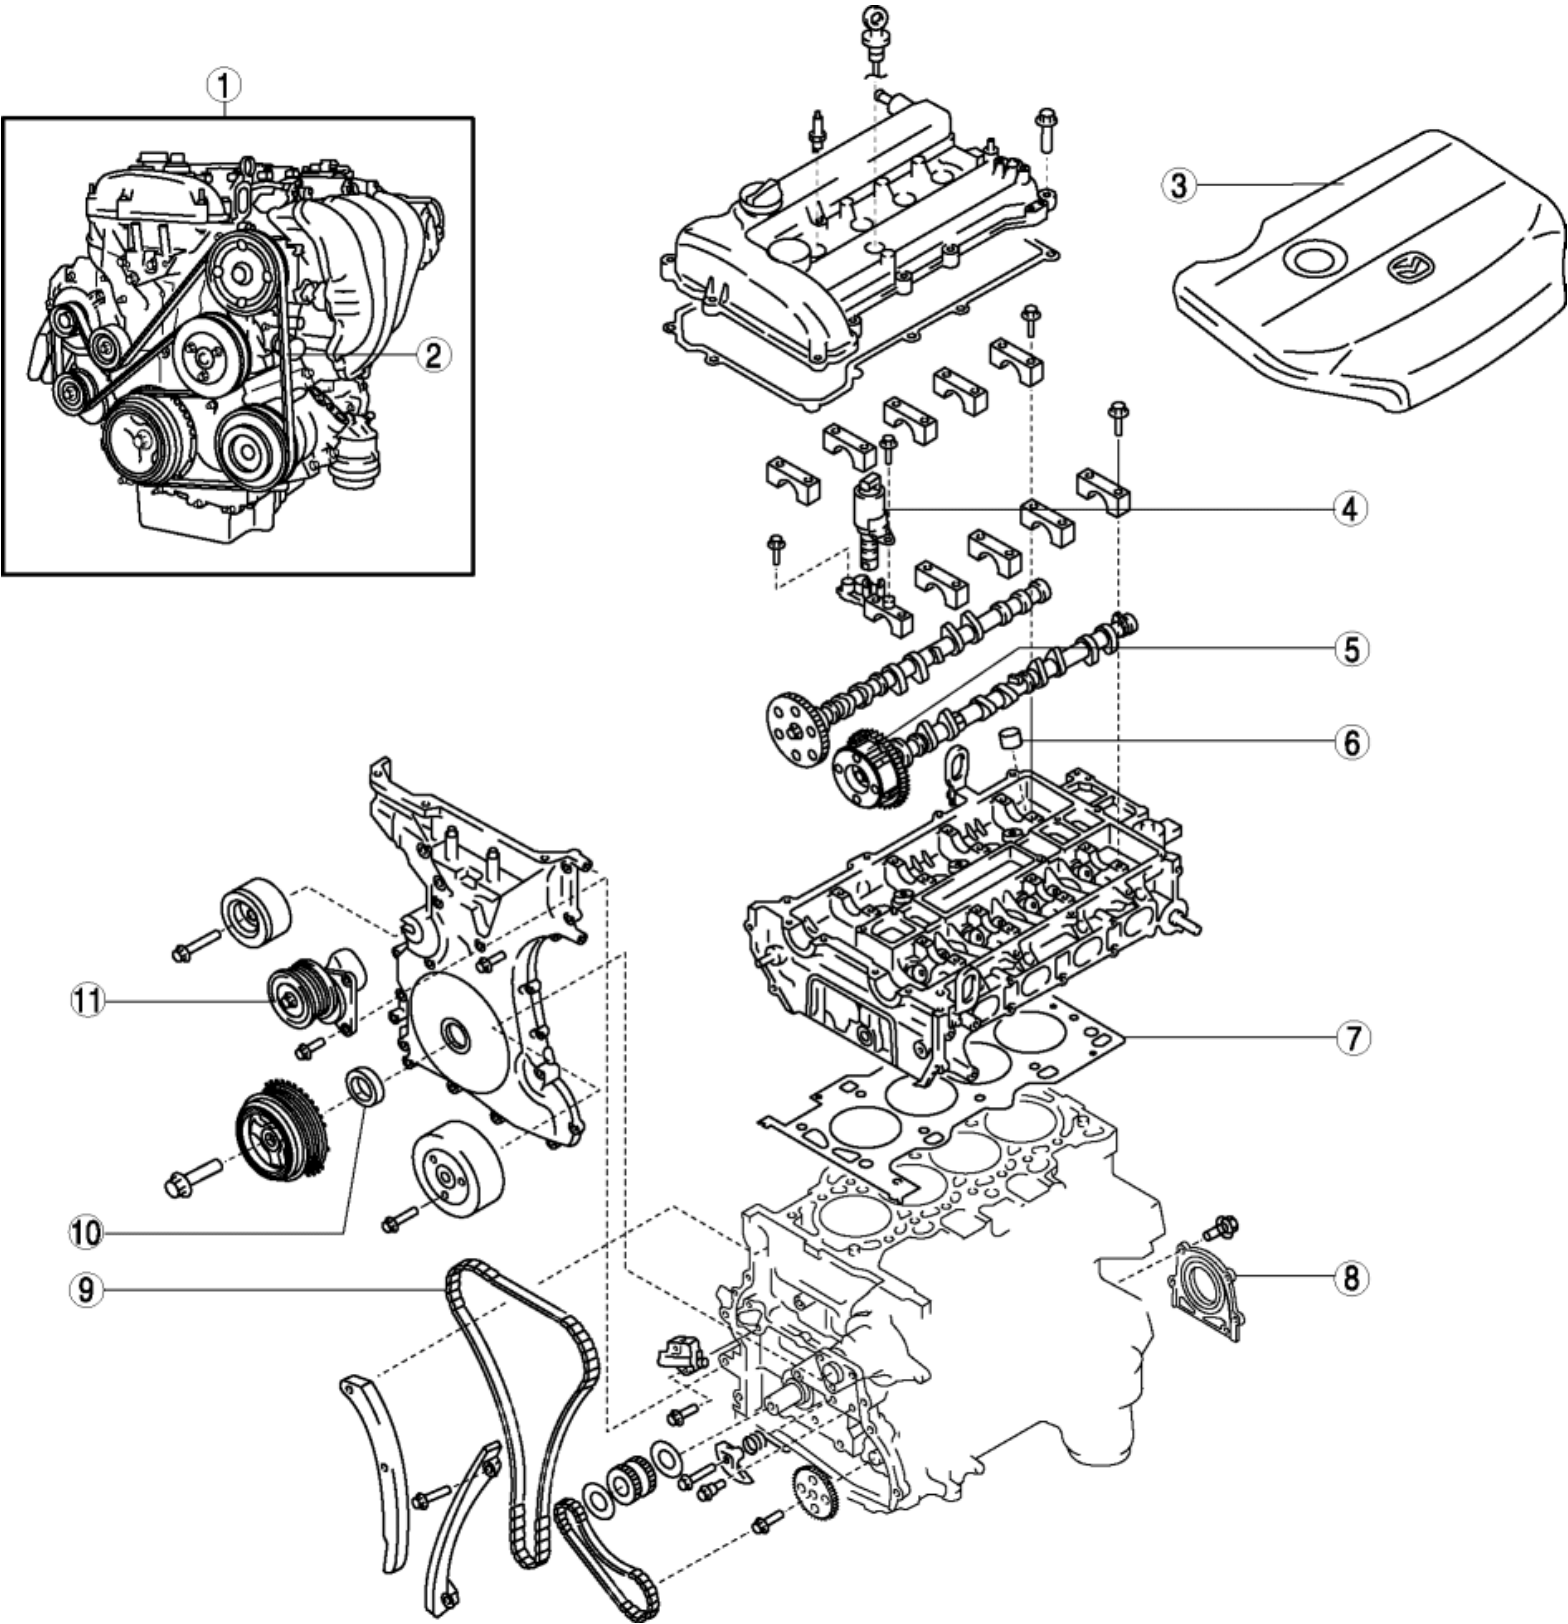

1	Engine (See COMPRESSION INSPECTION [MZR 2.5].) (See ENGINE REMOVAL/ INSTALLATION [MZR 2.5].) (See ENGINE DISASSEMBLY/ ASSEMBLY [MZR 2.5].) (See ENGINE TUNE-UP [MZR 2.5].)
2	Drive belt (See DRIVE BELT INSPECTION [MZR 2.5].) (See DRIVE BELT REMOVAL/ INSTALLATION [MZR 2.5].)
3	Plug hole plate (See PLUG HOLE PLATE REMOVAL/ INSTALLATION [MZR 2.5].)
4	OCV (See OIL CONTROL VALVE (OCV) INSPECTION [MZR 2.5].) (See OIL CONTROL VALVE (OCV) REMOVAL/ INSTALLATION [MZR 2.5].)
5	Variable valve timing actuator (See VARIABLE VALVE TIMING ACTUATOR INSPECTION [MZR 2.5].) (See VARIABLE VALVE TIMING ACTUATOR REMOVAL/ INSTALLATION [MZR 2.5].)
6	Tappet (See VALVE CLEARANCE INSPECTION [MZR 2.5].) (See VALVE CLEARANCE ADJUSTMENT [MZR 2.5].)
7	Cylinder head gasket (See CYLINDER HEAD GASKET REPLACEMENT [MZR 2.5].)
8	Rear oil seal (See REAR OIL SEAL REPLACEMENT [MZR 2.5].)
9	Timing chain (See TIMING CHAIN REMOVAL/ INSTALLATION [MZR 2.5].)
10	Front oil seal (See FRONT OIL SEAL REPLACEMENT [MZR 2.5].)
11	Drive belt auto tensioner (See DRIVE BELT AUTO TENSIONER INSPECTION [MZR 2.5].) (See ENGINE DISASSEMBLY/ ASSEMBLY [MZR 2.5].)

2012 - Mazda6 - Engine

ENGINE LOCATION INDEX [MZR 2.5]

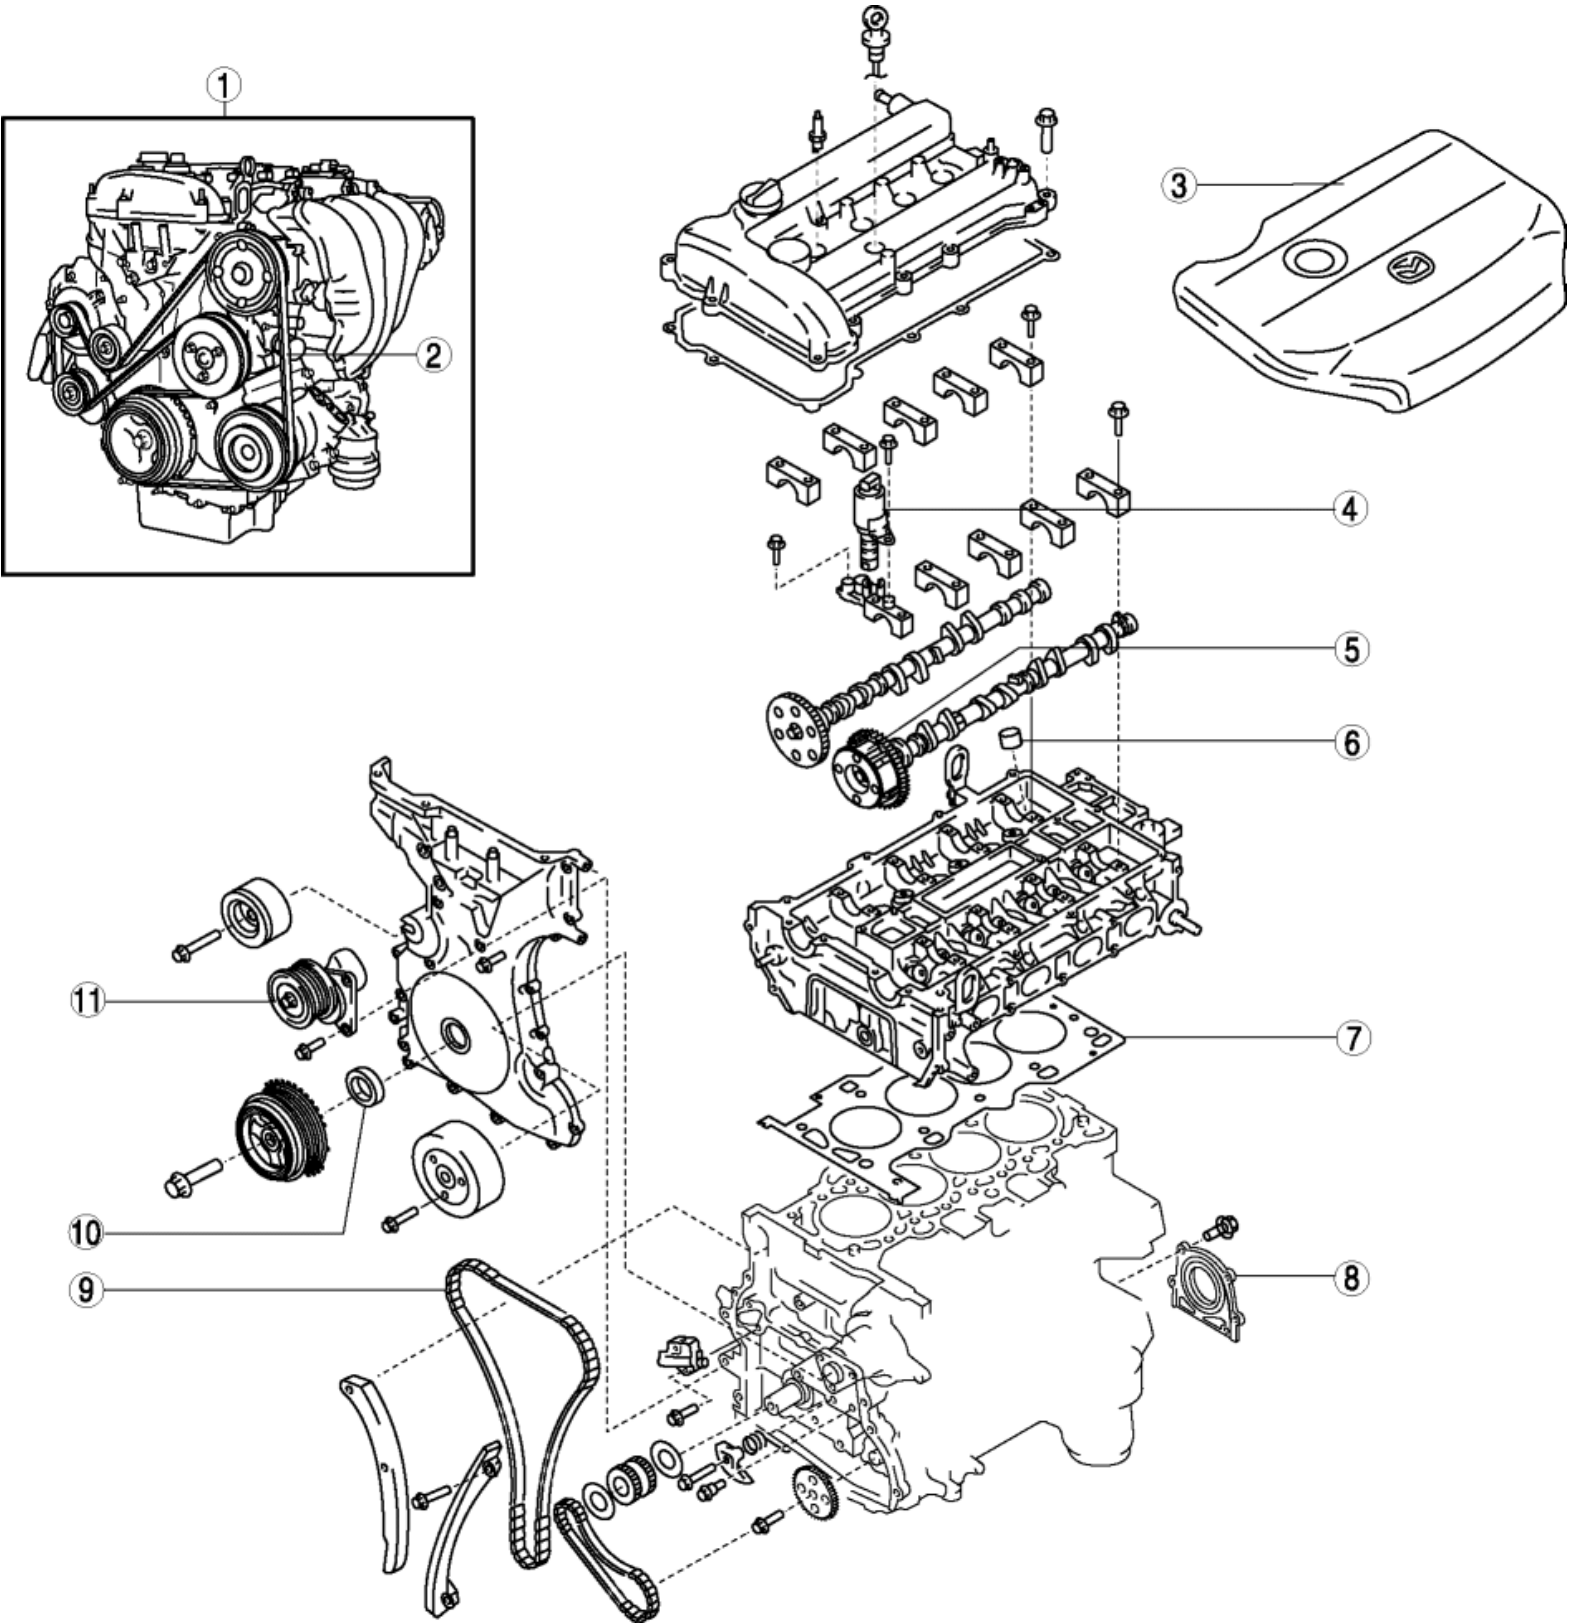

1	Engine (See COMPRESSION INSPECTION [MZR 2.5].) (See ENGINE REMOVAL/ INSTALLATION [MZR 2.5].) (See ENGINE DISASSEMBLY/ ASSEMBLY [MZR 2.5].) (See ENGINE TUNE-UP [MZR 2.5].)
2	Drive belt (See DRIVE BELT INSPECTION [MZR 2.5].) (See DRIVE BELT REMOVAL/ INSTALLATION [MZR 2.5].)
3	Plug hole plate (See PLUG HOLE PLATE REMOVAL/ INSTALLATION [MZR 2.5].)
4	OCV (See OIL CONTROL VALVE (OCV) INSPECTION [MZR 2.5].) (See OIL CONTROL VALVE (OCV) REMOVAL/ INSTALLATION [MZR 2.5].)
5	Variable valve timing actuator (See VARIABLE VALVE TIMING ACTUATOR INSPECTION [MZR 2.5].) (See VARIABLE VALVE TIMING ACTUATOR REMOVAL/ INSTALLATION [MZR 2.5].)
6	Tappet (See VALVE CLEARANCE INSPECTION [MZR 2.5].) (See VALVE CLEARANCE ADJUSTMENT [MZR 2.5].)
7	Cylinder head gasket (See CYLINDER HEAD GASKET REPLACEMENT [MZR 2.5].)
8	Rear oil seal (See REAR OIL SEAL REPLACEMENT [MZR 2.5].)
9	Timing chain (See TIMING CHAIN REMOVAL/ INSTALLATION [MZR 2.5].)
10	Front oil seal (See FRONT OIL SEAL REPLACEMENT [MZR 2.5].)
11	Drive belt auto tensioner (See DRIVE BELT AUTO TENSIONER INSPECTION [MZR 2.5].) (See ENGINE DISASSEMBLY/ ASSEMBLY [MZR 2.5].)

