


2012 - Mazda6 - Engine

OIL CONTROL VALVE (OCV) REMOVAL/ INSTALLATION [MZR 2.5]

1. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Remove the ignition coils. (See [IGNITION COIL REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
3. Remove the ventilation hose. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
4. Disconnect the camshaft position (CMP) sensor connector.
5. Disconnect the OCV connector.
6. Remove the cylinder head cover. (See [TIMING CHAIN REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
7. Remove the OCV installation bolt.

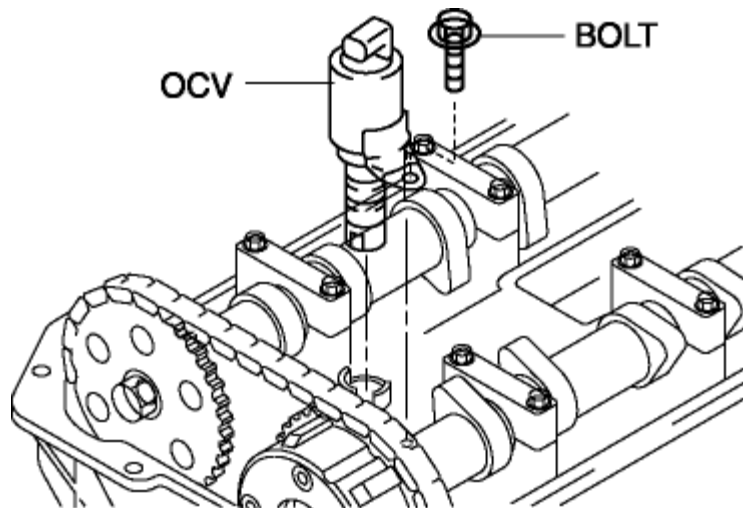

8. Remove the OCV.
9. Install in the reverse order of removal.


OCV installation bolt tightening torque

- 8—11 N·m {82—117 kgf·cm, 71—101 in·lbf}

2012 - Mazda6 - Engine

OIL CONTROL VALVE (OCV) REMOVAL/ INSTALLATION [MZR 2.5]

1. Remove the plug hole plate. (See [PLUG HOLE PLATE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Remove the ignition coils. (See [IGNITION COIL REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
3. Remove the ventilation hose. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
4. Disconnect the camshaft position (CMP) sensor connector.
5. Disconnect the OCV connector.
6. Remove the cylinder head cover. (See [TIMING CHAIN REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
7. Remove the OCV installation bolt.

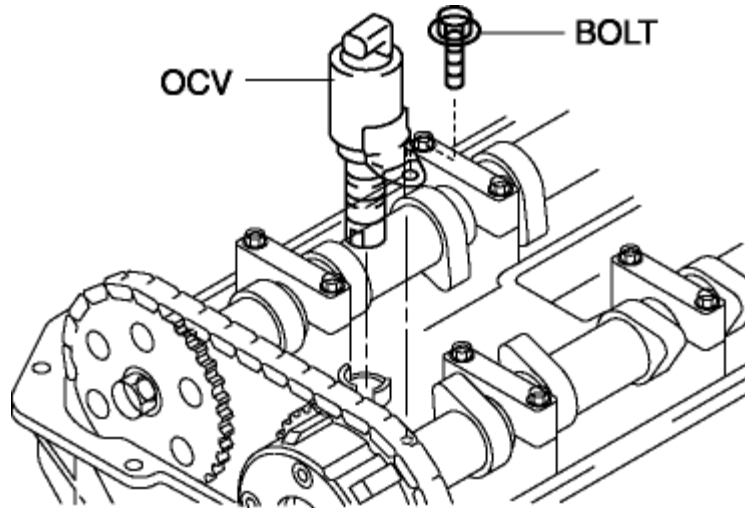

8. Remove the OCV.
9. Install in the reverse order of removal.

OCV installation bolt tightening torque

- 8—11 N·m {82—117 kgf·cm, 71—101 in·lbf}