


## 2012 - Mazda6 - Engine

### DRIVE BELT REMOVAL/ INSTALLATION [MZR 2.5]

1. Set the front mudguard (RH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
2. Remove the splash shield (RH).
3. Rotate the drive belt auto tensioner in the direction shown in the figure and remove the drive belt.

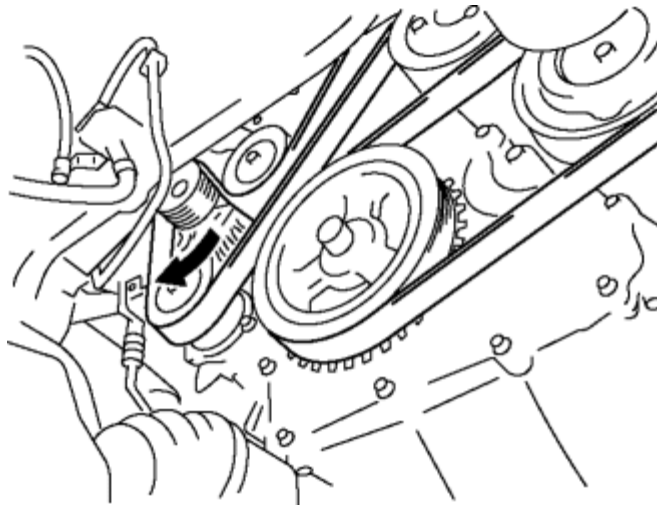


4. Install the drive belt.
5. Install the splash shield (RH).
6. Install the front mudguard (RH). (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))

## 2012 - Mazda6 - Engine

### DRIVE BELT REMOVAL/ INSTALLATION [MZR 2.5]

1. Set the front mudguard (RH) out of the way. (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))
2. Remove the splash shield (RH).
3. Rotate the drive belt auto tensioner in the direction shown in the figure and remove the drive belt.

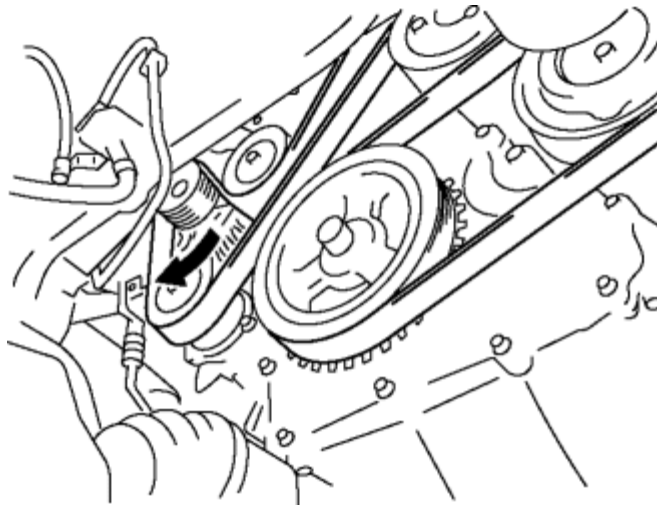

4. Install the drive belt.
5. Install the splash shield (RH).
6. Install the front mudguard (RH). (See [FRONT MUDGUARD REMOVAL/ INSTALLATION.](#))