


2012 - Mazda6 - Engine

DRIVE BELT AUTO TENSIONER INSPECTION [MZR 2.5]

1. Remove the drive belt. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Verify that the drive belt auto tensioner moves smoothly in the operational direction.
 - Replace the drive belt auto tensioner if necessary. (See [ENGINE DISASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#).)

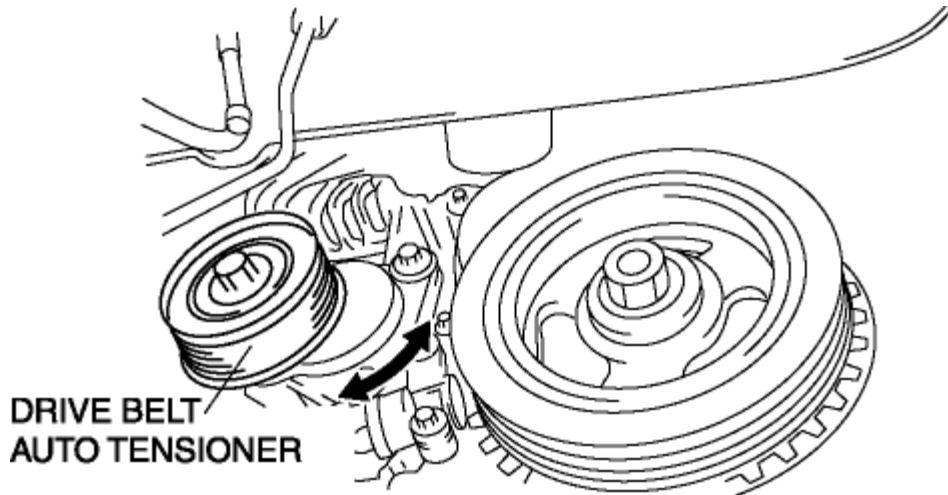


3. Rotate the drive belt auto tensioner pulley by hand and verify that it rotates smoothly.
 - Replace the drive belt auto tensioner if necessary. (See [ENGINE DISASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#).)
4. Install the drive belt. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

2012 - Mazda6 - Engine

DRIVE BELT AUTO TENSIONER INSPECTION [MZR 2.5]

1. Remove the drive belt. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Verify that the drive belt auto tensioner moves smoothly in the operational direction.
 - Replace the drive belt auto tensioner if necessary. (See [ENGINE DISASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#).)

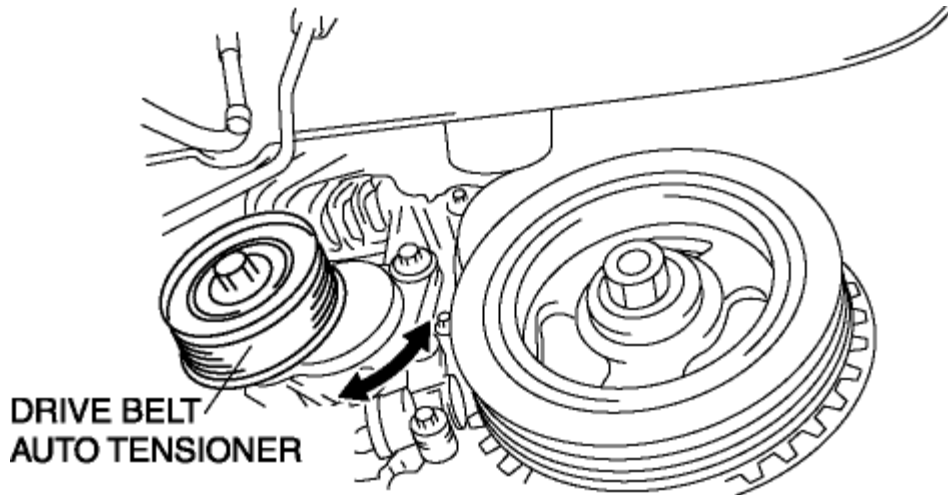

3. Rotate the drive belt auto tensioner pulley by hand and verify that it rotates smoothly.
 - Replace the drive belt auto tensioner if necessary. (See [ENGINE DISASSEMBLY/ ASSEMBLY \[MZR 2.5\]](#).)
4. Install the drive belt. (See [DRIVE BELT REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)