


2012 - Mazda6 - Engine

INTAKE-AIR SYSTEM LOCATION INDEX [MZR 2.5]

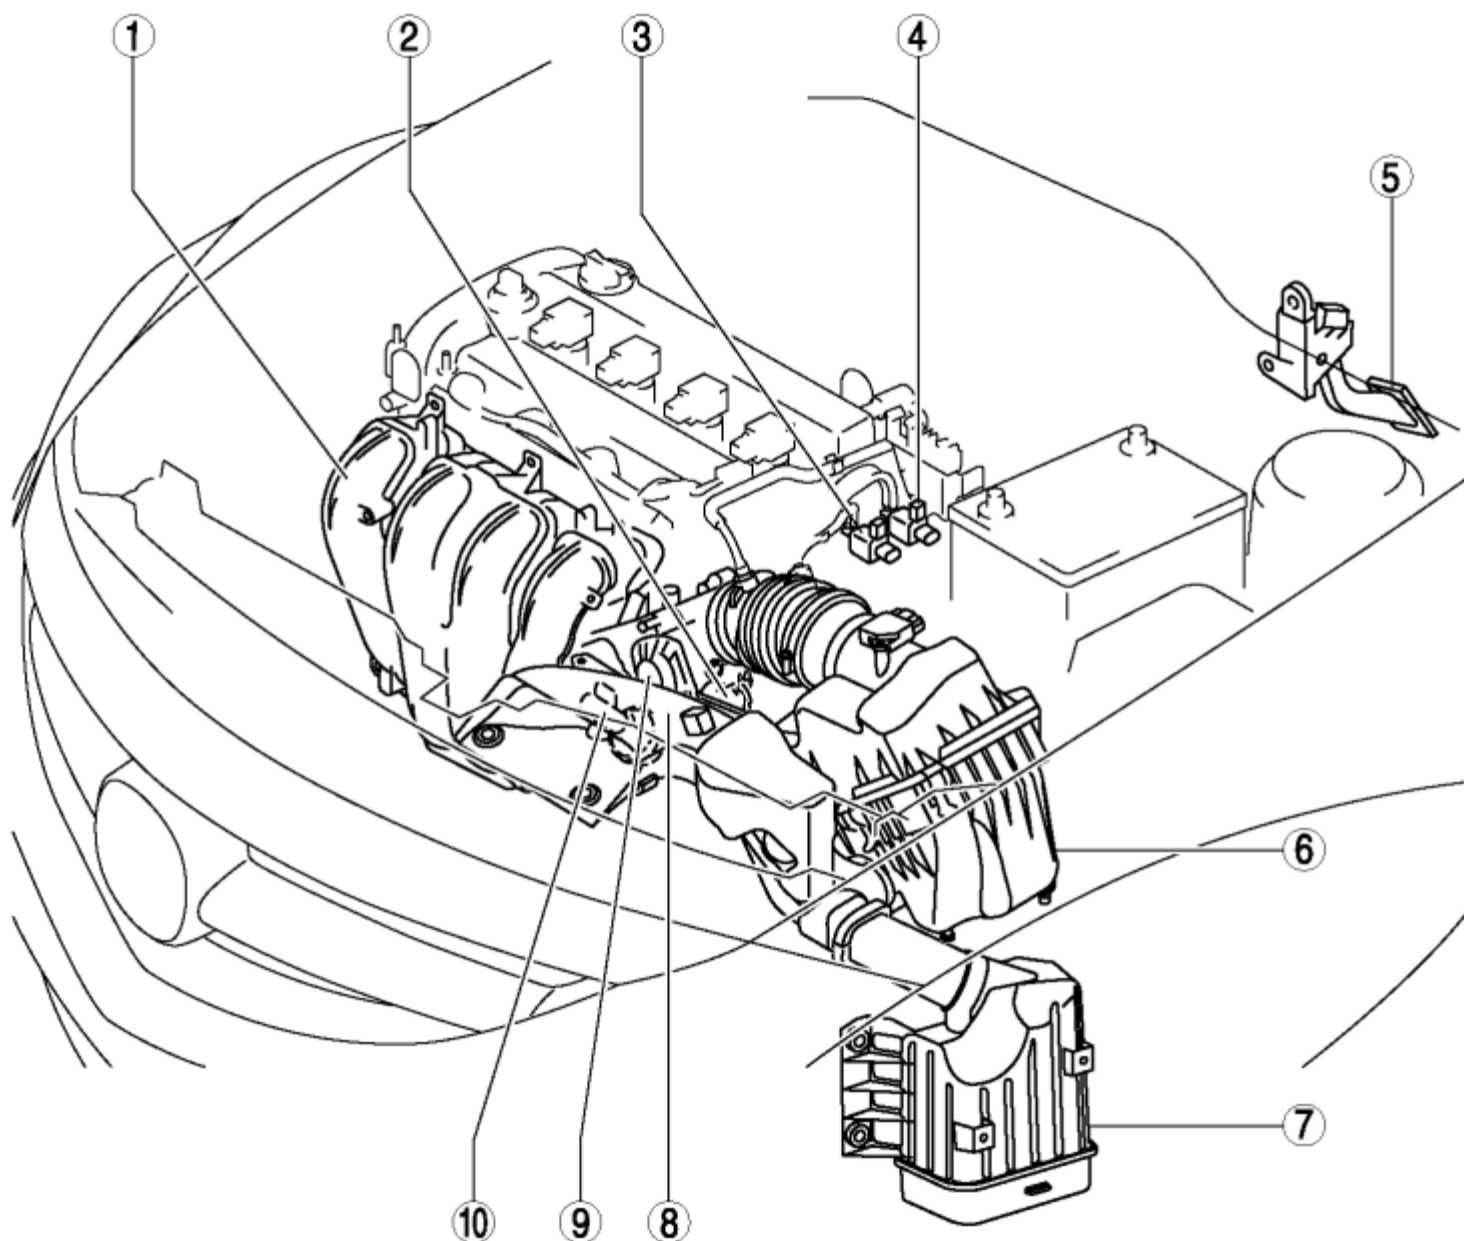

1 Intake manifold

(See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)


(See [INTAKE MANIFOLD VACUUM INSPECTION \[MZR 2.5\]](#).)

2 Variable tumble shutter valve actuator

	(See VARIABLE TUMBLE SHUTTER VALVE ACTUATOR INSPECTION [MZR 2.5].)
3	Variable intake air solenoid valve (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].) (See VARIABLE INTAKE AIR SOLENOID VALVE INSPECTION [MZR 2.5].)
4	Variable tumble solenoid valve (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].) (See VARIABLE TUMBLE SOLENOID VALVE INSPECTION [MZR 2.5].)
5	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZR 2.5].)
6	Air cleaner (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].) (See AIR CLEANER ELEMENT INSPECTION [MZR 2.5].)
7	Resonance chamber (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
8	Fresh-air duct (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
9	Throttle body (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].) (See THROTTLE BODY INSPECTION [MZR 2.5].)
10	Variable intake air shutter valve actuator (See VARIABLE INTAKE AIR SHUTTER VALVE ACTUATOR INSPECTION [MZR 2.5].)

2012 - Mazda6 - Engine

INTAKE-AIR SYSTEM LOCATION INDEX [MZR 2.5]

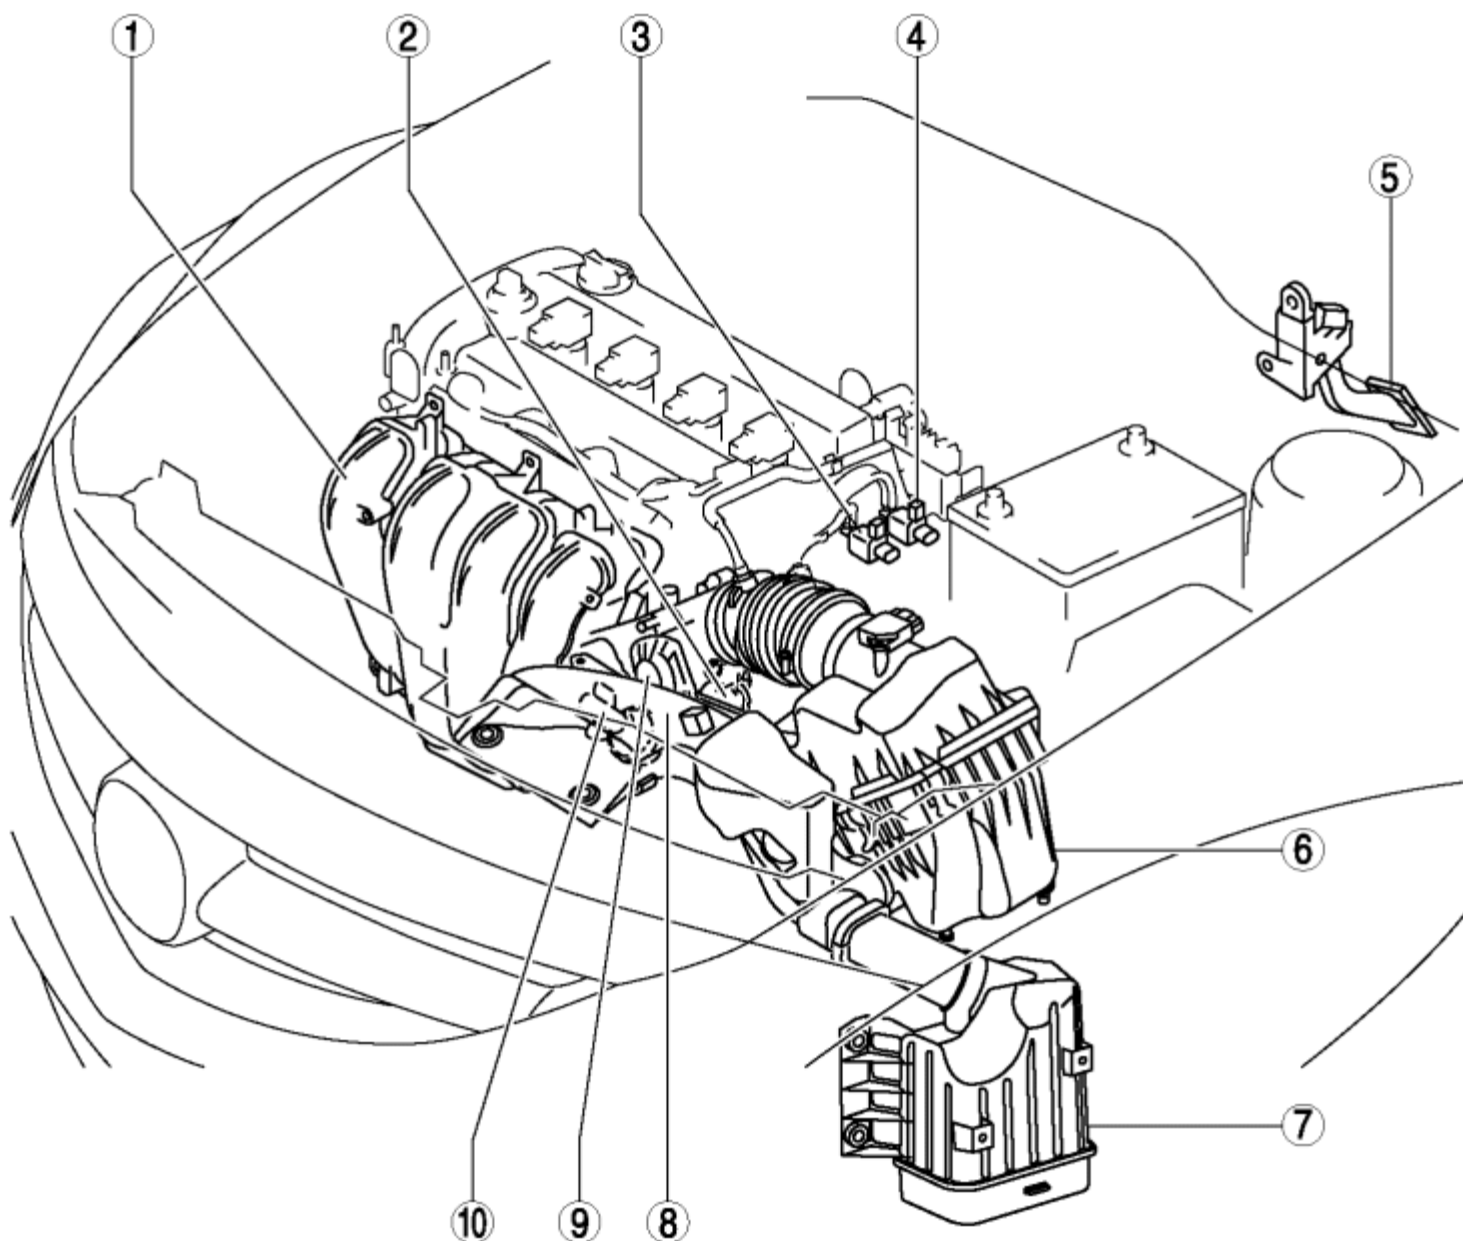

1 Intake manifold

(See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

(See [INTAKE MANIFOLD VACUUM INSPECTION \[MZR 2.5\]](#).)

2 Variable tumble shutter valve actuator

	(See VARIABLE TUMBLE SHUTTER VALVE ACTUATOR INSPECTION [MZR 2.5].)
3	Variable intake air solenoid valve (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].) (See VARIABLE INTAKE AIR SOLENOID VALVE INSPECTION [MZR 2.5].)
4	Variable tumble solenoid valve (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].) (See VARIABLE TUMBLE SOLENOID VALVE INSPECTION [MZR 2.5].)
5	Accelerator pedal (See ACCELERATOR PEDAL REMOVAL/ INSTALLATION [MZR 2.5].)
6	Air cleaner (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].) (See AIR CLEANER ELEMENT INSPECTION [MZR 2.5].)
7	Resonance chamber (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
8	Fresh-air duct (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].)
9	Throttle body (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [MZR 2.5].) (See THROTTLE BODY INSPECTION [MZR 2.5].)
10	Variable intake air shutter valve actuator (See VARIABLE INTAKE AIR SHUTTER VALVE ACTUATOR INSPECTION [MZR 2.5].)