

2012 - Mazda6 - Engine

AIR CLEANER ELEMENT INSPECTION [MZR 2.5]

1. Remove the air cleaner element. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Inspect the following items:
 - Has the replacement interval come?
 - Is the air cleaner element soiled, damaged, or bent?
 - Are the air cleaner case and the air cleaner element correctly sealed?
 - Is the correct air cleaner element installed?
 - If there is any abnormality, clean or replace the air cleaner element. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

2012 - Mazda6 - Engine

AIR CLEANER ELEMENT INSPECTION [MZR 2.5]

1. Remove the air cleaner element. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
2. Inspect the following items:
 - Has the replacement interval come?
 - Is the air cleaner element soiled, damaged, or bent?
 - Are the air cleaner case and the air cleaner element correctly sealed?
 - Is the correct air cleaner element installed?
 - If there is any abnormality, clean or replace the air cleaner element. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)