


2012 - Mazda6 - Engine

THROTTLE BODY INSPECTION [MZR 2.5]

Resistance Inspection

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Disconnect the throttle body connector.
- 3. Measure the resistance between throttle body terminals E and F. **Specification**

Ambient temperature (°C {°F})	Resistance (ohm)
Approx. 20 {68}	0.3—100

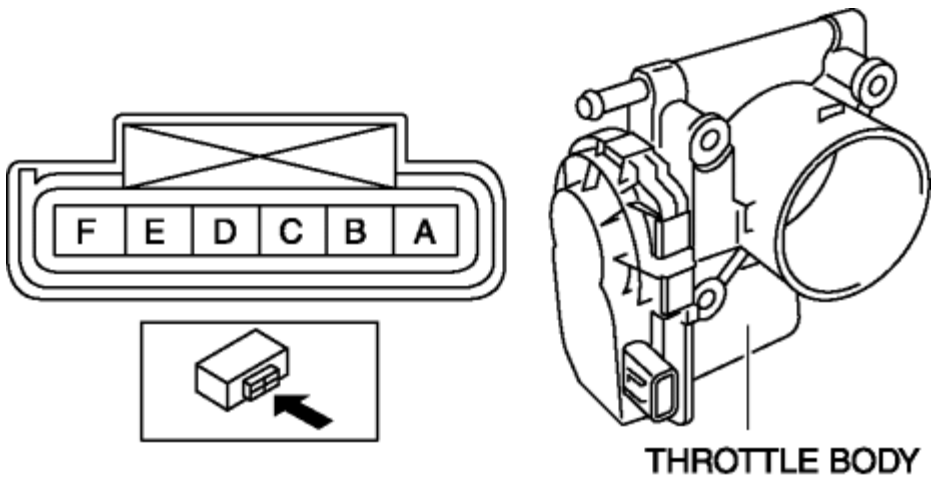

- If not as specified, replace the throttle body. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)


2012 - Mazda6 - Engine

THROTTLE BODY INSPECTION [MZR 2.5]

Resistance Inspection

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Disconnect the throttle body connector.
- 3. Measure the resistance between throttle body terminals E and F. **Specification**

Ambient temperature (°C {°F})	Resistance (ohm)
Approx. 20 {68}	0.3—100

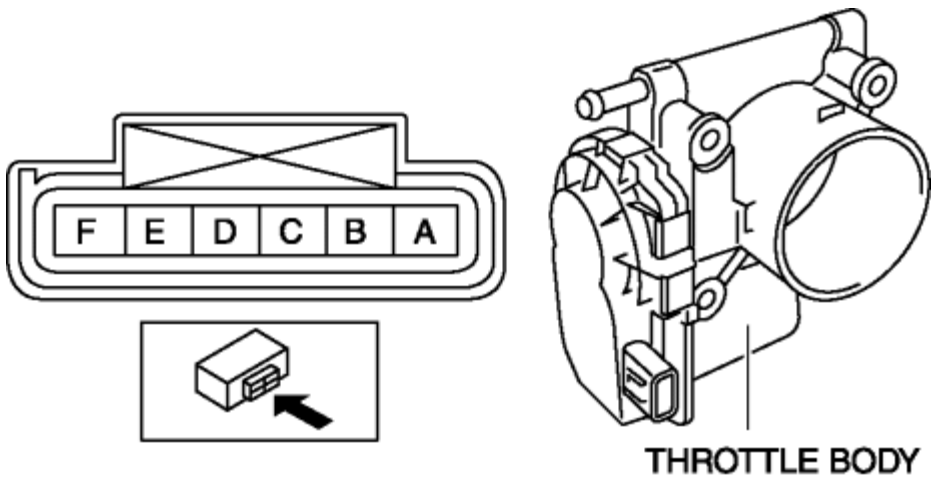

- If not as specified, replace the throttle body. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)