


2012 - Mazda6 - Engine

EGR VALVE REMOVAL/ INSTALLATION [MZR 2.5]

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Drain the engine coolant from the radiator. (See [ENGINE COOLANT REPLACEMENT \[MZR 2.5\]](#).)
- 3. Remove the air cleaner and the air hose as a single unit. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 4. Remove the radiator hose (upper, engine side). (See [RADIATOR REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 5. Disconnect the EGR valve connector.
- 6. Remove in the order indicated in the table.

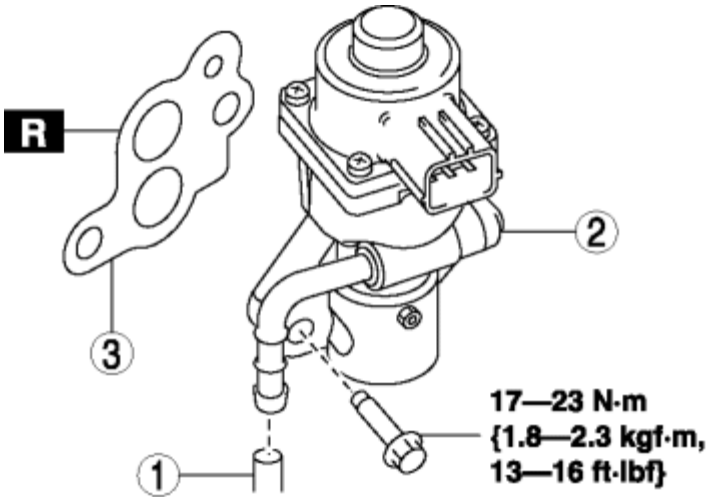


1	Water hose
2	EGR valve
3	Gasket

- 7. Install in the reverse order of removal.

2012 - Mazda6 - Engine

EGR VALVE REMOVAL/ INSTALLATION [MZR 2.5]

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Drain the engine coolant from the radiator. (See [ENGINE COOLANT REPLACEMENT \[MZR 2.5\]](#).)
- 3. Remove the air cleaner and the air hose as a single unit. (See [INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 4. Remove the radiator hose (upper, engine side). (See [RADIATOR REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 5. Disconnect the EGR valve connector.
- 6. Remove in the order indicated in the table.

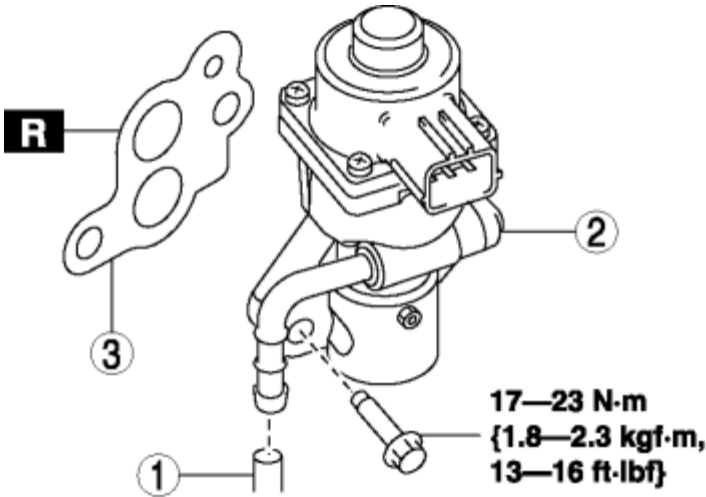

1	Water hose
2	EGR valve
3	Gasket

- 7. Install in the reverse order of removal.