


2012 - Mazda6 - Engine

EMISSION SYSTEM LOCATION INDEX [MZR 2.5]

Engine Compartment Side

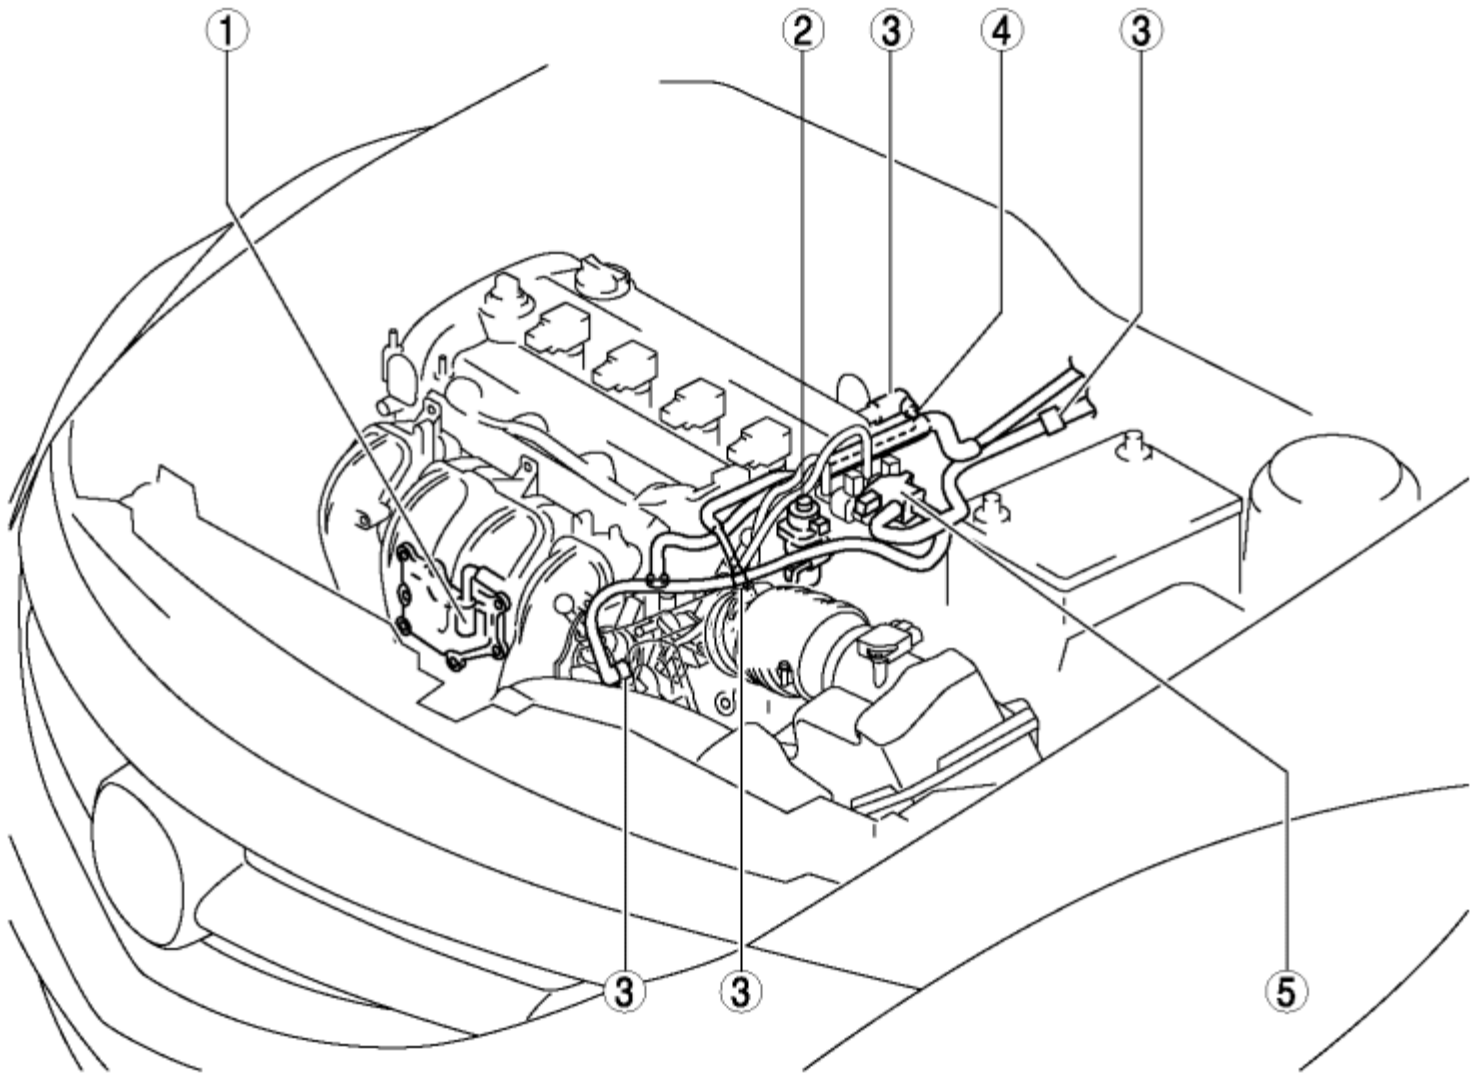

1 PCV valve


(See [POSITIVE CRANKCASE VENTILATION \(PCV\) VALVE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

(See [POSITIVE CRANKCASE VENTILATION \(PCV\) VALVE INSPECTION \[MZR 2.5\]](#).)

2 EGR valve


	(See EGR VALVE REMOVAL/ INSTALLATION [MZR 2.5] .)
	(See EGR VALVE INSPECTION [MZR 2.5] .)
3	Quick release connector (See QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/ INSTALLATION [MZR 2.5] .)
4	Ventilation hose (See QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/ INSTALLATION [MZR 2.5] .)
5	Purge solenoid valve (See PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [MZR 2.5] .) (See PURGE SOLENOID VALVE INSPECTION [MZR 2.5] .)

Exhaust System

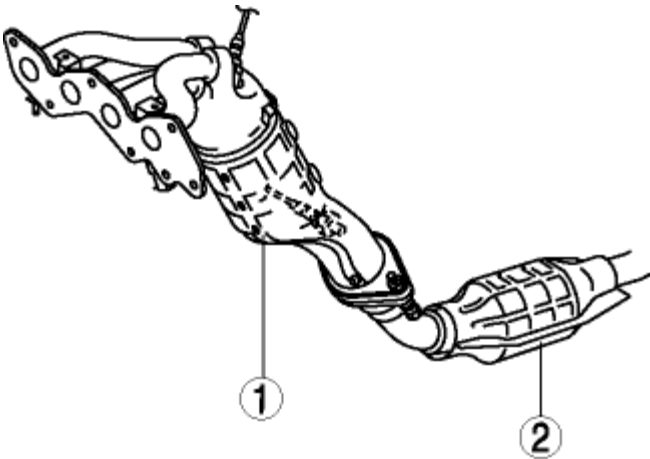

1	WU-TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [MZR 2.5] .)
2	TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [MZR 2.5] .)

Fuel Tank Side

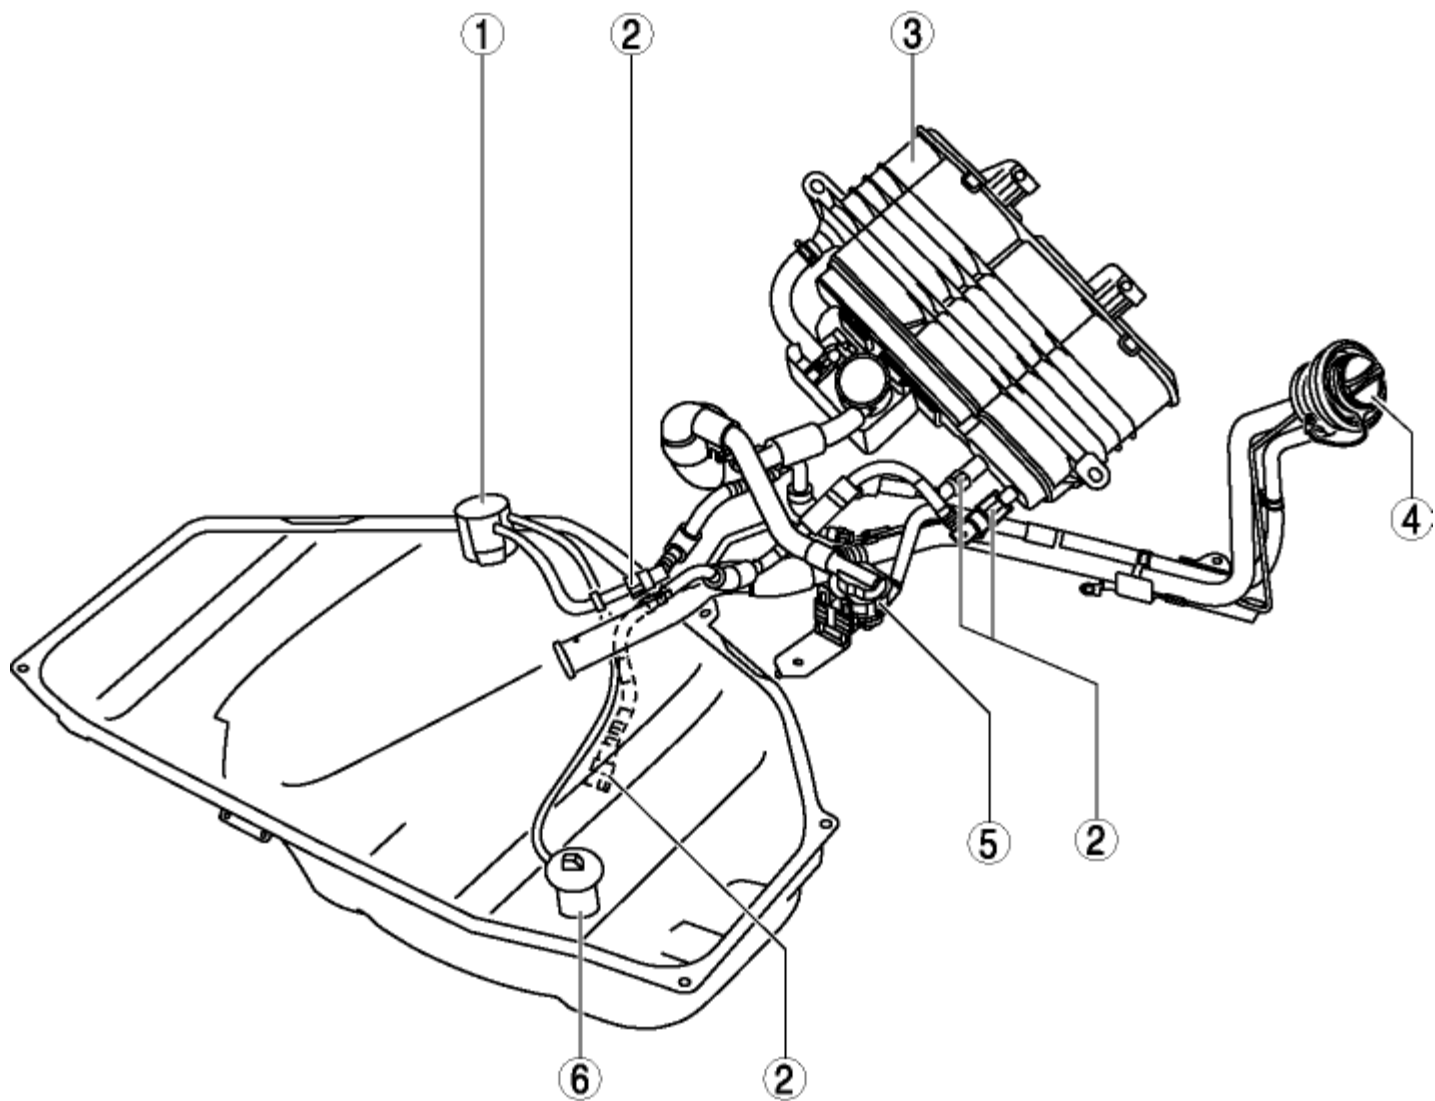

1 Fuel shut-off valve

(See **FUEL SHUT-OFF VALVE REMOVAL/ INSTALLATION [MZR 2.5].**)

(See **FUEL SHUT-OFF VALVE INSPECTION [MZR 2.5].**)

2 Quick release connector

(See **QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/ INSTALLATION [MZR 2.5].**)

3 Charcoal canister, CV solenoid valve, air filter component

(See **CHARCOAL CANISTER, CANISTER VENT (CV) SOLENOID VALVE, AIR FILTER COMPONENT REMOVAL/ INSTALLATION [MZR 2.5].**)

(See **CHARCOAL CANISTER, CANISTER VENT (CV) SOLENOID VALVE, AIR FILTER COMPONENT INSPECTION [MZR 2.5].**)

4 Fuel-filler cap

(See **FUEL-FILLER CAP INSPECTION [MZR 2.5].**)

5Evaporative chamber

(See [EVAPORATIVE CHAMBER REMOVAL/ INSTALLATION \[MZR 2.5\].](#))

(See [EVAPORATIVE CHAMBER INSPECTION \[MZR 2.5\].](#))

6Rollover valve

(See [ROLLOVER VALVE REMOVAL/ INSTALLATION \[MZR 2.5\].](#))

(See [ROLLOVER VALVE INSPECTION \[MZR 2.5\].](#))

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Engine

EMISSION SYSTEM LOCATION INDEX [MZR 2.5]

Engine Compartment Side

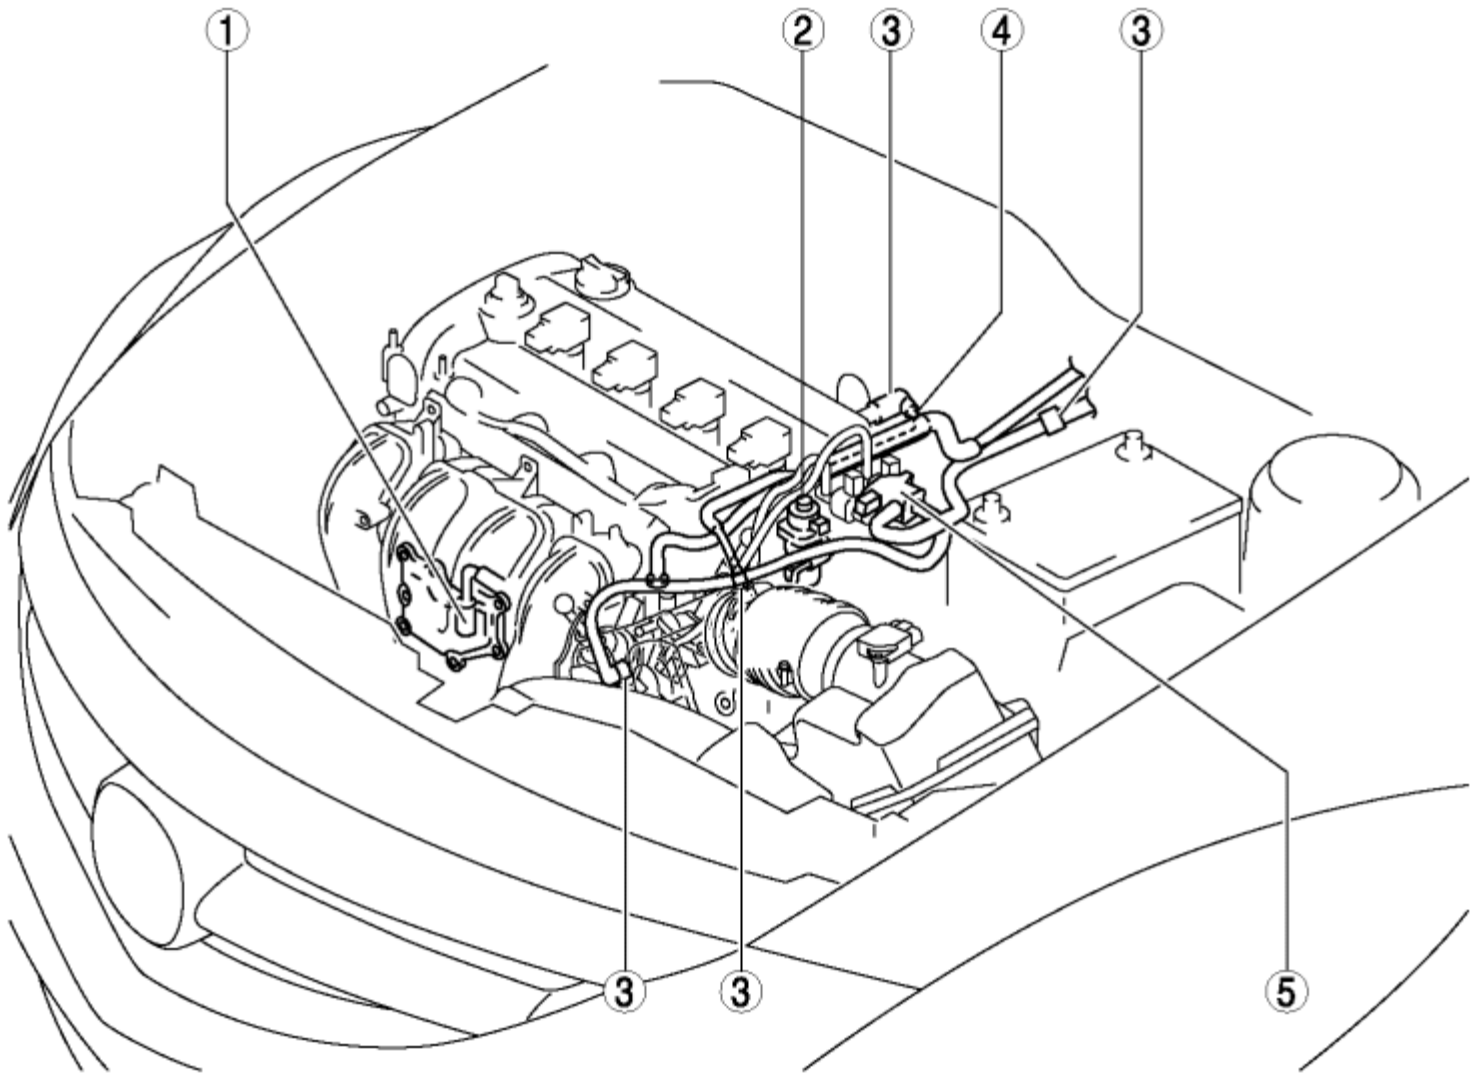

1 PCV valve


(See [POSITIVE CRANKCASE VENTILATION \(PCV\) VALVE REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

(See [POSITIVE CRANKCASE VENTILATION \(PCV\) VALVE INSPECTION \[MZR 2.5\]](#).)

2 EGR valve


	(See EGR VALVE REMOVAL/ INSTALLATION [MZR 2.5] .)
	(See EGR VALVE INSPECTION [MZR 2.5] .)
3	Quick release connector (See QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/ INSTALLATION [MZR 2.5] .)
4	Ventilation hose (See QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/ INSTALLATION [MZR 2.5] .)
5	Purge solenoid valve (See PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [MZR 2.5] .) (See PURGE SOLENOID VALVE INSPECTION [MZR 2.5] .)

Exhaust System

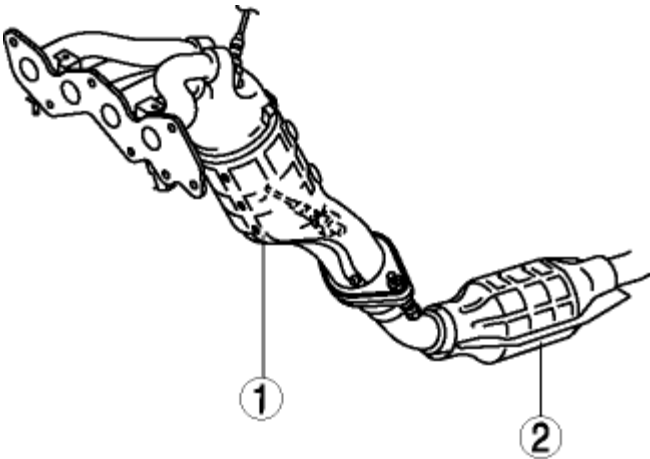

1	WU-TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [MZR 2.5] .)
2	TWC (See EXHAUST SYSTEM REMOVAL/ INSTALLATION [MZR 2.5] .)

Fuel Tank Side

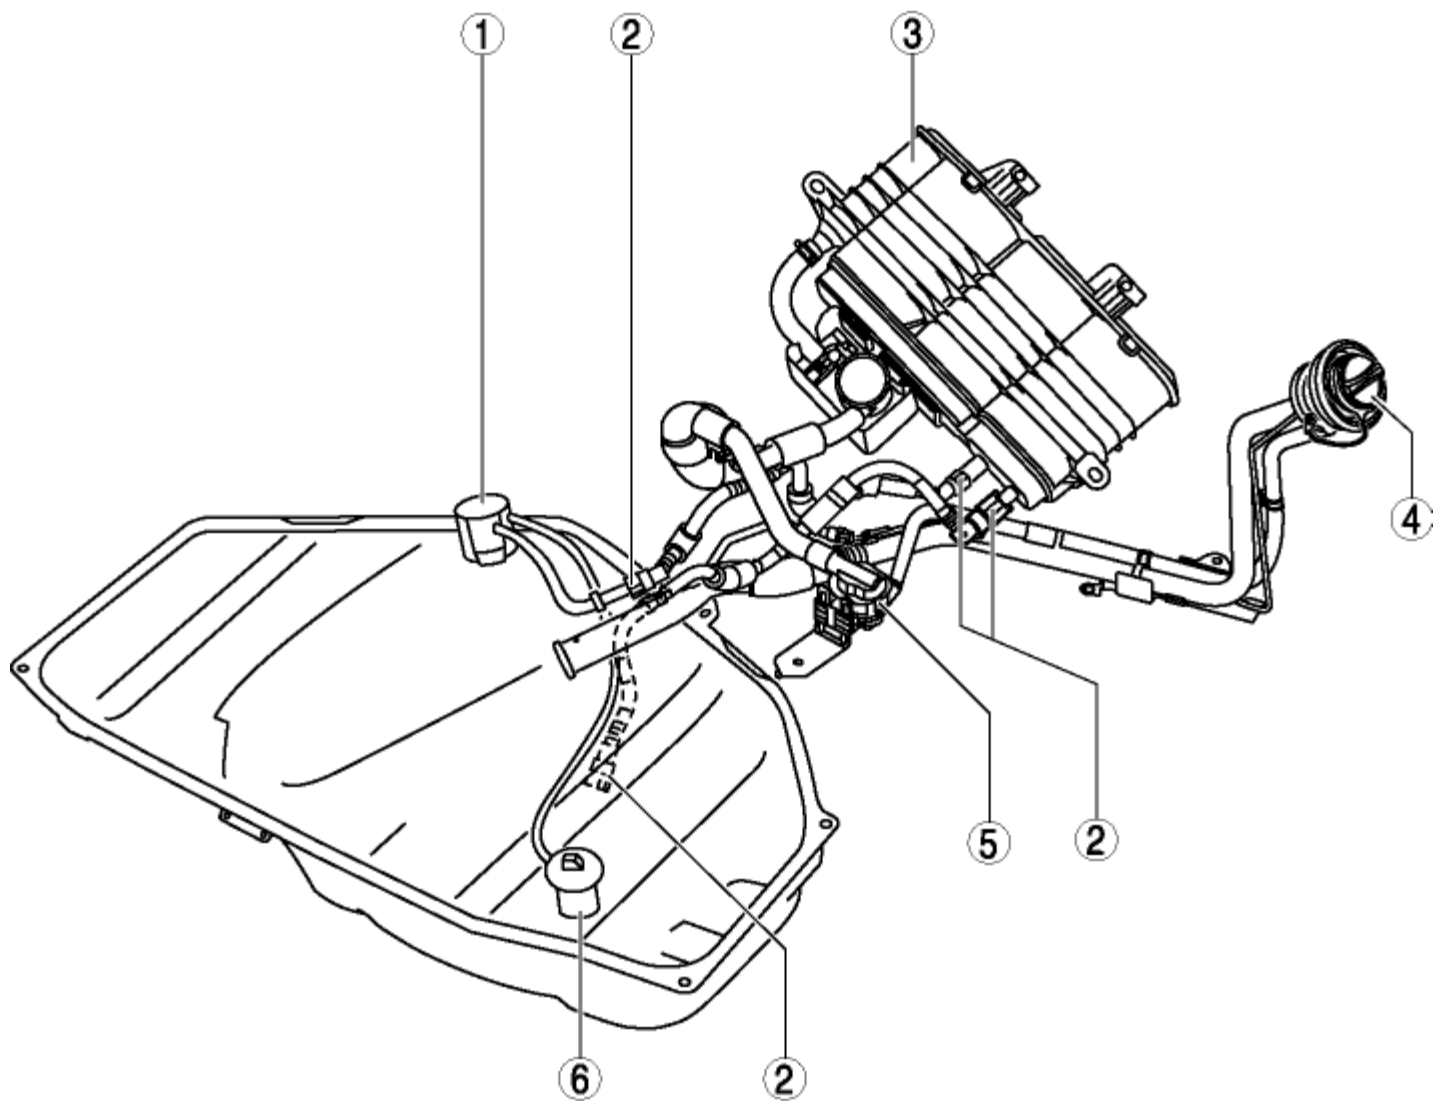

1 Fuel shut-off valve

(See **FUEL SHUT-OFF VALVE REMOVAL/ INSTALLATION [MZR 2.5].**)

(See **FUEL SHUT-OFF VALVE INSPECTION [MZR 2.5].**)

2 Quick release connector

(See **QUICK RELEASE CONNECTOR (EMISSION SYSTEM) REMOVAL/ INSTALLATION [MZR 2.5].**)

3 Charcoal canister, CV solenoid valve, air filter component

(See **CHARCOAL CANISTER, CANISTER VENT (CV) SOLENOID VALVE, AIR FILTER COMPONENT REMOVAL/ INSTALLATION [MZR 2.5].**)

(See **CHARCOAL CANISTER, CANISTER VENT (CV) SOLENOID VALVE, AIR FILTER COMPONENT INSPECTION [MZR 2.5].**)

4 Fuel-filler cap

(See **FUEL-FILLER CAP INSPECTION [MZR 2.5].**)

5Evaporative chamber

(See [EVAPORATIVE CHAMBER REMOVAL/ INSTALLATION \[MZR 2.5\].](#))

(See [EVAPORATIVE CHAMBER INSPECTION \[MZR 2.5\].](#))

6Rollover valve

(See [ROLLOVER VALVE REMOVAL/ INSTALLATION \[MZR 2.5\].](#))

(See [ROLLOVER VALVE INSPECTION \[MZR 2.5\].](#))

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.