


2012 - Mazda6 - Engine

PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [MZR 2.5]

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Remove in the order indicated in the table.

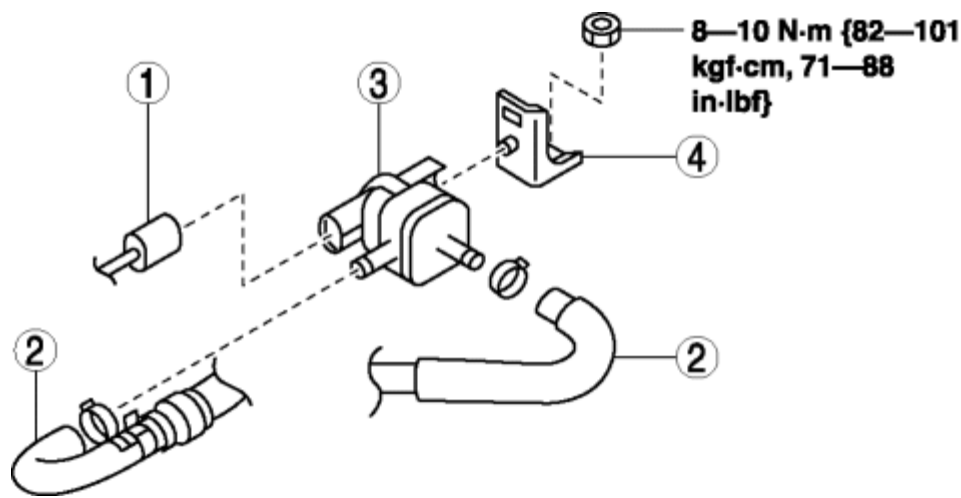


1	Connector
2	Evaporative hose
3	Purge solenoid valve
4	Purge solenoid valve bracket

- 3. Install in the reverse order of removal.

2012 - Mazda6 - Engine

PURGE SOLENOID VALVE REMOVAL/ INSTALLATION [MZR 2.5]

- 1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
- 2. Remove in the order indicated in the table.

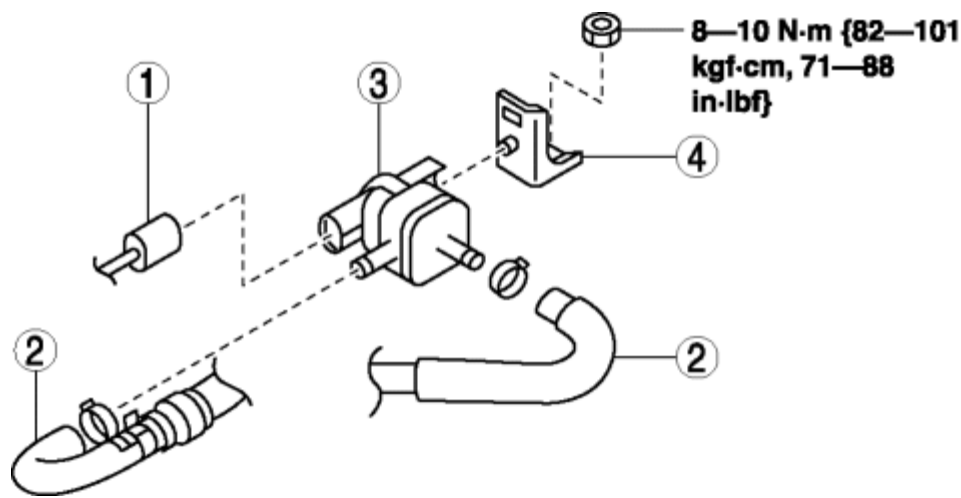

1	Connector
2	Evaporative hose
3	Purge solenoid valve
4	Purge solenoid valve bracket

- 3. Install in the reverse order of removal.