

[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

FUEL SHUT-OFF VALVE INSPECTION [MZR 2.5]

NOTE:

- The fuel shut-off valve cannot be removed and inspected as it is built into the fuel tank.
1. Perform the fuel tank inspection. (See [FUEL TANK INSPECTION \[MZR 2.5\]](#).)
 - If malfunction, replace the fuel tank. (See [FUEL TANK REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Engine

FUEL SHUT-OFF VALVE INSPECTION [MZR 2.5]

NOTE:

- The fuel shut-off valve cannot be removed and inspected as it is built into the fuel tank.
1. Perform the fuel tank inspection. (See [FUEL TANK INSPECTION \[MZR 2.5\]](#).)
 - If malfunction, replace the fuel tank. (See [FUEL TANK REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.