

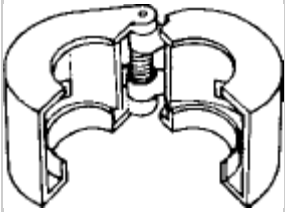
2012 - Mazda6 - Engine

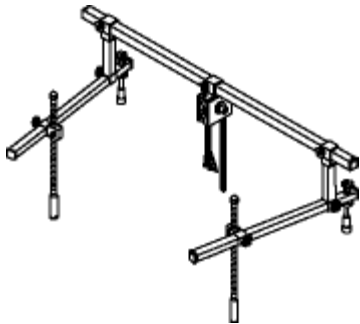
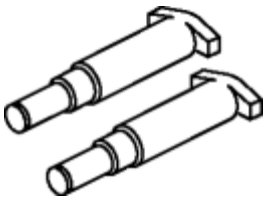
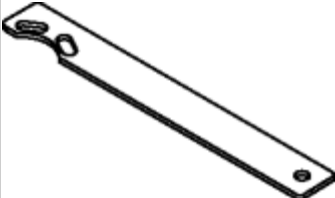
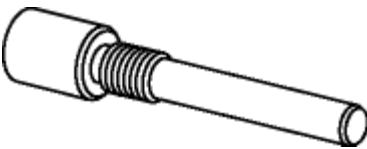
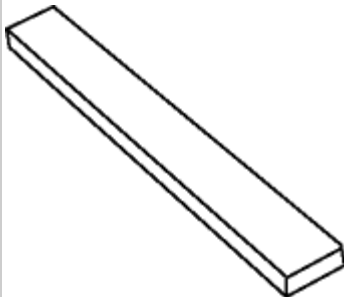
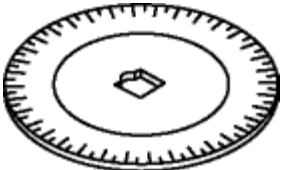
ENGINE SST [MZR 2.5]

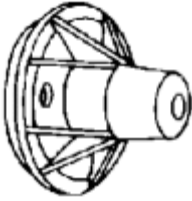
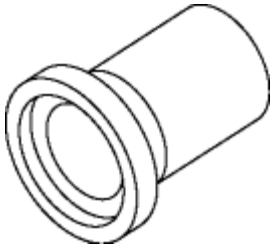
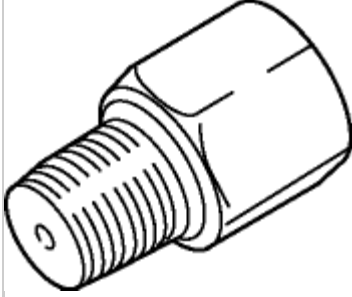
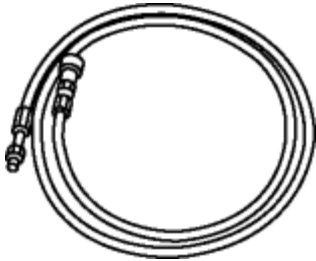
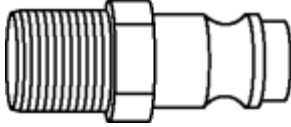
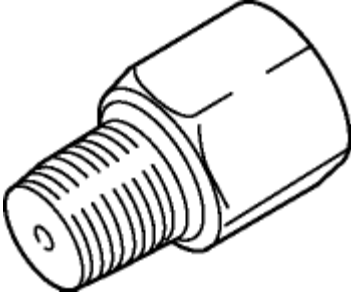
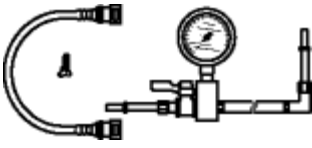
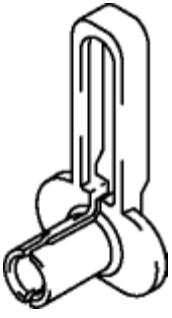
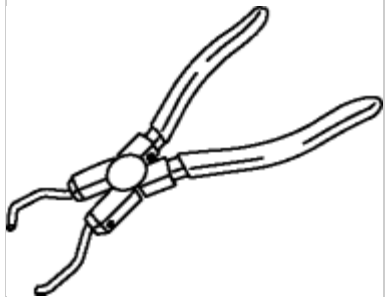
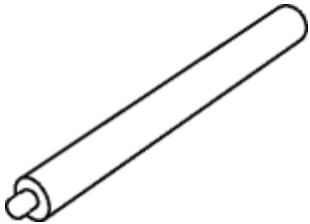
1: Mazda SST number

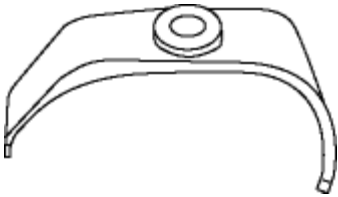
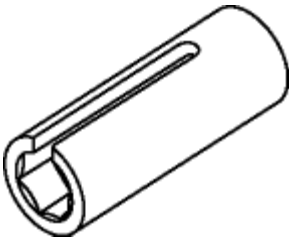
 
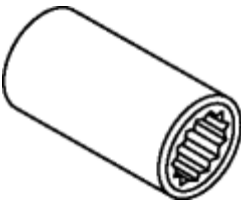
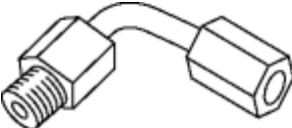
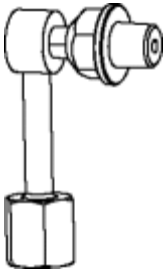
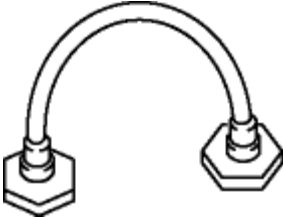
2: Global SST number

Example

1:49 UN01 052	
2:310-D005	
Spring lock coupler tool (green)	

1: 49 C017 5A0 2: - Engine support set		1:49 B011 105 2:- Adapter		1:- 2:205-126 Holding tool	
1:49 JE01 061 2:303-507 Crankshaft TDC timing pin		1:49 UN30 3465 2:303- 465 Camshaft alignment timing tool		1:49 D032 316 2: - Protractor	
1:49 UN30 3328 2:303-328 Rear oil seal		1:49 H010 401 2:- Oil seal installer		1: - 2: 134- 01049A Evaporative emission	

replacer				system tester	
1: 49 0187 280A 2: - Oil pressure gauge		1:49 E019 001 2:- Adapter		1:49 D019 908 2:- Gauge (Part of 49 D019 9A2)	
1:49 D019 909 2:- Hose (Part of 49 D019 9A2)		1:49 D019 910 2:- Adapter (Part of 49 D019 9A2)		1:49 D019 911 2:- Adapter (Part of 49 D019 9A2)	
1:49 D019 914 2:- Adapter (Part of 49 D019 9A2)		1:49 N013 1A0D 2:- Fuel pressure gauge set		1:49 N013 103A 2:- Remover (Part of 49 N013 1A0D)	
1:49 E042 001 2:- Remover		1:49 G040 002 2:- Installer		1:49 G040 001 2:- Handle	
1:- 2:310-123		49 T018 001 O ₂ sensor		1: - 2: AKS042808	

Wrench		wrench		Adapter	
1:49 D015 001 2:- Box wrench		1:49 H019 002 2:- Adapter		1:49 D019 913 2:- Adapter (Part of 49 D019 9A2)	
1:49 9200 146 2:- Adapter hose (Part of 49 9200 145)		1:49 9200 147 2:- Adapter (Part of 49 9200 145)			

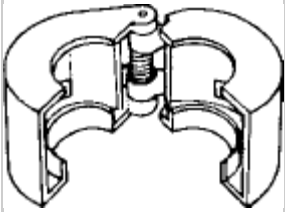
2012 - Mazda6 - Engine

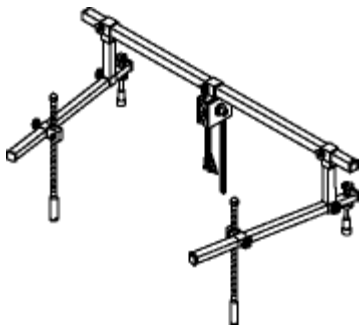
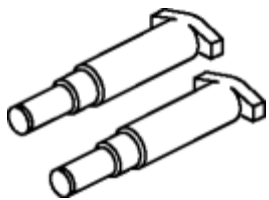
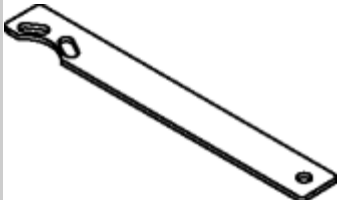
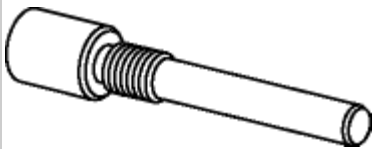
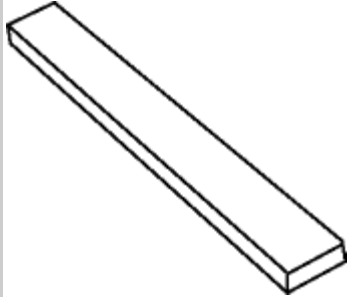
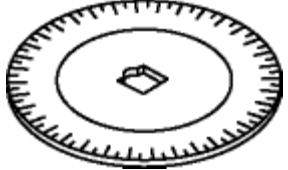
ENGINE SST [MZR 2.5]

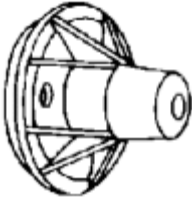
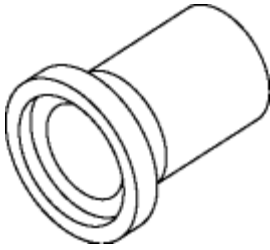
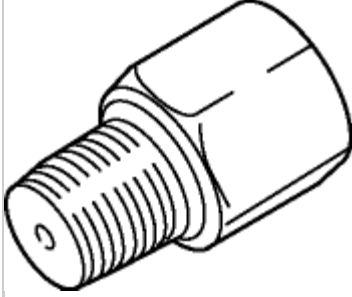
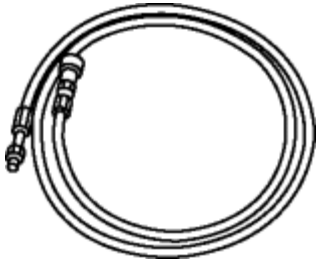
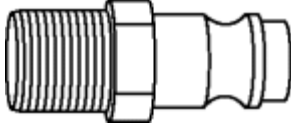
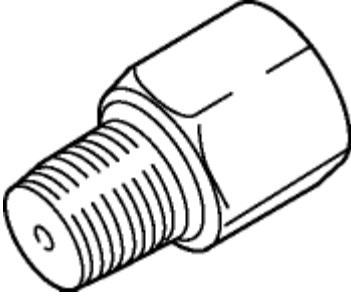
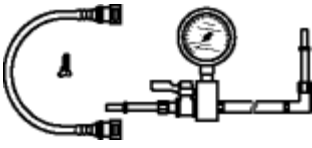
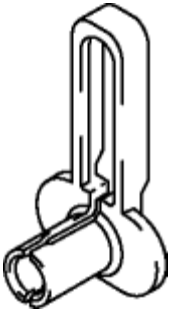
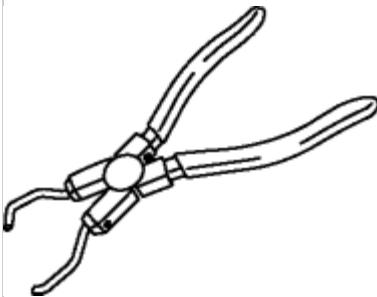
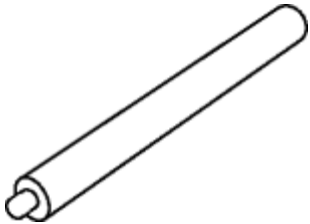
1: Mazda SST number

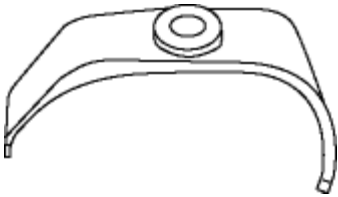
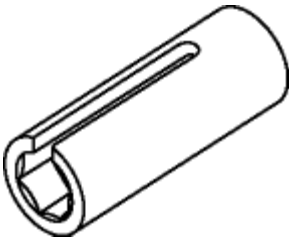
 
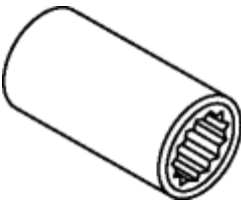
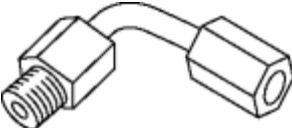
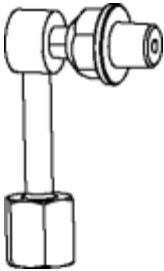
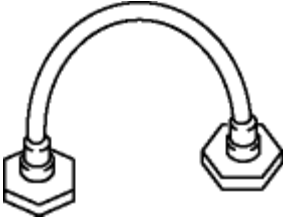
2: Global SST number

Example

1:49 UN01 052	
2:310-D005	
Spring lock coupler tool (green)	

1: 49 C017 5A0 2: - Engine support set		1:49 B011 105 2:- Adapter		1:- 2:205-126 Holding tool	
1:49 JE01 061 2:303-507 Crankshaft TDC timing pin		1:49 UN30 3465 2:303-465 Camshaft alignment timing tool		1:49 D032 316 2: - Protractor	
1:49 UN30 3328 2:303-328 Rear oil seal		1:49 H010 401 2:- Oil seal installer		1: - 2: 134-01049A Evaporative emission	

replacer				system tester	
1: 49 0187 280A 2: - Oil pressure gauge		1:49 E019 001 2:- Adapter		1:49 D019 908 2:- Gauge (Part of 49 D019 9A2)	
1:49 D019 909 2:- Hose (Part of 49 D019 9A2)		1:49 D019 910 2:- Adapter (Part of 49 D019 9A2)		1:49 D019 911 2:- Adapter (Part of 49 D019 9A2)	
1:49 D019 914 2:- Adapter (Part of 49 D019 9A2)		1:49 N013 1A0D 2:- Fuel pressure gauge set		1:49 N013 103A 2:- Remover (Part of 49 N013 1A0D)	
1:49 E042 001 2:- Remover		1:49 G040 002 2:- Installer		1:49 G040 001 2:- Handle	
1:- 2:310-123		49 T018 001 O ₂ sensor		1: - 2: AKS042808	

Wrench		wrench		Adapter	
1:49 D015 001 2:- Box wrench		1:49 H019 002 2:- Adapter		1:49 D019 913 2:- Adapter (Part of 49 D019 9A2)	
1:49 9200 146 2:- Adapter hose (Part of 49 9200 145)		1:49 9200 147 2:- Adapter (Part of 49 9200 145)			