

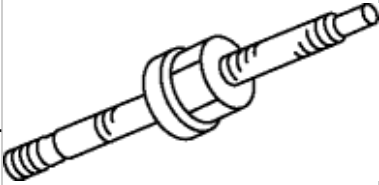
2012 - Mazda6 - Engine

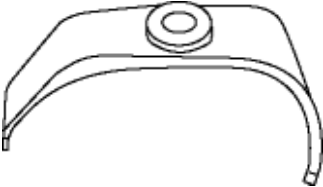
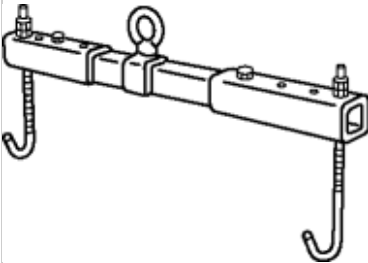
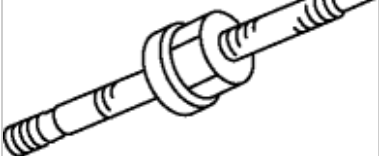
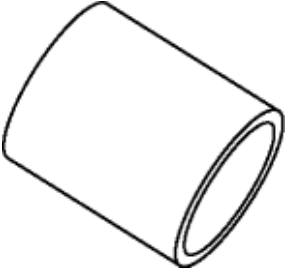
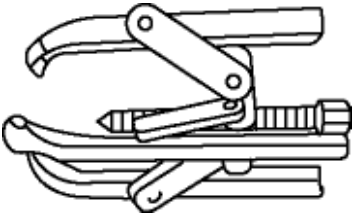
 
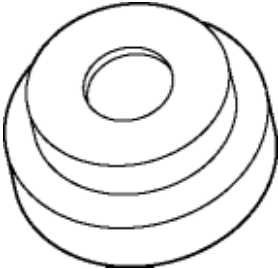
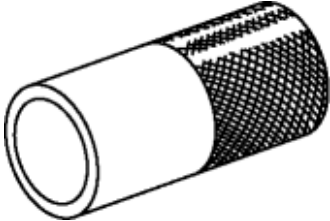
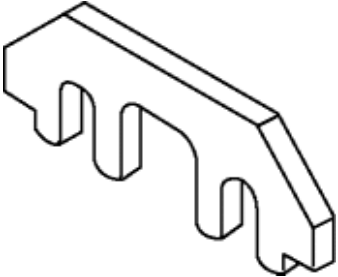
ENGINE SST [MZI 3.7 V6]

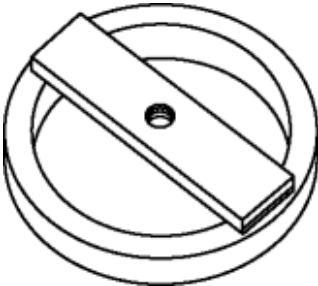
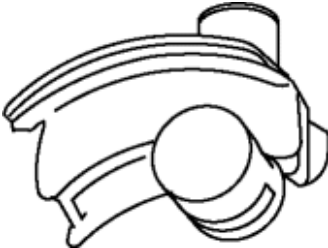
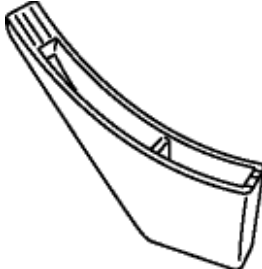
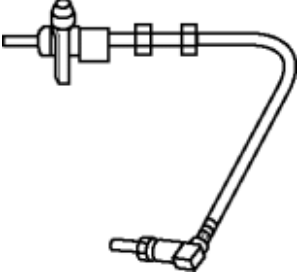
 
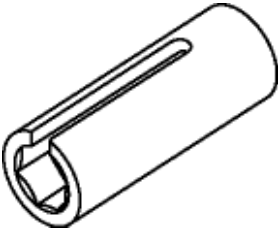
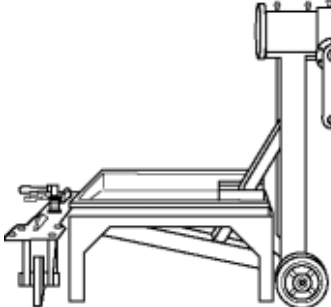
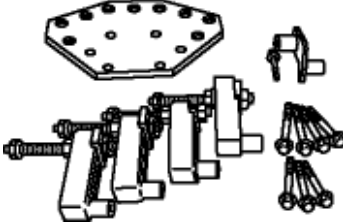
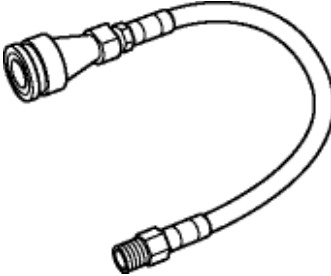
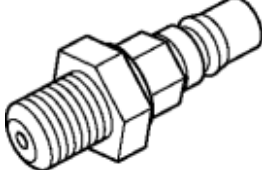
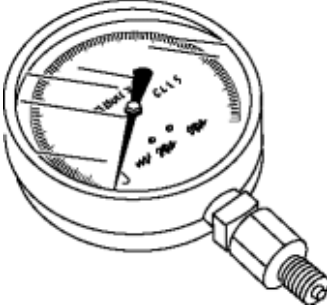
1: Mazda SST number

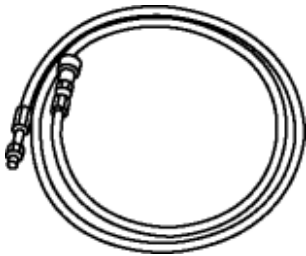
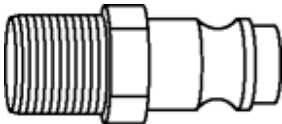
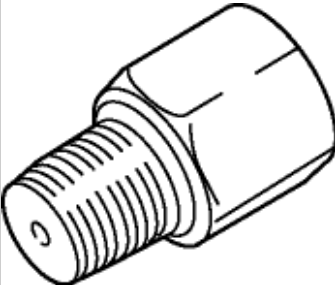
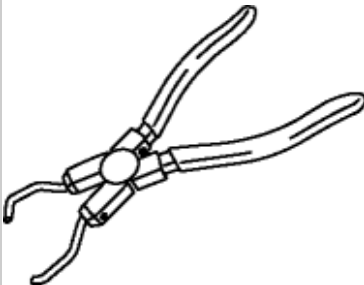
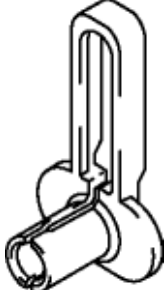
 
2: Global SST number

Example

1: 49 UN01 002	
2: 303-102	
Crankshaft damper replacer	

1:- 2:310-123 Wrench		1: 49 L017 5A0 2: - Support hanger		1: 49 UN01 002 2: 303-102 Crankshaft damper replacer	
1: 49 G028 203 2: - Support (Part of 49 F034 2A0)		1: 49 UN30 3D1210 2: 303-D121 Puller		1: 49 G033 102 2: - Handle	
1: 49 G033 105 2: - Attachment		1: 49 W026 001 2: - Oil seal installer		1: 49 UN30 312480 2: 303-1248 Hold	
1: 49 W011 101		1: 49 UN30 312523		1: 49 UN30 312521	

2: – Oil seal installer		2: – Installer (Part of 49 UN30 3125A0)		2: – Remover (Part of 49 UN30 3125A0)	
1: 49 N013 101A 2: – Body (Part of 49 N013 1A0D)		1: 49 T013 102 2: – Adapter		1: 49 N013 102A 2: – Hose (Part of 49 N013 1A0D)	
1: 49 T018 001 2: – O ₂ sensor wrench		1: 49 0107 680A 2: – Engine stand		1: 49 L010 1A0 2: – Engine hanger set	
1: 49 0187 280A 2: – Oil pressure gauge		1: 49 T018 006 2: – Hose		1: 49 T018 007 2: – Adapter	
1: 49 B019 901B 2: – Oil pressure gauge (Part of 49 N013 1A0D)		1: – 2: 134-01049A Evaporative emission system tester		1: 49 D019 908 2: – Gauge (Part of 49 D019 9A2)	
1: 49 D019 909		1: 49 D019 910		1: 49 D019 911	

2: – Hose (Part of 49 D019 9A2)		2: – Adapter (Part of 49 D019 9A2)		2: – Adapter (Part of 49 D019 9A2)	
1: 49 D019 914 2: – Adapter (Part of 49 D019 9A2)		1: 49 E042 001 2: – Remover		1: 49 N013 103A 2: – Remover (Part of 49 N013 1A0D)	
1: – 2: AKS042808 Adapter		–		–	

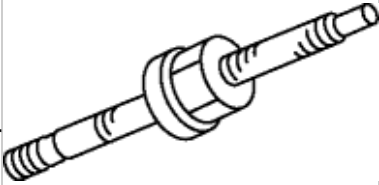
2012 - Mazda6 - Engine

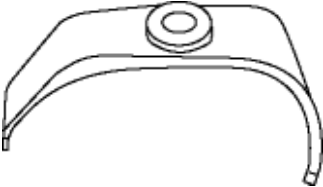
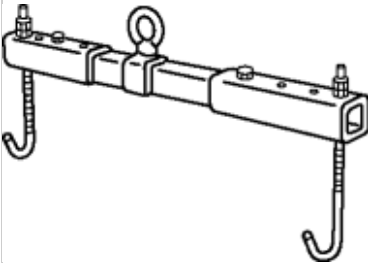
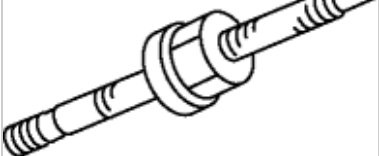
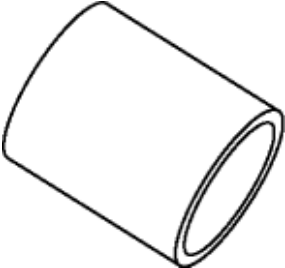
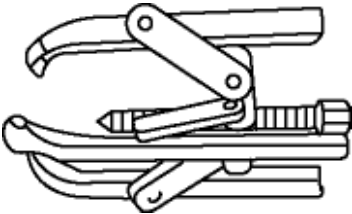
 
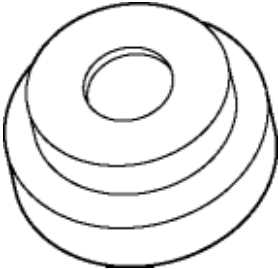
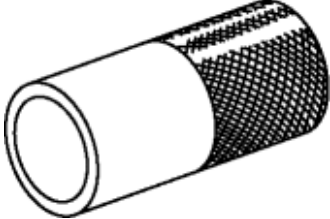
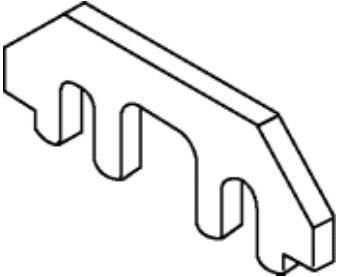
ENGINE SST [MZI 3.7 V6]

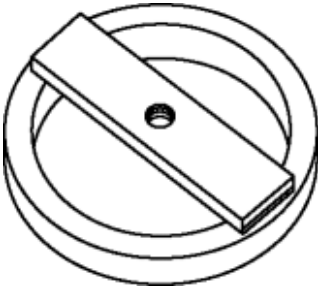
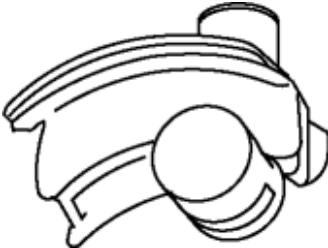
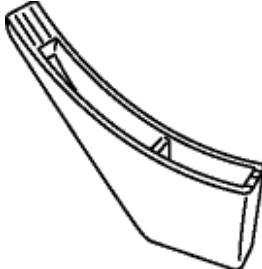
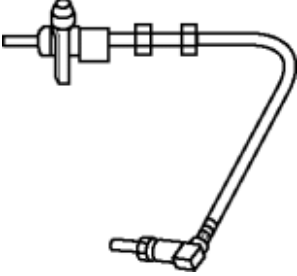
 
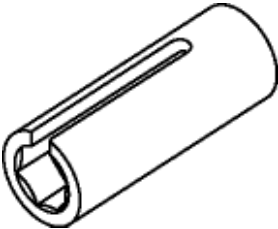
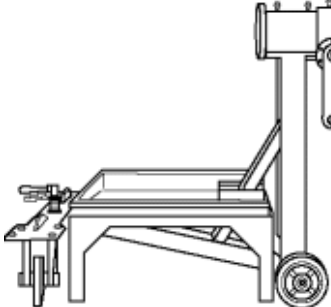
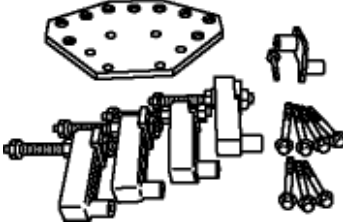
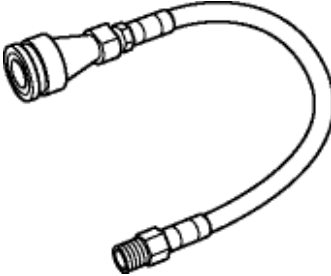
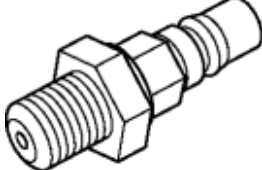
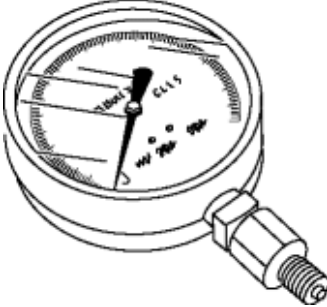
1: Mazda SST number

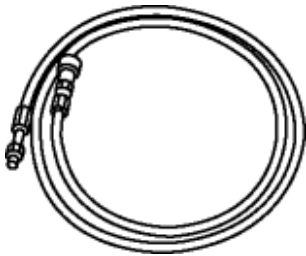
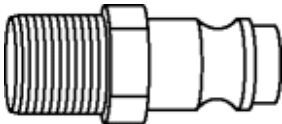
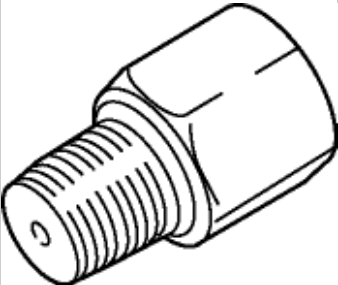
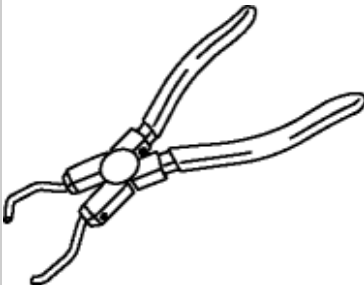
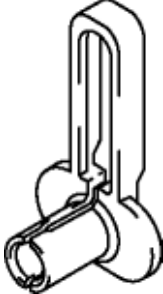
 
2: Global SST number

Example

1: 49 UN01 002	
2: 303-102	
Crankshaft damper replacer	

1:- 2:310-123 Wrench		1: 49 L017 5A0 2: - Support hanger		1: 49 UN01 002 2: 303-102 Crankshaft damper replacer	
1: 49 G028 203 2: - Support (Part of 49 F034 2A0)		1: 49 UN30 3D1210 2: 303-D121 Puller		1: 49 G033 102 2: - Handle	
1: 49 G033 105 2: - Attachment		1: 49 W026 001 2: - Oil seal installer		1: 49 UN30 312480 2: 303-1248 Hold	
1: 49 W011 101		1: 49 UN30 312523		1: 49 UN30 312521	

2: – Oil seal installer		2: – Installer (Part of 49 UN30 3125A0)		2: – Remover (Part of 49 UN30 3125A0)	
1: 49 N013 101A 2: – Body (Part of 49 N013 1A0D)		1: 49 T013 102 2: – Adapter		1: 49 N013 102A 2: – Hose (Part of 49 N013 1A0D)	
1: 49 T018 001 2: – O ₂ sensor wrench		1: 49 0107 680A 2: – Engine stand		1: 49 L010 1A0 2: – Engine hanger set	
1: 49 0187 280A 2: – Oil pressure gauge		1: 49 T018 006 2: – Hose		1: 49 T018 007 2: – Adapter	
1: 49 B019 901B 2: – Oil pressure gauge (Part of 49 N013 1A0D)		1: – 2: 134-01049A Evaporative emission system tester		1: 49 D019 908 2: – Gauge (Part of 49 D019 9A2)	
1: 49 D019 909		1: 49 D019 910		1: 49 D019 911	

2: – Hose (Part of 49 D019 9A2)		2: – Adapter (Part of 49 D019 9A2)		2: – Adapter (Part of 49 D019 9A2)	
1: 49 D019 914 2: – Adapter (Part of 49 D019 9A2)		1: 49 E042 001 2: – Remover		1: 49 N013 103A 2: – Remover (Part of 49 N013 1A0D)	
1: – 2: AKS042808 Adapter		–		–	