

2012 - Mazda6 - Brakes

DTC U3000:96 [DYNAMIC STABILITY CONTROL (DSC)]

DTC U3000:96	DSC HU/CM (internal malfunction)
DETECTION CONDITION	• Detect the DSC HU/CM internal malfunction.
POSSIBLE CAUSE	• DSC HU/CM malfunction ▪ DSC HU/CM internal malfunction

Diagnostic procedure

STEP	INSPECTION	ACTION
1	PERFORM DSC DTC INSPECTION • Clear the DTC from the DSC HU/CM memory using the M-MDS. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)].) • Drive the vehicle at speed of 10 km/ h { 6.2 mph } or more. • Gradually slow down and stop the vehicle. • Perform the DSC DTC inspection. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)].) • Is the same DTC present?	Yes Replace the DSC HU/CM, then go to the next step. (See DSC HU/ CM REMOVAL/ INSTALLATION .)
		No Go to the next step.
2	VERIFY AFTER REPAIR PROCEDURE • Are any DTCs present?	Yes Go to the applicable DTC inspection. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)] .)
		No DTC troubleshooting completed.

2012 - Mazda6 - Brakes

DTC U3000:96 [DYNAMIC STABILITY CONTROL (DSC)]

DTC U3000:96	DSC HU/CM (internal malfunction)
DETECTION CONDITION	• Detect the DSC HU/CM internal malfunction.
POSSIBLE CAUSE	• DSC HU/CM malfunction ▪ DSC HU/CM internal malfunction

Diagnostic procedure

STEP	INSPECTION	ACTION
1	PERFORM DSC DTC INSPECTION • Clear the DTC from the DSC HU/CM memory using the M-MDS. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)].) • Drive the vehicle at speed of 10 km/ h { 6.2 mph } or more. • Gradually slow down and stop the vehicle. • Perform the DSC DTC inspection. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)].) • Is the same DTC present?	Yes Replace the DSC HU/CM, then go to the next step. (See DSC HU/ CM REMOVAL/ INSTALLATION .)
		No Go to the next step.
2	VERIFY AFTER REPAIR PROCEDURE • Are any DTCs present?	Yes Go to the applicable DTC inspection. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)] .)
		No DTC troubleshooting completed.

