

2012 - Mazda6 - Brakes

NO.6 DSC INDICATOR LIGHT FLASHES (WHEN NEITHER THE TCS NOR THE DSC ARE OPERATING) [DYNAMIC STABILITY CONTROL (DSC)]

6	DSC indicator light flashes (when neither the TCS nor the DSC are operating)
POSSIBLE CAUSE	• Non-completion of module configuration (if the module configuration is not carried out after replacing the DSC HU/ CM, a DSC indicator light will flash. In this case, the DSC is not detected)

Diagnostic procedure

STEP	INSPECTION	ACTION
1	INSPECT CONNECTION OF DSC HU/ CM, SAS CONTROL MODULE AND STEERING ANGEL SENSOR CONNECTORS • Are DSC HU/CM, or SAS control module (yaw rate sensor, low-G (XY) sensor) and steering angle sensor connectors connected securely?	Yes Perform the initialization procedure.
		No Perform the initialization procedure after connect the suspected connector securely.

2012 - Mazda6 - Brakes

NO.6 DSC INDICATOR LIGHT FLASHES (WHEN NEITHER THE TCS NOR THE DSC ARE OPERATING) [DYNAMIC STABILITY CONTROL (DSC)]

6	DSC indicator light flashes (when neither the TCS nor the DSC are operating)
POSSIBLE CAUSE	• Non-completion of module configuration (if the module configuration is not carried out after replacing the DSC HU/ CM, a DSC indicator light will flash. In this case, the DSC is not detected)

Diagnostic procedure

STEP	INSPECTION	ACTION
1	INSPECT CONNECTION OF DSC HU/ CM, SAS CONTROL MODULE AND STEERING ANGEL SENSOR CONNECTORS • Are DSC HU/CM, or SAS control module (yaw rate sensor, low-G (XY) sensor) and steering angle sensor connectors connected securely?	Yes Perform the initialization procedure.
		No Perform the initialization procedure after connect the suspected connector securely.