

2012 - Mazda6 - Transmission/ Transaxle

NO.3 VEHICLE MOVES IN P POSITION, OR PARKING GEAR DOES NOT DISENGAGE WHEN P IS DISENGAGED [AY6A-EL]

3	Vehicle moves in P position, or parking gear does not disengage when P is disengaged
DESCRIPTION	• Vehicle rolls on a downward slope in P position. • Tires are locked when P is disengaged. Vehicle does not move in D and R position when the accelerator pedal is depressed, and the engine remains in a stalled condition.
POSSIBLE CAUSE	• Parking mechanism malfunction (May have effect on noise or shock from transaxle) • Improper adjustment of selector lever • If the vehicle moves in N position, perform No.2 "VEHICLE MOVES IN N POSITION"

2012 - Mazda6 - Transmission/ Transaxle

NO.3 VEHICLE MOVES IN P POSITION, OR PARKING GEAR DOES NOT DISENGAGE WHEN P IS DISENGAGED [AY6A-EL]

3	Vehicle moves in P position, or parking gear does not disengage when P is disengaged
DESCRIPTION	• Vehicle rolls on a downward slope in P position. • Tires are locked when P is disengaged. Vehicle does not move in D and R position when the accelerator pedal is depressed, and the engine remains in a stalled condition.
POSSIBLE CAUSE	• Parking mechanism malfunction (May have effect on noise or shock from transaxle) • Improper adjustment of selector lever • If the vehicle moves in N position, perform No.2 "VEHICLE MOVES IN N POSITION"