

2012 - Mazda6 - Transmission/ Transaxle

NO.4 EXCESSIVE CREEP [AY6A-EL]

4	Excessive creep
DESCRIPTION	• Vehicle accelerates in D and R position when accelerator pedal is not depressed.
POSSIBLE CAUSE	• Engine idle speed is high (transaxle system is not cause of problem) • Go to No.9 "FAST IDLE/RUNS ON" (See NO.9 FAST IDLE/ RUNS ON [MZI 3.7 V6] .)

2012 - Mazda6 - Transmission/ Transaxle

NO.4 EXCESSIVE CREEP [AY6A-EL]

4	Excessive creep
DESCRIPTION	• Vehicle accelerates in D and R position when accelerator pedal is not depressed.
POSSIBLE CAUSE	• Engine idle speed is high (transaxle system is not cause of problem) • Go to No.9 "FAST IDLE/RUNS ON" (See NO.9 FAST IDLE/ RUNS ON [MZI 3.7 V6] .)