

2012 - Mazda6 - Transmission/ Transaxle

NO.13 NO KICKDOWN [AY6A-EL]

13	No kickdown
DESCRIPTION	• Does not downshift when accelerator pedal is fully depressed within kickdown range.
POSSIBLE CAUSE	• If transaxle does not downshift though shifting is normal, the malfunction is in the accelerator pedal position sensor and accelerator pedal position sensor circuits (including sensor ground, sensor wiring harness and connector).

2012 - Mazda6 - Transmission/ Transaxle

NO.13 NO KICKDOWN [AY6A-EL]

13	No kickdown
DESCRIPTION	• Does not downshift when accelerator pedal is fully depressed within kickdown range.
POSSIBLE CAUSE	• If transaxle does not downshift though shifting is normal, the malfunction is in the accelerator pedal position sensor and accelerator pedal position sensor circuits (including sensor ground, sensor wiring harness and connector).