


2012 - Mazda6 - Transmission/ Transaxle

FLYWHEEL INSPECTION [G66M-R]

1. Refer to CLUTCH UNIT REMOVAL/INSTALLATION to remove the flywheel. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)
2. Install a dial gauge on the cylinder block.
3. Measure the runout of the surface that contacts the clutch disc using a dial gauge.

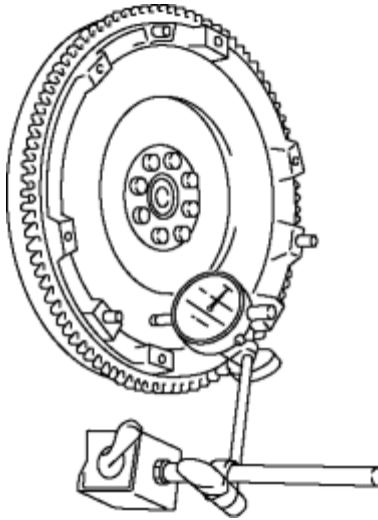

- If it exceeds the maximum specification, replace the flywheel. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)


Flywheel maximum runout

- 0.1 mm {0.004 in}

2012 - Mazda6 - Transmission/ Transaxle

FLYWHEEL INSPECTION [G66M-R]

1. Refer to CLUTCH UNIT REMOVAL/INSTALLATION to remove the flywheel. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)
2. Install a dial gauge on the cylinder block.
3. Measure the runout of the surface that contacts the clutch disc using a dial gauge.

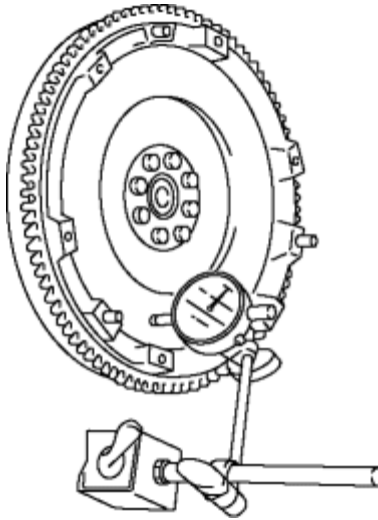

- If it exceeds the maximum specification, replace the flywheel. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)

Flywheel maximum runout

- 0.1 mm {0.004 in}