


2012 - Mazda6 - Transmission/ Transaxle

PILOT BEARING INSPECTION [G66M-R]

1. Refer to CLUTCH UNIT REMOVAL/INSTALLATION to remove the clutch unit until the pilot bearing is in a condition whereby it can be inspected. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)
2. Without removing the pilot bearing, turn the bearing while applying force in the axial direction.
 - If there is any malfunction, replace the pilot bearing. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)

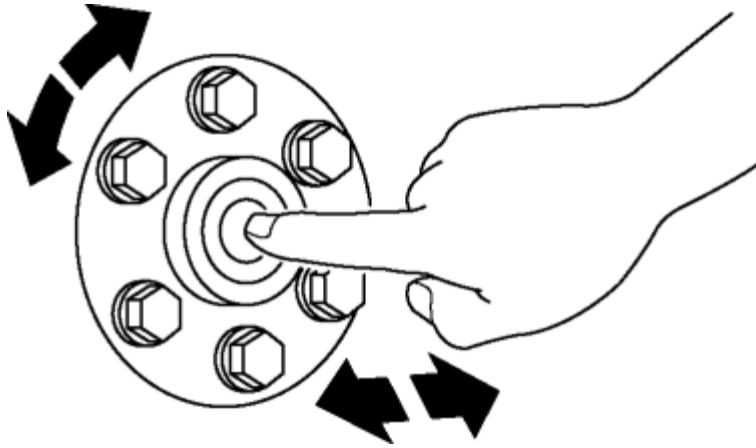

2012 - Mazda6 - Transmission/ Transaxle

PILOT BEARING INSPECTION [G66M-R]

1. Refer to CLUTCH UNIT REMOVAL/INSTALLATION to remove the clutch unit until the pilot bearing is in a condition whereby it can be inspected. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)
2. Without removing the pilot bearing, turn the bearing while applying force in the axial direction.
 - If there is any malfunction, replace the pilot bearing. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)

