


2012 - Mazda6 - Transmission/ Transaxle

CLUTCH FLUID INSPECTION [G66M-R]

NOTE:

- A common reserve is used for the clutch and brake system fluid.
1. Inspect whether the fluid level in the reserve tank is between MIN and MAX.
 - If the fluid is not at the specified level, adjust the fluid level (MIN-MAX on sub tank) by adding/draining the fluid.

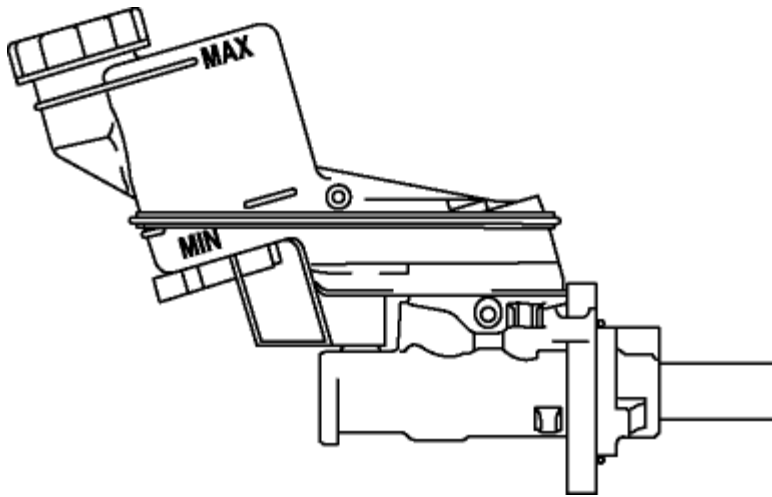

2012 - Mazda6 - Transmission/ Transaxle

CLUTCH FLUID INSPECTION [G66M-R]

NOTE:

- A common reserve is used for the clutch and brake system fluid.
1. Inspect whether the fluid level in the reserve tank is between MIN and MAX.
 - If the fluid is not at the specified level, adjust the fluid level (MIN-MAX on sub tank) by adding/draining the fluid.

