


2012 - Mazda6 - Transmission/ Transaxle

CLUTCH RELEASE COLLAR INSPECTION [G66M-R]

CAUTION:

- Cleaning the clutch release collar with cleaning fluids or a steam cleaner can wash the grease out of the sealed bearing.
1. Refer to CLUTCH UNIT REMOVAL/INSTALLATION to remove the clutch release collar. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)
 2. Turn the collar while applying force in the axial direction.

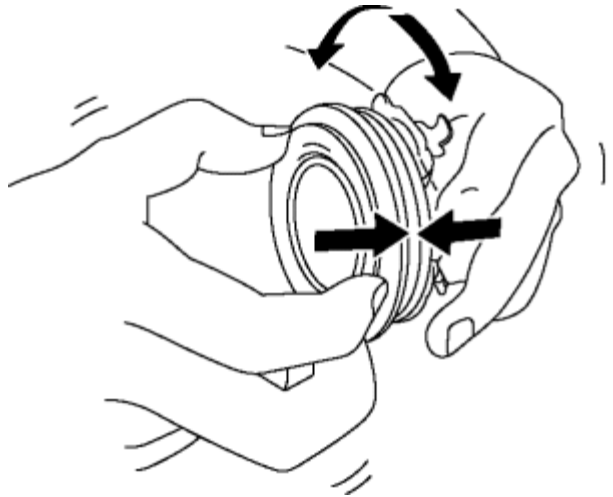


- If the collar sticks or has excessive resistance, replace the clutch release collar. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)

2012 - Mazda6 - Transmission/ Transaxle

CLUTCH RELEASE COLLAR INSPECTION [G66M-R]

CAUTION:

- Cleaning the clutch release collar with cleaning fluids or a steam cleaner can wash the grease out of the sealed bearing.
1. Refer to CLUTCH UNIT REMOVAL/INSTALLATION to remove the clutch release collar. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)
 2. Turn the collar while applying force in the axial direction.

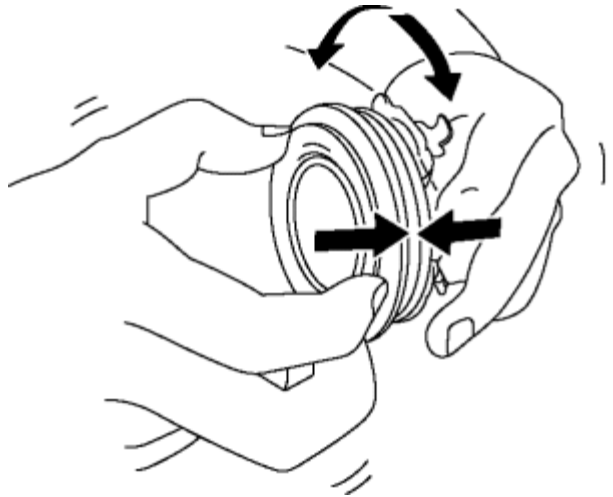

- If the collar sticks or has excessive resistance, replace the clutch release collar. (See [CLUTCH UNIT REMOVAL/ INSTALLATION \[G66M-R\]](#).)