

2012 - Mazda6 - Transmission/ Transaxle


CLUTCH RELEASE CYLINDER REMOVAL/ INSTALLATION [G66M-R]

CAUTION:

- If clutch fluid gets on a painted surface, it will cause the paint to peel. Be careful not to spill clutch fluid on the painted surfaces. Wash off any spilled clutch fluid with water immediately.

NOTE:

- If clutch system-related hydraulic parts are removed, supply brake fluid, bleed air, and inspect for fluid leakage after the installation.
1. Remove the aerodynamic under cover No.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION](#).)
 2. Remove in the order indicated in the table.
 3. Install in the reverse order of removal.
 4. If clutch system-related hydraulic parts are removed, supply clutch fluid, bleed air, and inspect for fluid leakage after the installation. (See [CLUTCH FLUID AIR BLEEDING/ REPLACEMENT \[G66M-R\]](#).)

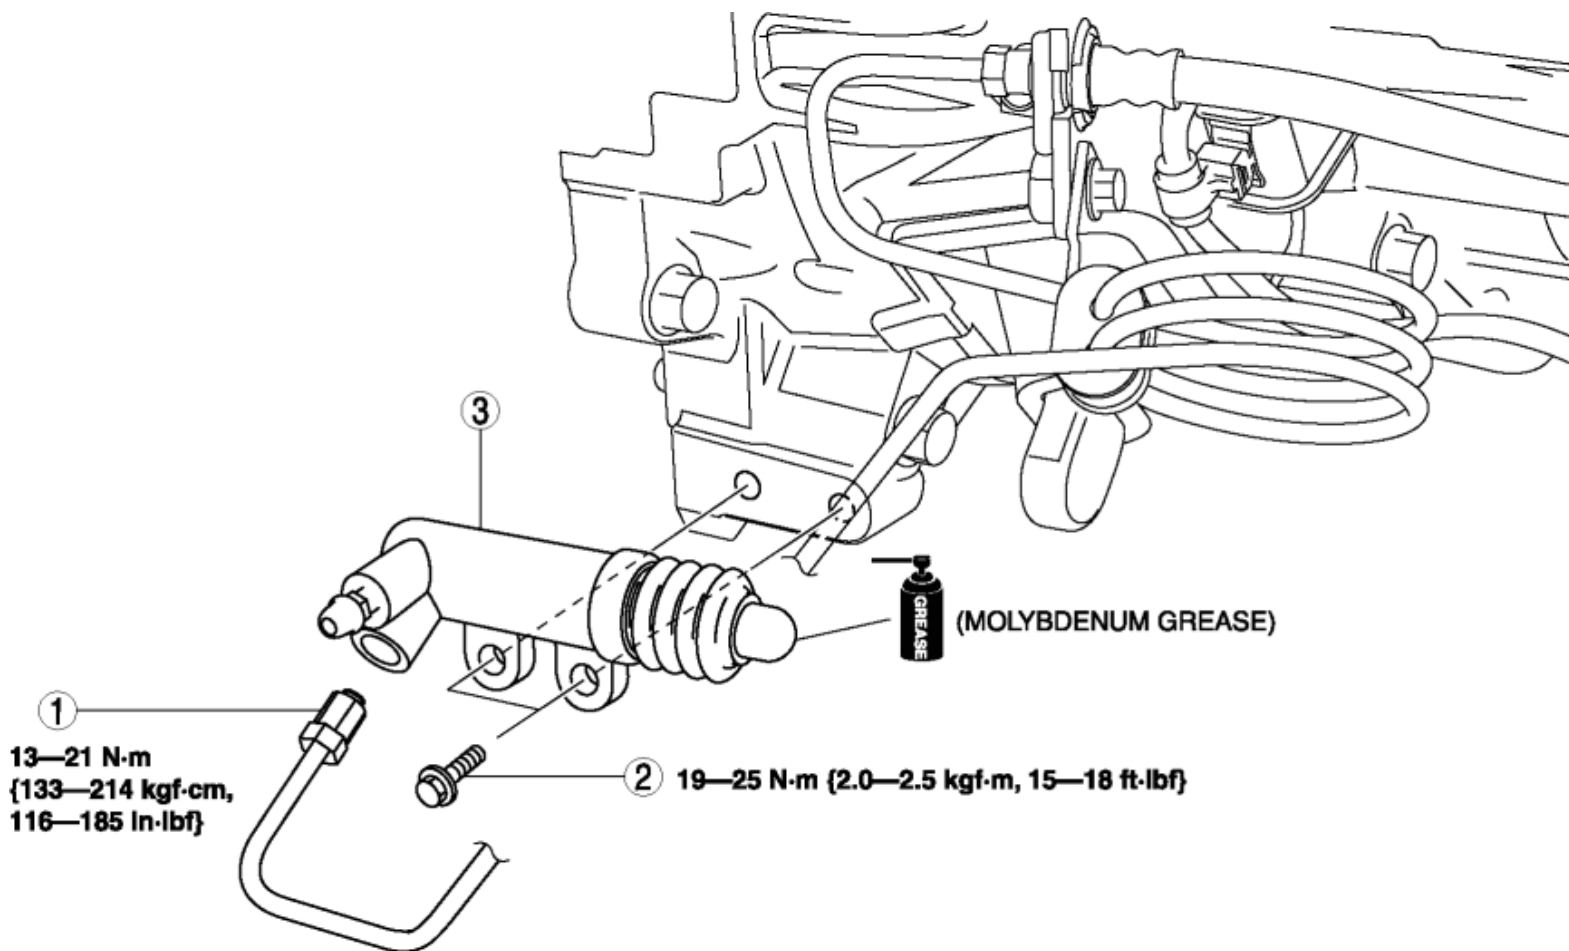

2	Bolt
3	Clutch release cylinder

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle


CLUTCH RELEASE CYLINDER REMOVAL/ INSTALLATION [G66M-R]

CAUTION:

- If clutch fluid gets on a painted surface, it will cause the paint to peel. Be careful not to spill clutch fluid on the painted surfaces. Wash off any spilled clutch fluid with water immediately.

NOTE:

- If clutch system-related hydraulic parts are removed, supply brake fluid, bleed air, and inspect for fluid leakage after the installation.
1. Remove the aerodynamic under cover No.2. (See [AERODYNAMIC UNDER COVER NO.2 REMOVAL/ INSTALLATION](#).)
 2. Remove in the order indicated in the table.
 3. Install in the reverse order of removal.
 4. If clutch system-related hydraulic parts are removed, supply clutch fluid, bleed air, and inspect for fluid leakage after the installation. (See [CLUTCH FLUID AIR BLEEDING/ REPLACEMENT \[G66M-R\]](#).)

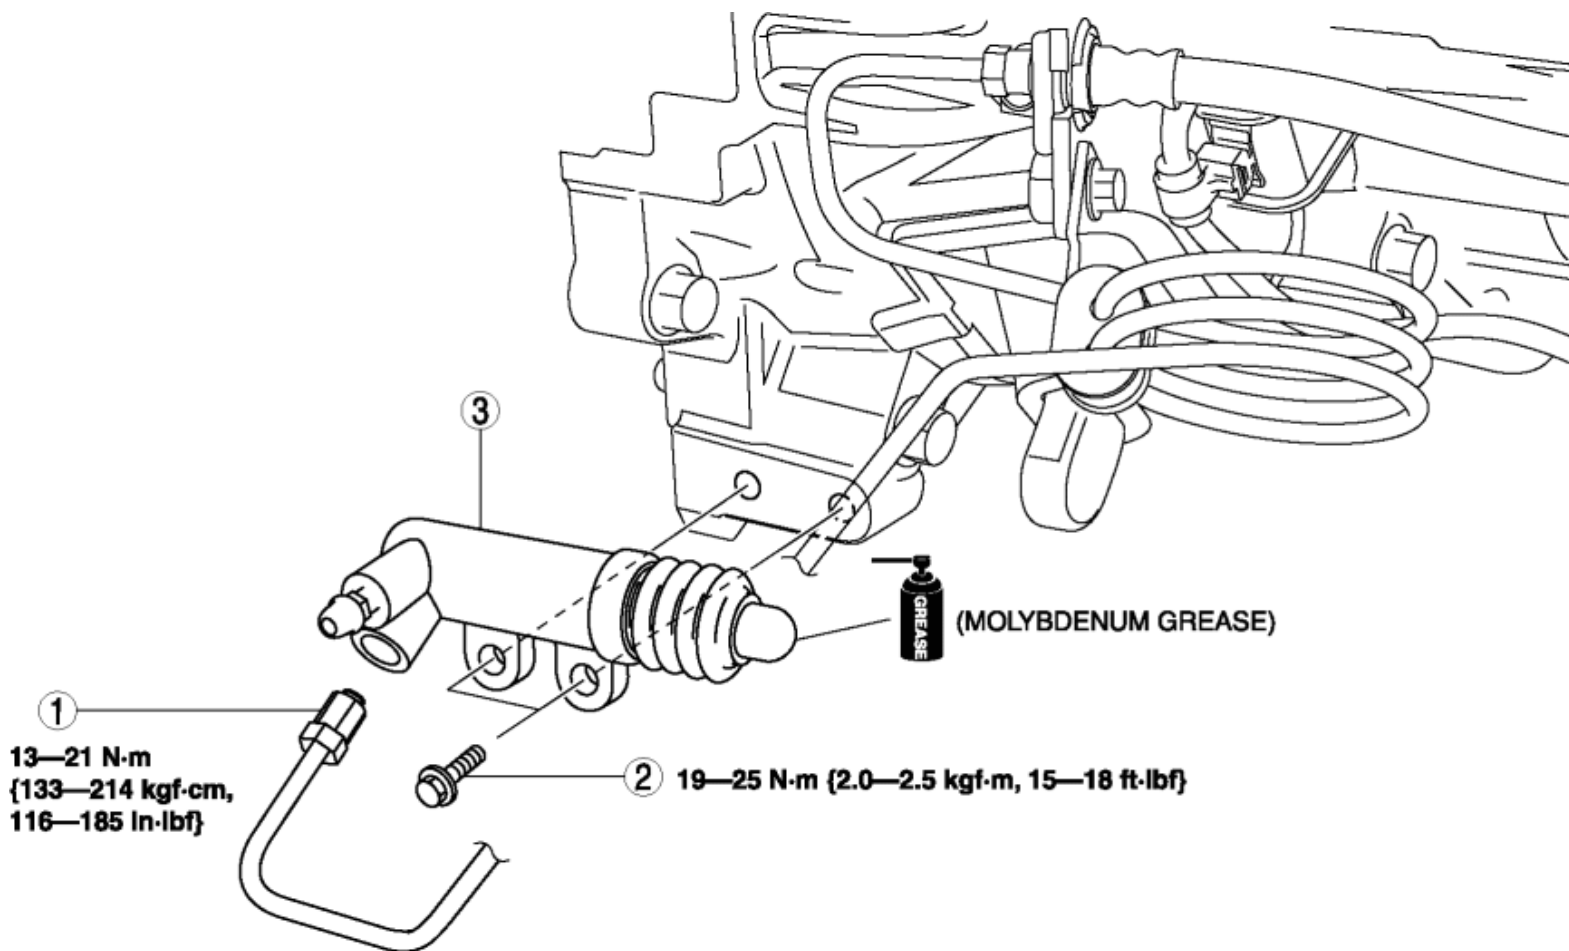

2	Bolt
3	Clutch release cylinder

[< Previous](#) [Next >](#)